
ROVER AUSTRALIA PARTS BOOK FOR AUSTRALIAN ARMY LAND ROVER 6x6 VEHICLES COMBINED PARTS LIST


Copyright of this document is retained by Land Rover Australia. The document dated 1996 contains the parts utilised on the vehicles at that point in time. Some parts may have been superseded or changed since that time.

This document has been download from the Registry of Ex Military Land Rovers at http://www.remlr.com. All files available from this site are free of charge.

If you have paid for this document please report where you purchased it from to the Registry of Ex Military Land Rovers Inc.

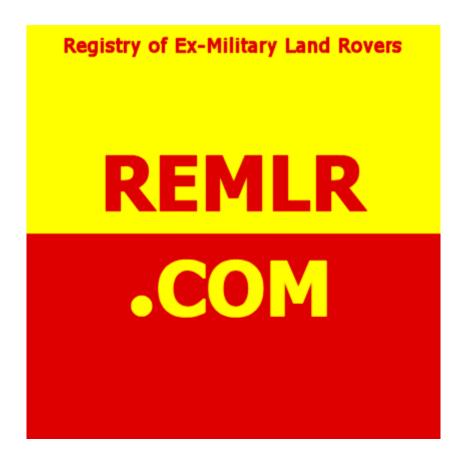

GROUP QB

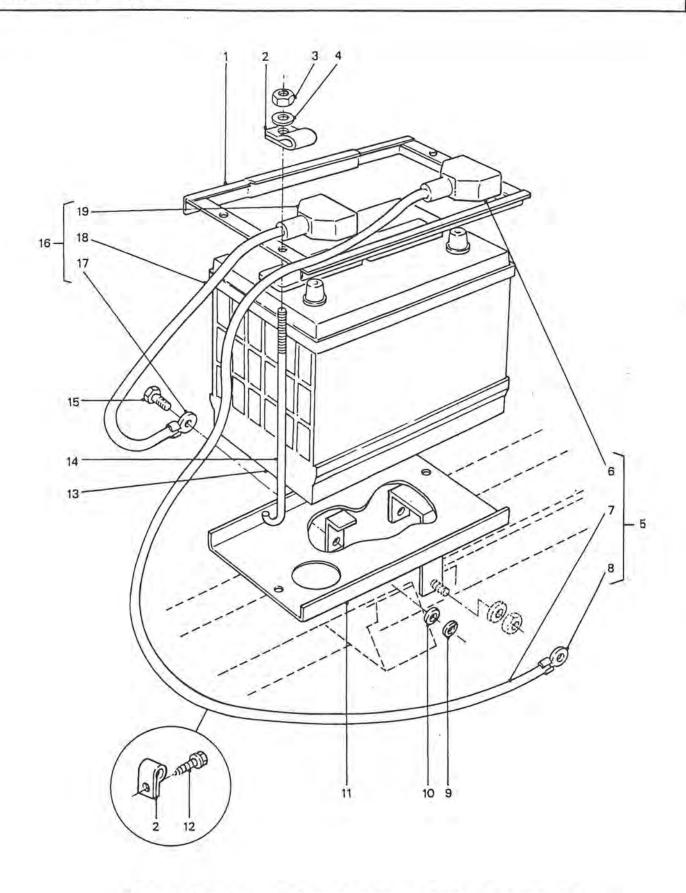


BATTERY, CARRIER AND CABLES

	QB /1/1	BATTERY, CARRIER AND	CABLES			DEDI	VATIV	E COD	=			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186					2212	2219	CP
1	AYG2916	CLAMP-BATTERY	6160-66-128-4928	1	1	1	1	1	1	1	t	
2	CP104121	'P' CLIP-CABLES	5340-66-128-5611	5	5	5	5	5	5	5	5	
3	NY106041L	NUT-NYLOC	5310-99-138-8423	2	2	2	2	2	2	2	2	
4	WC106041L	WASHER-PLAIN	5310-99-122-3411	2	2	2	2	2	2	2	2	
5	AYG9858	CABLE-BATTERY-POSITIVE	6140-66-128-4809	1	1	1	1	1	1	4	1	
6	NSS											
7	NSS											
8	NSS											
9	WL110001L	WASHER-LOCK	5310-99-138-9228	2	2	2	2	2	2	2	2	
10	WA110061L	WASHER-PLAIN	5310-99-122-6476	2	2	2	2	2	2	2	2	
11	BYG9075	CARRIER-BATTERY		1	1	1	1	1	1	1	1	
12	MYH3337	SCREW	5305-66-128-5341	4	4	4	4	4	4	. 4	4	
13	NSS		6140-66-090-1903									
14	STC307	J BOLT-BATTERY	5306-66-128-5244	2	2	2	2	2	2	2	2	
15	FS110301	SCREW	5305-66-098-4283	2	2	2	2	2	2	2	2	
16	AYG9715	CABLE-BATTERY-NEGATIVE	6140-66-128-4808	1	1	1	1	3	1	1	1	
17	NSS											
18	NSS											
19	NSS											

CHANGE POINT

ARN INTRODUCTION

GROUP QBA/1

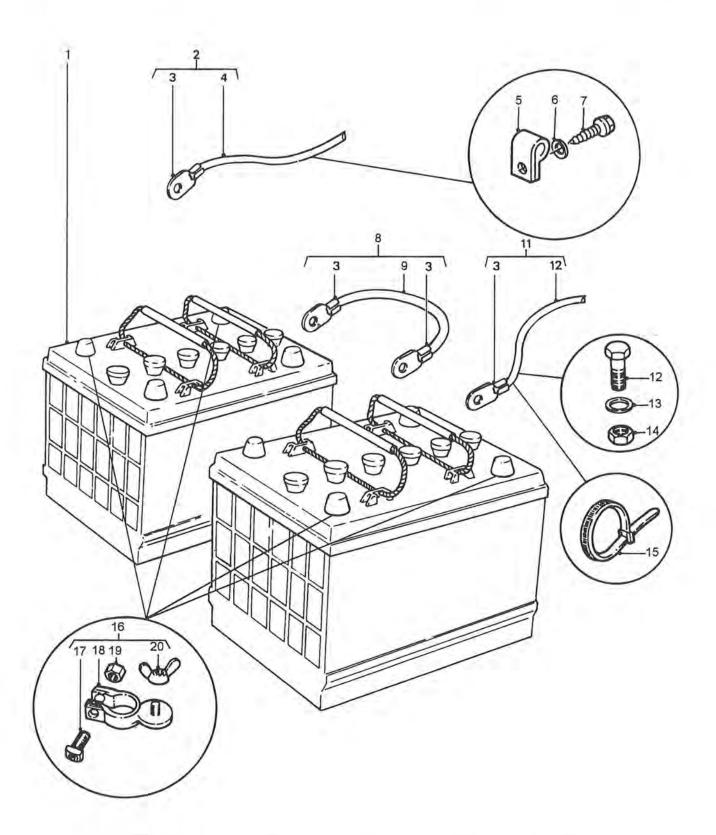

BATTERIES AND CABLES - MODULE - GMV & ERV ONLY


QBA /1/1 BATTERIES AND CABLES - MODULE - GMV & ERV ONLY

	GDA / II I	BATTEMIEG AND GABEEG	MODULE GMT	a Litt Oit	DERIVATI	VE CODE			
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186		2210 2211	2212	2219	CP
1	NSS								
2	BYG9030	CABLE-ALTERNATOR TO MODULE BATTERIES			1	1:			
3	NSS								
4	NSS								
5	MYH2697	CLIP-PIPE	5340-66-128-4546		3	3			
6	WC106041L	WASHER-PLAIN	5310-99-122-3411		3	3			
7	MYH3337	SCREW	5305-66-128-5341		2	2			
8	BYG9028	CABLE-LINK	6150-66-128-6027		1	1			
9	NSS								
10	BYG9029	CABLE-EARTH			1	1			
11	NSS								
12	BH110161L	BOLT	5306-99-788-9287		3	3			
13	WA110061L	WASHER-PLAIN	5310-99-122-6476		3	3			
14	NV110041L	NUT	5310-99-138-1473		3	3			
15	MYH1763	CABLE TIE	5975-12-199-8964		6	6			
16	BYG9027	TERMINAL-BATTERY			4	4			
17	NSS								
18	NSS								
19	NSS								
20/	NSS								
1	MYH5256/300	SPIREWRAP-ALT. CABLE TO EARTH CABLE - CHASSIS X/MEMBER			1	ť			

CHANGE POINT

ARN INTRODUCTION

GROUP QBA/2

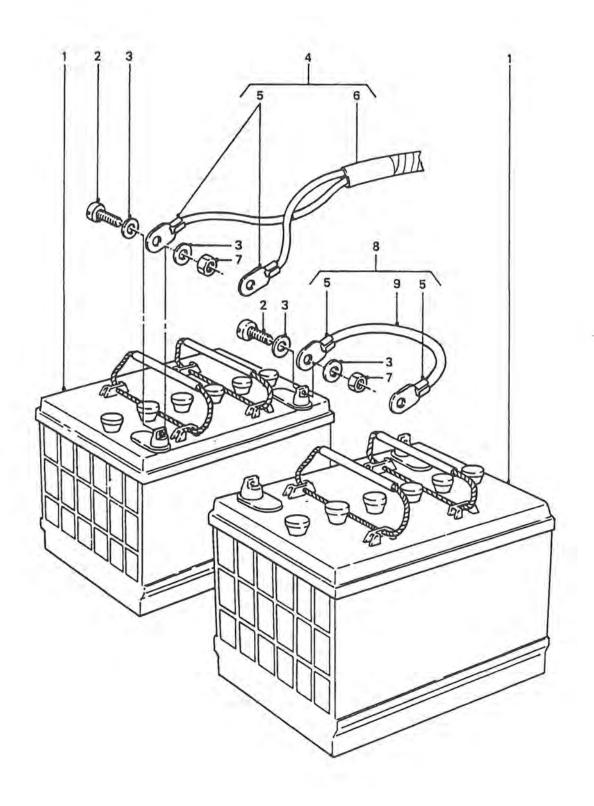


BATTERIES AND CABLES – FFR – AMBULANCE AND AIR DEFENCE ONLY

T	QBA /2/1	BATTERIES AND CABLE	S - FFR - AMBULAN	CE AND AIR DEFENCE	EONLY	
ITEM	PART NO.	DESCRIPTION	NSN		2210 2211 2212 2219 C	P
1	NSS					
2	SE106251L	SCREW	5305-99-135-0442	4	4	
3	WA106041L	WASHER-PLAIN	5310-66-098-4440	8	8	
4	AYG9966	CABLE-BATTERY TO DISTRIBUTION BOX	6140-66-128-5887	(1)	1	
5	NSS					
6	NSS					
7	NY106041L	NUT-NYLOC	5310-99-138-8423	4	4	
8	AYG9920	CABLE-LINK-RADIO BATTERIES	6140-66-128-5322	1	1	
9	NSS					
	MYH5256/600	SPIREWRAP-CABLES TO DIST.BOX-CHASSIS X/MEMBER		1		

CHANGE POINT

ARN INTRODUCTION

GROUP QBB/1

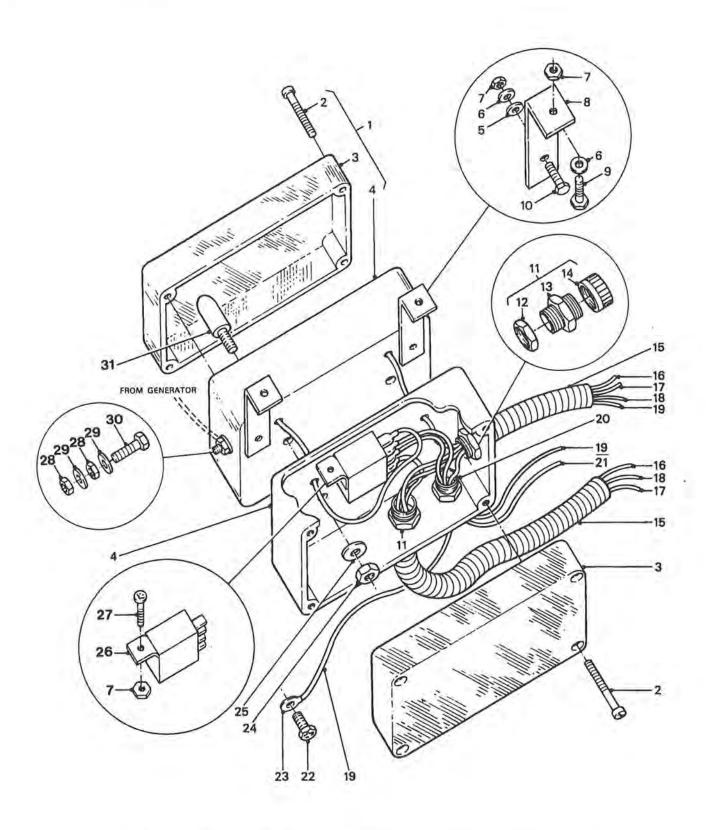


JUNCTION BOX AND JUMPER TERMINALS
- GMV ONLY

QBB /1/1 JUNCTION BOX AND JUMPER TERMINALS - GMV ONLY

	QBB /1/1	JUNCTION BOX AND JUM	PER TERMINALS -	GMV ONLY DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
1	HYM399	JUNCTION BOX		2
2	NSS			
3	NSS			
4	NSS			
5	HYM400	WASHER-FIBRE		2
6	WA106001L	WASHER-PLAIN		2
7	NY106041L	NUT-NYLOC	5310-99-138-8423	5
8	HYM401	BRACKET-MOUNTING		2
9	SH106301L	SCREW	5305-99-122-5363	2
10	SH106251L	SCREW	5305-99-122-5362	2
11	HYM116	GLAND ASSY		2
12	NSS			1
13	NSS			1
14	NSS			d.
15	HYM473	CONDUIT-20MM DIA-10M LONG (USE AS REQUIRED)		1
16	HYM474	CABLE-6MM DIA-30M LONG (USE AS REQUIRED) BLACK		2
17	NSS			2
18	HYM475	CABLE-6MM DIA-30M LONG (USE AS REQUIRED) RED		2
19	NSS			3
20	HYM118	GLAND ASSY		(I)
21	NSS			
22	HYM145	SCREW		1
23	HYM119	TERMINAL		3
24	NSS			
25	NSS			
26	HYM113	RELAY-12V-70A	5945-66-128-6028	


GROUP QBB/1

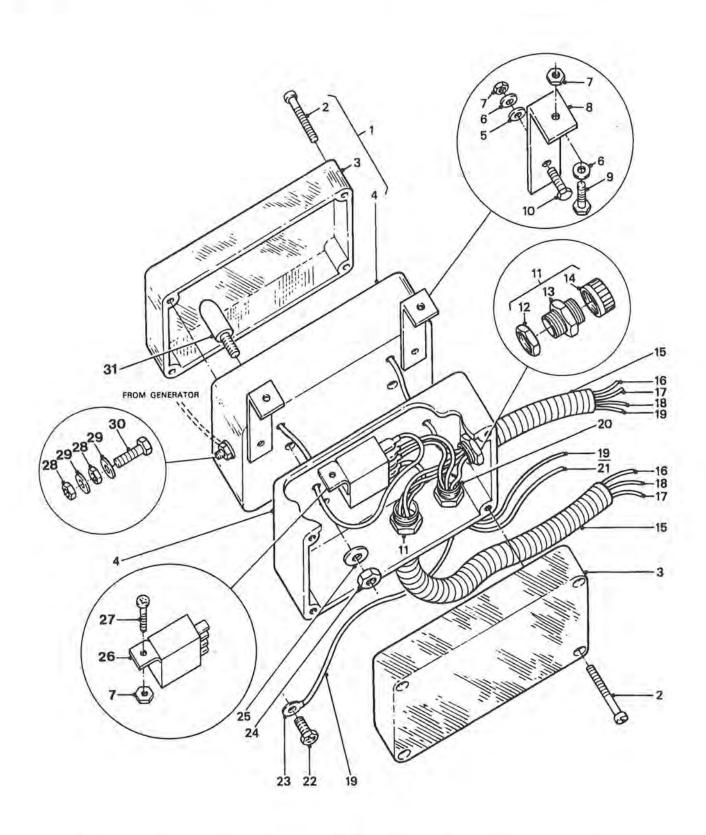

JUNCTION BOX AND JUMPER TERMINALS
- GMV ONLY

1	QBB /1/1	JUNCTION BOX AND JUMPE	ER TERMINALS -	GMV ONLY DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
27	SE106121L	SCREW	5305-99-122-5289	1
28	HYM120	NUT-BRASS		2
29	HYM121	WASHER-BRASS		4
30	HYM122	SCREW-BRASS		2
31	HYM402	TERMINAL		3
CHAN	GE POINT	ARN INTRODUCTION		

GROUP QBB/2

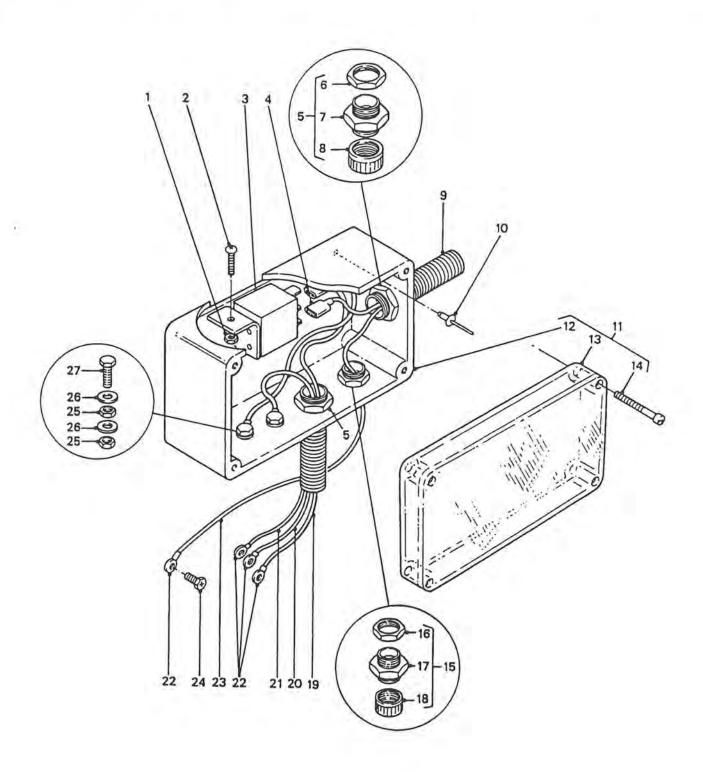


JUNCTION BOX - BATTERY TO 24 VOLT GENERATOR - ERV ONLY

QBB /2/1 JUNCTION BOX - BATTERY TO 24 VOLT GENERATOR - ERV ONLY

-	QBB /2/1	JUNCTION BOX - BATTER	RY TO 24 VOLT GEN	NERATOR - ERV ONLY DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
1	NY106041L	NUT-NYLOC	5310-99-138-8423	i ju
2	SE106121L	SCREW	5305-99-122-5289	1
3	HYM113	RELAY-12V-70A	5945-66-128-6028	10
4	HYM114	TERMINAL-6.3MM		2
4	HYM115	TERMINAL-9.5MM		2
5	HYM116	GLAND ASSY		2
6	NSS			
7	NSS			
8	NSS			
9	HYM473	CONDUIT-20MM DIA-10M LONG (USE AS REQUIRED)		H)
10	HYL9945	RIVET		Ž
11	HYM117	BOX-JUNCTION		i
12	NSS			
13	NSS			
14	NSS			
15	HYM118	GLAND ASSY		- 1:
16	NSS			
17	NSS			
18	NSS			
(5)	HYM475	CABLE-6MM DIA-30M LONG RED - USE AS REQUIRED		1.1
20	HYM474	CABLE-6MM DIA-30M LONG-BLACK(USE AS REQUIRED)		10
21	NSS			
22	HYM119	TERMINAL		3
23	HYM474/2000	CABLE		1
24	HYM145	SCREW		A'
25	HYM120	NUT-BRASS		2

GROUP QBB/2

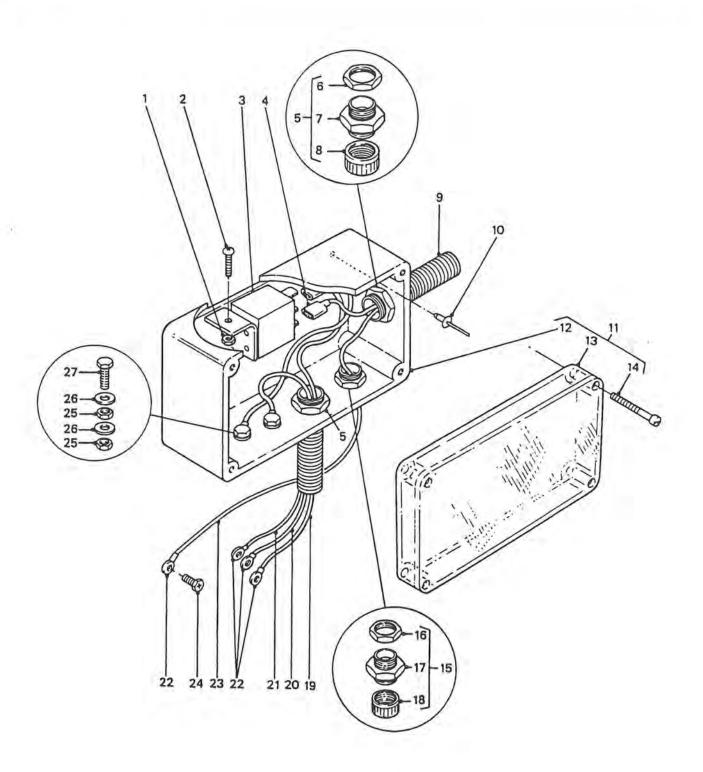

JUNCTION BOX - BATTERY TO 24 VOLT GENERATOR - ERV ONLY

11

QBB /2/1 JUNCTION BOX - BATTERY TO 24 VOLT GENERATOR - ERV ONLY
DERIVATIVE CODE

ITEM PART NO. DESCRIPTION

NSN 2185 2186 2208 2209 2210 2211 2212 2219 CP

27 HYM122 SCREW-BRASS 2


CHANGE POINT ARN INTRODUCTION

WASHER-BRASS

HYM121

26

GROUP QBC

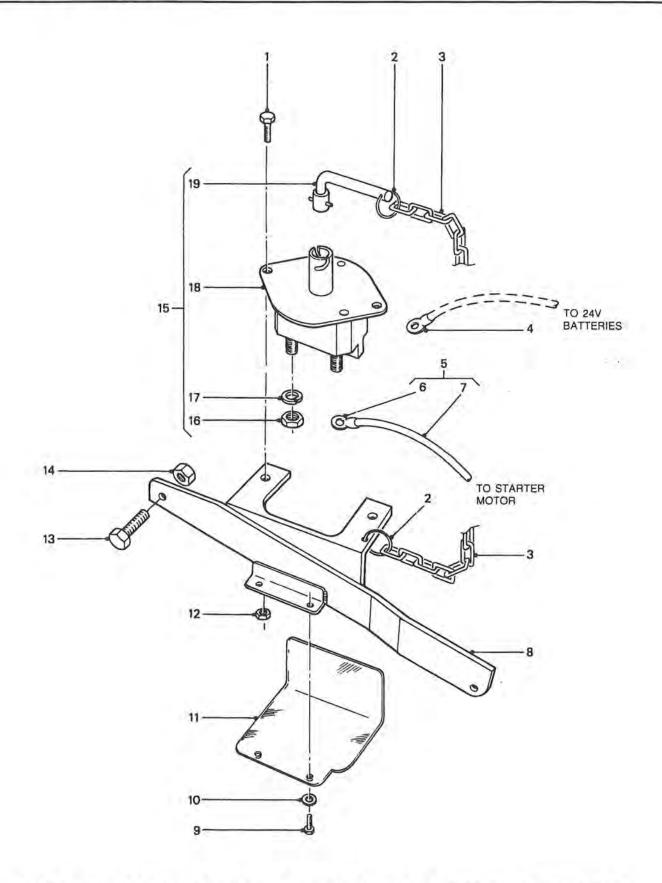

BATTERY ISOLATION SWITCH AND CABLES
- GMV ONLY


QBC /1/1 BATTERY ISOLATION SWITCH AND CABLES - GMV ONLY

ITEM	PART NO.	DESCRIPTION	<u>NSN</u>	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
1	FS108201	SCREW	5305-99-122-5366	2
2	HYM404	RING-KEY		2
3	HYM405	CHAIN-SWITCH LEVER		1
4	HYM406	LUG-CABLE		1.
5	HYM407	CABLE-BATTERY		1
6	HYM408	LUG-CABLE		1
	HYM409	LUG-CABLE		1
7	HYM407	CABLE-BATTERY		t
8	HYM411	BRACKET-SWITCH		1
9	SE106121L	SCREW	5305-99-122-5289	2
10	WM106001	WASHER-LOCK	5310-99-137-9232	2
11	HYM412	COVER-SWITCH		1 .
12	NY108001	NUT-NYLOC	5310-99-122-5496	2
13	SH110251L	SCREW	5305-99-122-4910	i)
14	NY110041L	NUT-NYLOC	5310-99-122-5497	-1
15	HYM413	SWITCH-ISOLATION (INCLUDES ITEMS 16-19)	5930-66-126-9691	1
16	NSS			
17	NSS			
18	NSS			
19	NSS			
-7/,	HYM410	CABLE ASSY-ISOLATION SWITCH TO 24V GENERATOR		1

CHANGE POINT

ARN INTRODUCTION


GROUP QC/1

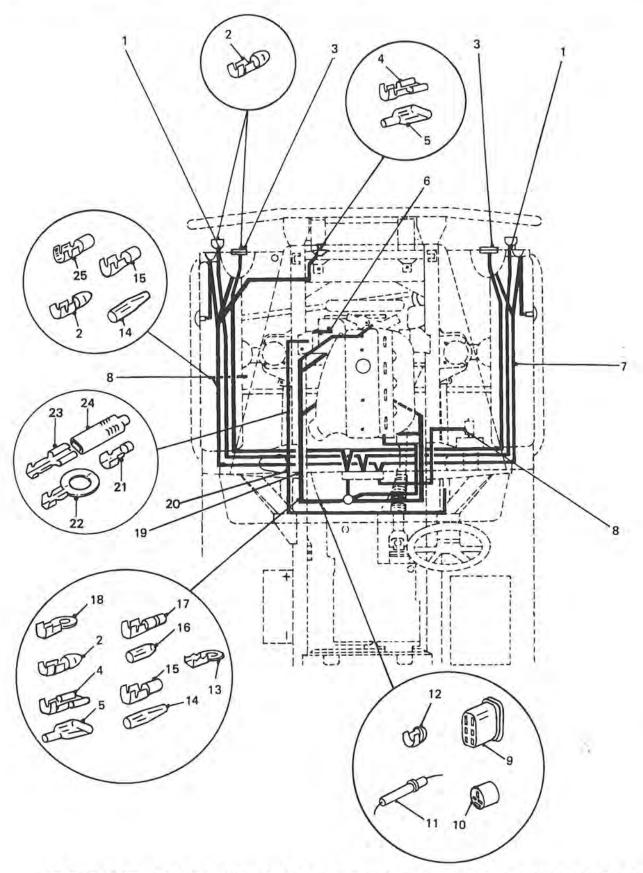

FRONT WIRING HARNESSES AND FITTINGS
- EXCEPT LRPV

(QC /1/1	FRONT WIRING HARNESS	ES AND FITTINGS	- EXC	EPT	LRPV				
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186			2210	: 2211_2212	2219 CP
1	AYG9762	HARNESS-FRONT MARKER LAMPS		1	1	1	1	1	1	1
2	MYH2565	TERMINAL	5940-66-128-4737	7	7	7	7	7	7	7
3	AYG9741	CABLE-BLACKOUT LIGHT EXTENSION-FRONT		2	2	2	2	2	2	2
4	NSS									
5	NSS									
6	AYG9597	LEAD-ENGINE EARTH	5999-66-128-4899	1	1	1	1	1	1	1
7		MAIN HARNESS (REFER GROUP QH)								
8	AYG9700	HARNESS-BRAKE PAD INDICATOR		1	1	1	1	1	1	4)
9	NSS									
10	NSS									
11	NSS									
12	NSS									
13	NSS									
14	NSS									
15	NSS									
16	NSS									
17 /	NSS									
18	NSS									
19	AYG9849	HARNESS-ENGINE (70 AMP ALT.)		1	1	1	1	1	1.	
	BYG9114	HARNESS-ENGINE (70 AMP		1	1	1	1	1	1	1 01
		ALT.)								
20	NSS									
20	BYG9031	HARNESS-24V/55A ALTERNATOR TO WARNING LIGHT MODULE & VOLTMETER					Ť.	i		

GROUP QC/1

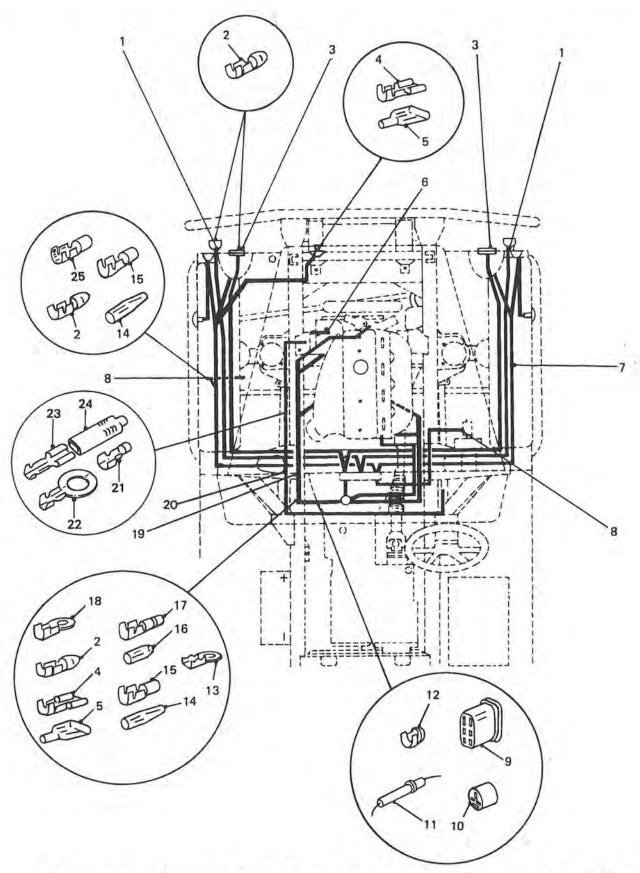

FRONT WIRING HARNESSES AND FITTINGS
- EXCEPT LRPV


-7	QC /1/1	FRONT WIRING HARNESSI	ES AND FITTINGS	- EXC	EPT	LRPV	VATIV	E COL)E		
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186					2212	2219 CP
21	MYH2565	TERMINAL	5940-66-128-4737				2	2			
22	NSS										
23	NSS										
24	NSS										
25	NSS										
	WL105001L	WASHER-LOCK-ENGINE HARNESS CHARGE WIRE TO ALTERNATOR	5310-99-977-1102	1	1	1	1	1		t	t
	NH105041L	NUT	5310-66-098-4400	1	1	1	1	1		1	1
(C39377/1	STRAP-CABLE-ENGINE HARNESS		3	3	3	3	3		3	3
	AB608047	SCREW-CABLE STRAP		1	ă,	1	1	1		1	1
	WC105001L	WASHER-PLAIN	5310-99-122-3032	1	1	1	1	1		. 1	1.
	SH106121L	SCREW-SIDE & H/LAMP EARTH WIRES TO WHEEL ARCH	5305-99-122-5359	2	2	2	2	2		2	2
	WL106001L	WASHER-LOCK	5310-99-137-9232	2	2	2	2	2		2	2
	NH106041L	NUT	5310-66-098-4401	2	2	2	2	2		2	2

CHANGE POINT

ARN INTRODUCTION

50-842 MAINTENANCE ELECTRONIC REPAIR-BLADE TYPE FUSES

GROUP QC/2

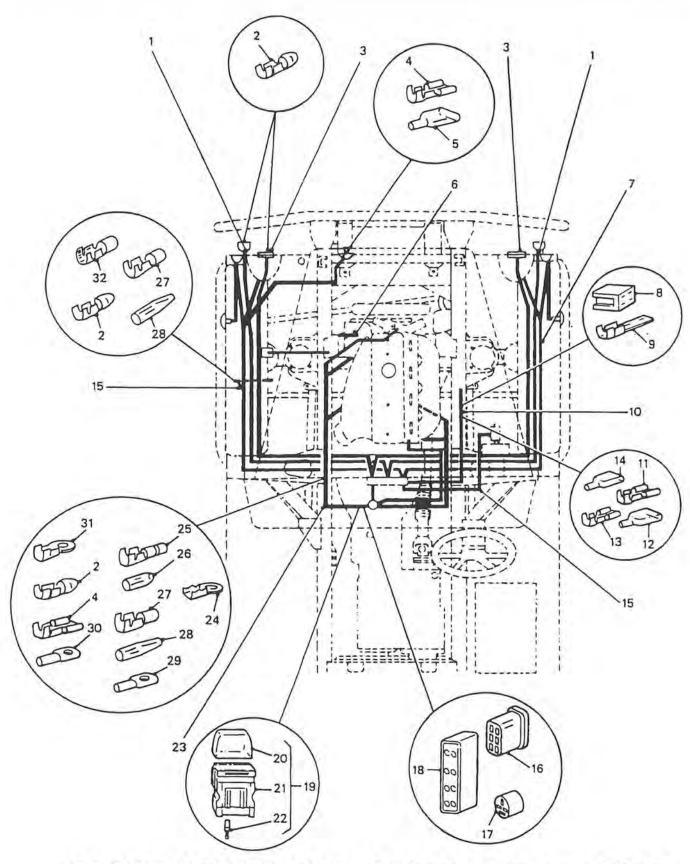


FRONT WIRING HARNESSES AND FITTINGS
- LRPV ONLY

QC /2/1 FRONT WIRING HARNESSES AND FITTINGS - LRPV ONLY DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP ITEM PART NO. DESCRIPTION NSN AYG9762 HARNESS-FRONT MARKER 1 1 LAMPS 2 **TERMINAL** 5940-66-128-4737 15 MYH2565 CABLE-BLACKOUT LIGHT 2 3 AYG9741 **EXTENSION-FRONT** 4 NSS 5 NSS AYG9597 LEAD-ENGINE EARTH 5999-66-128-4899 6 1 BYG9059 HARNESS-MAIN-LRPV 7 1 ISS 8 NSS 9 HARNESS-SPEED SENSOR BYG9094 1 10 TO TRIPMETER GROMMET-TRIPMETER MYH3599 1 HARNESS THRO' FACIA MOULDING NSS 11 12 NSS NSS 13 NSS 14 HARNESS-BRAKE PAD 15 AYG9700 1 INDICATOR 16 NSS AYG9947 17 CONNECTOR-70AMP 1 **ALTERNATOR** NSS 18 BYG9073 **FUSEBOX-BLADE TYPE** 19 1 NSS 20 21 NSS

22

NSS

GROUP QC/2

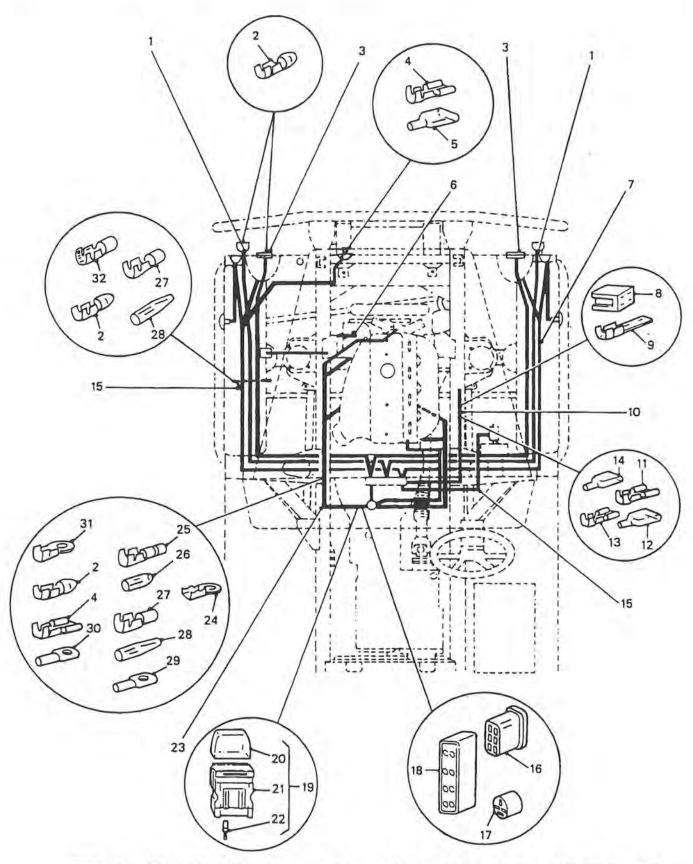


FRONT WIRING HARNESSES AND FITTINGS
- LRPV ONLY

QC /2/1 FRONT WIRING HARNESSES AND FITTINGS - LRPV ONLY DERIVATIVE CODE ITEM PART NO. DESCRIPTION NSN 2185 2186 2208 2209 2210 2211 2212 2219 CP BYG9114 HARNESS-ENGINE (70 AMP 1 23 ALT.) WL105001L WASHER-LOCK-CHARGE 5310-99-977-1102 1 WIRE TO ALTERNATOR NH105041L NUT 5310-66-098-4400 STRAP-CABLE-ENGINE 3 C39377/1 HARNESS AB608047 SCREW-CABLE STRAP 1 WC105001L WASHER-PLAIN 5310-99-122-3032 1 '24 ISS NSS 25 26 NSS NSS 27 28 NSS 29 NSS 30 NSS 31 NSS 32 NSS 2 SH106121L SCREW-SIDE & H/LAMP 5305-99-122-5359 **EARTH WIRES TO** WHEELARCH 'VL106001L WASHER-LOCK 5310-99-137-9232 2 NH106041L NUT 5310-66-098-4401 2 MYH1763 CABLE TIE-ELECTRICAL 5975-12-199-8964

CHANGE POINT ARN INTRODUCTION

COMPONENTS

GROUP QD/1 SHEET 1

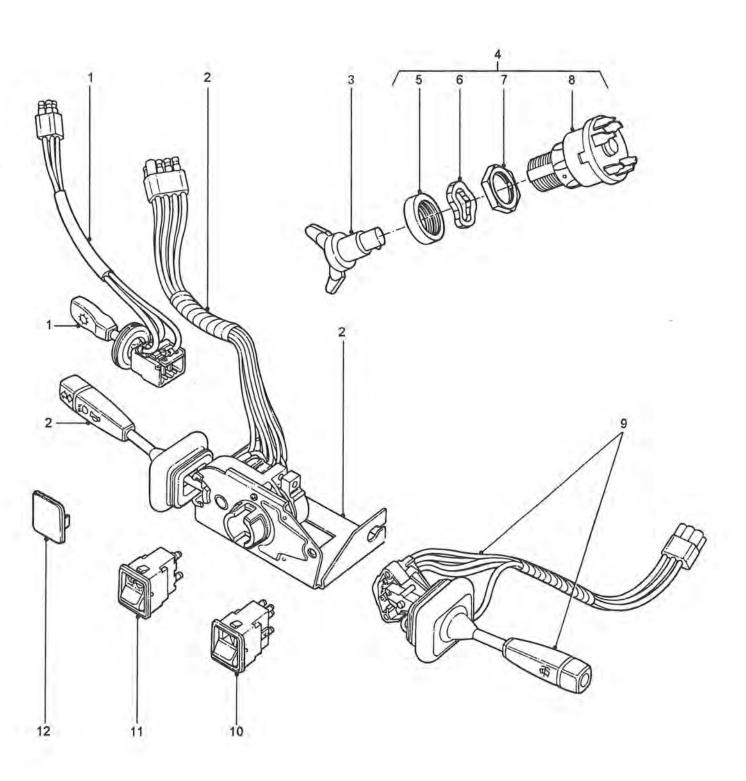


SWITCHES - CAB INTERIOR

100	QD /1/1	SWITCHES - CAB INTERIOR				DEDI	VATIV	E 001				
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186	2208				2212	221	9 CP
1	PRC3430	SWITCH-LIGHT	5930-99-797-8641	1	1	1	1	1	ì	1	1	
2	PRC3875	SWITCH-INDICATOR, HORN & DIP	5930-99-797-8640	1	1	1	1	1	1			
	STC439	SWITCH-INDICATOR, HORN	5930-66-135-1416	1	1	1	1	1	1	1	1	01
		& DIP										
3	RRC4774	KNOB-IGNITION SWITCH	5355-66-128-4953	1	1	1:	1	1	1	1	1	
4	PRC2734	SWITCH-STARTER (INCLUDES ITEMS 5-8)	5930-99-797-8638	1	1	đ	Ţ	1	1	1	1	
5	NSS											
6	NSS											
7	NSS											
8	NSS											
9	PRC3900	SWITCH-WASH/WIPE	5930-99-797-8639	1.	1	1	1	3	1			
	PRC7370	SWITCH-WASH/WIPE &	5930-66-135-1417	1	t	1	1	1	1	1	1	01
		DELAY										
10	RRC4865	SWITCH-INTERIOR LIGHT	5930-66-128-4739	1	1	1	1	1		1	1	
11	ASU1009	SWITCH-HAZARD	5930-99-768-4885	1	1	1	1	1	1	1	1	
12	AAM222	PLUG-BLANKING-SWITCH APETURES							2			

CH. JE POINT ARN INTRODUCTION

51 - 870 AIR DEFENCE - RAPIER


GROUP QD/1 SHEET 2

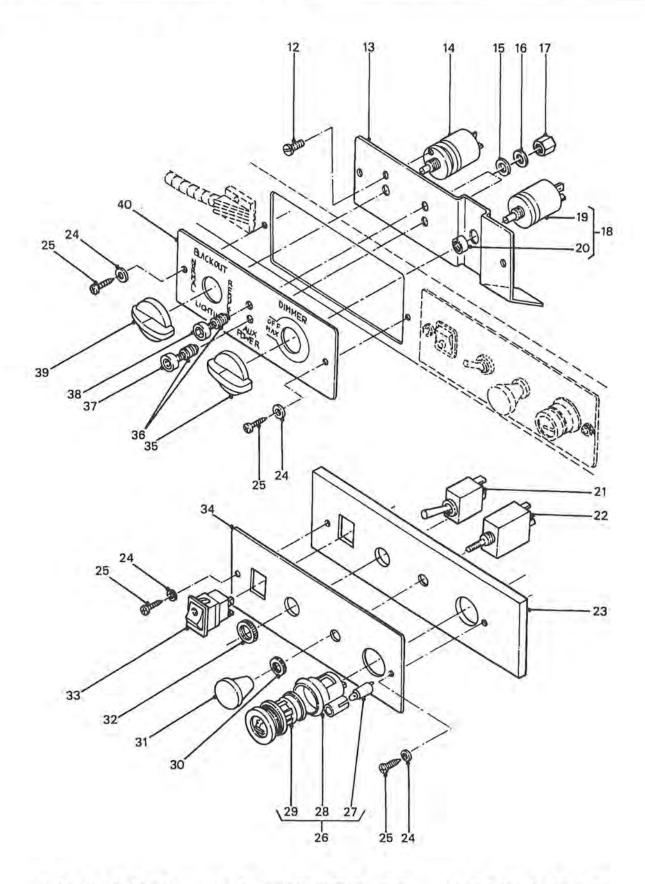

SWITCHES - CAB INTERIOR - CONTINUED

	QD /1/2	SWITCHES - CAB INTERIO	R - CONTINUED			S. Cataon	استاحات					
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186			2210	2211	2212	2219	CP
12	HYL8920	SCREW-SWITCH		2	2	2	2	2	2	2	2	
13	HYG2878	PLATE-SWITCH MOUNTING		1	1	1	1	1		4		
	HYG5958	PLATE-SWITCH MOUNTING		1	1	1	1	1		1	1	02
14	AYG9574	SWITCH-BLACKOUT - 3 fontille	5930-66-128-4740	1	1	1	1	1		1.	1	
	BYG9052	SWITCH-BLACKOUT-LRPV - 4 ONLY	JOJETION .						1			
15	MYH3548	O RING-TERMINAL TO DASH		2	2	2	2	2	2	2	2	
16	WF507L	WASHER-TERMINAL TO DASH		2	2	2	2	2	2	2	2	
17	PRC2087	NUT-NYLON-TERMINAL TO DASH		2	2	2	2	2	2 ·	2	2	
18	BYG9330	KIT-DIMMER SWITCH-COMPRISES FOLLOWING ITEMS		1	4	t	1	1	1	1	1	
	BYG9269	SWITCH-DIMMER	5905-12-185-4643	1	ra r	1	1	1	1	1	4	
	BYG9270	KNOB-SWITCH	5355-12-178-0087	1	1	1	1	1	1	1	1	
	BYG9271	NUT-SWITCH		1	1	1	1	1	1	1	1	
	HYG6138	SPACER-SWITCH		1	1	1	1	1	1	1	1	
19	BYG9269	SWITCH-DIMMER	5905-12-185-4643	1	1	1	1	1	1	1	1	
20	BYG9271	NUT-SWITCH		1	1	1	1	1	1	1	1	
21	AYG9682	SWITCH-FUEL CHANGE OVER	5930-66-128-5613	1	1	1	1	1		t	1	
	AYG9704	SWITCH-FUEL CHANGE OVER-LRPV ONLY	5930-66-128-6234						ì			
22	BYG2049	VALVE-VACUUM CONTROL	4820-66-128-4493	1	Fiji	1	1	1	1	1	1	
23	HYG2944	PLATE-REINFORCEMENT		1	1	1	1	1	1	1	1	
24	WL105004	WASHER-LOCK	5310-66-128-5784	4	4	4	4	4	4	4	4	
25	SP105164	SCREW		4	4	4	4	4	4	4	4	

GROUP QD/1 SHEET 2

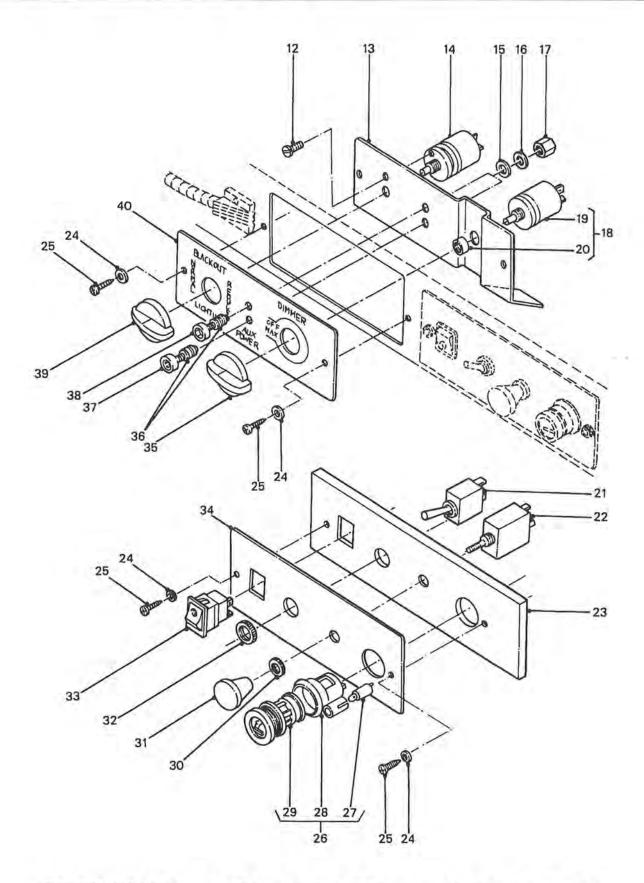

SWITCHES - CAB INTERIOR - CONTINUED


- (QD /1/2	SWITCHES - CAB INTERIO	DR - CONTINUED			DEBI	VATIV	E COI)F		
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186					2212	2219 CP
26	PRC9410	LIGHTER-CIGAR		1	1	1	1	1	1	1	Ť
27	RTC3635	GLOBE	6240-99-995-4499	1	1	1	1	1	1	1	1
28	NSS										
29	NSS										
30	HYG2134	NUT-RING	5310-66-128-4548	1	1	1	1	1	1	Ť	1
31	HYL8708	KNOB-VACUUM CONTROL VALVE	5355-66-128-4547	1	1	3	1	i	1	1	1
32	NSS										
33	AYG9955	SWITCH-HEATER FAN	5930-66-128-5614	1	1	1	1	1		1	1
34	HYG2859	PLATE-SWITCHES	9905-66-128-5825	1	1	1	1	1		1	1
1	HYG5705	PLATE-SWITCHES-LRPV ONLY	9905-66-128-6342						1		
35	BYG9270	KNOB-SWITCH	5355-12-178-0087	1	1	1	1	ij.	i.	1	1
36	PRC2078	SOCKET-INSPECTION	5935-99-797-3844	2	2	2	2	2	2	2	2
37	PRC2080	BUSH-INSULATION-BLACK		1	1	1	1	1	1	1	1
38	PRC2079	BUSH-INSULATION-RED		1	1	Ť.	1	1	i	1	1
39	HYL8669	KNOB-BLACKOUT SWITCH	5355-66-128-4956	1.	1	1	i.	1	1	1	1
40	HYG3294	PLATE-SWITCHES	9905-66-128-5824	1	1	1	1	1		4	7
	HYG4061	PLATE-SWITCHES-LRPV ONLY	9905-66-128-6341						Ť		

51 - 870 AIR DEFENCE - RAPIER

ARN INTRODUCTION

GE POINT


GROUP QF

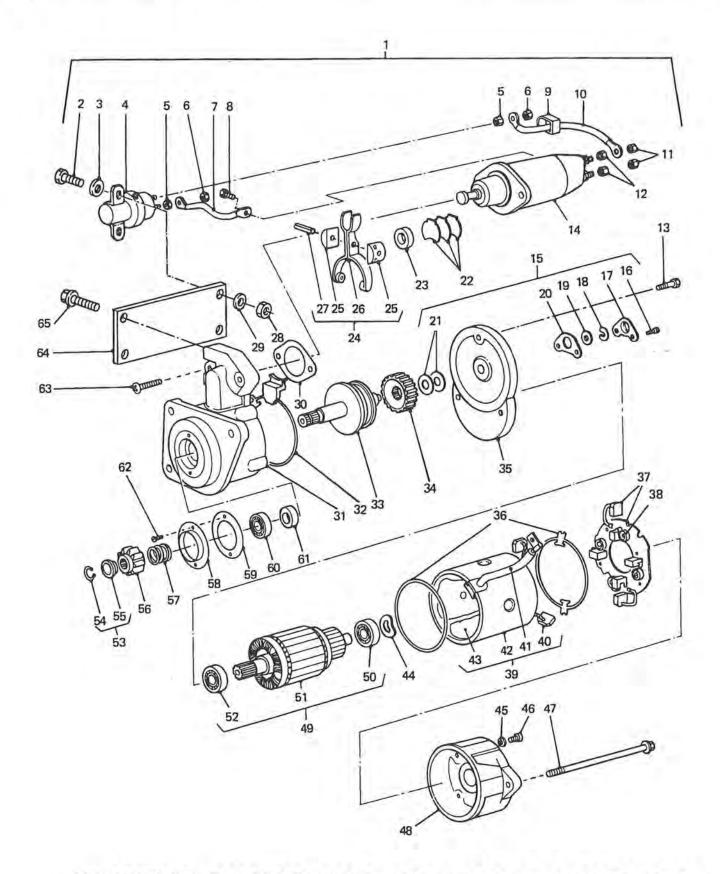

STARTER MOTOR AND SOLENOID ASSEMBLY

1	QF /1/1	STARTER MOTOR AND SOLENOID ASSEMBLY DERIVATIVE CODE										
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186					2212	2219	CF
1	8944634730	STARTER MOTOR	2920-66-128-4625	1	1	1	1	1	1	1	1	
2	FS106161	SCREW	5305-99-122-5360	2	2	2	2	2	2	2	2	
3	WA106041L	WASHER-PLAIN	5310-66-098-4440	2	2	2	2	2	2	2	2	
4	8944757020	RELAY	5945-66-128-4626	1	1	1	.1	1	1	1	1	
5	NH106041L	NUT	5310-66-098-4401	2	2	2	2	2	2	2	2	
6	NY106041L	NUT-NYLOC	5310-99-138-8423	2	2	2	2	2	2	2	2	
7	NSS											
8	NSS											
9	NSS											
10	NSS											
11	NY108041L	NUT-NYLOC	5310-99-122-5496	2	2	2	2	2	2	2	2	
12	FN108041	NUT	5310-99-499-8033	2	2	2	2	2	2.	2	2	
13	NSS											
14	8944756970	RELAY-SOLENOID	2920-66-128-4627	1	1	1	1	1	1	1	1	
15	8944756890	PARTS KIT-STARTER	2920-66-128-4628	1	1	1	1	1	1	1	1	
16	NSS											
17	NSS											
18	NSS											
19	NSS											
20	NSS											
21	NSS											
22	NSS											
23	NSS											
24	8944756960	LEVER ASSY (INCLUDES ITEMS 25-27)		1	1	1	1	1	4	1	1	
25	NSS											
26	NSS											
27	NSS											
28	NH106041L	NUT	5310-66-098-4401	2	2	2	2	2	2	2	2	


GROUP QF

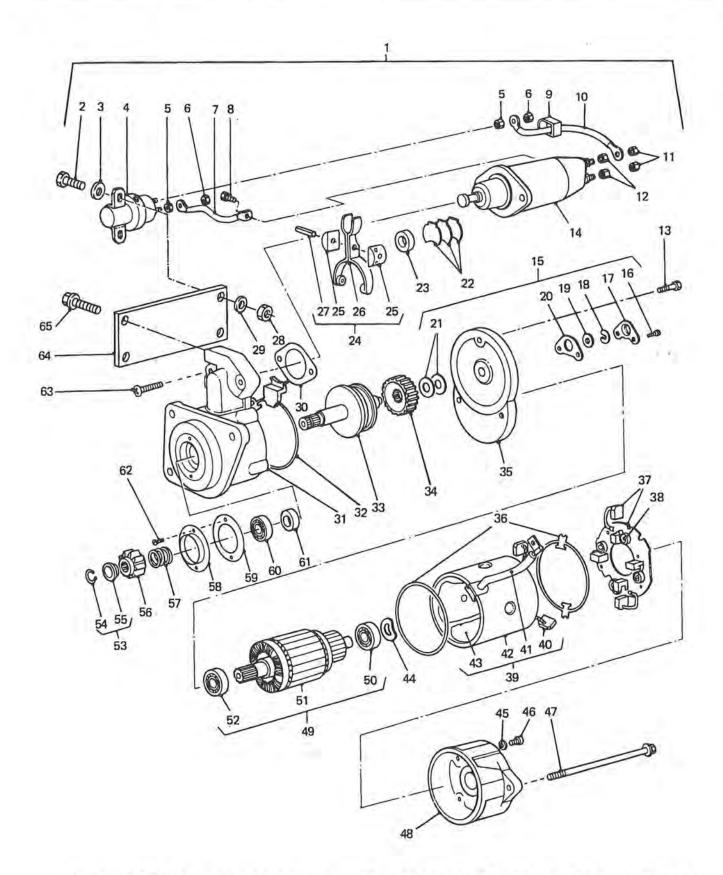

STARTER MOTOR AND SOLENOID ASSEMBLY

6	QF /1/1	STARTER MOTOR AND SOLENOID ASSEMBLY DERIVATIVE CODE									
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186					2212	2219 CF
29	WL106001L	WASHER-LOCK	5310-99-137-9232	2	2	2	2	2	2	2	2
30	NSS										
31	8970387360	HOUSING		1	1	1	1	1	1	1	1
32	8970387380	SEAL		1	1	1	1	1	1	1	1
33	8944756860	CLUTCH ASSY		1	1	1	1	1	1	1	10
34	8944756870	GEAR-CLUTCH		1	1	1	1	1	1	1	1
35	8970387370	COVER		1	1	1	1	1	1	1	Hit
36	8944756990	GASKET SET	5330-66-128-4559	2	2	2	2	2	2	2	2
37	8944756910	HOLDER-BRUSHES	5977-66-128-4811	1	4	Ť	1	1	1	4	1
38	8944756920	SPRING-BRUSH		4	4	4	4	4	4	4	4
39	8944756900	HOUSING ASSY	2920-66-128-4639	1	1	1	1	1	1	1	4
40	NSS										
41	NSS								- *		
42	NSS										
43	NSS										
44	SP1956	WASHER		1	1	1	1	1	1	1	1
45	8944757000	WASHER-RUBBER		4	4	4	4	4	4	4	4
46	NSS										
47	8944756980	SCREW		2	2	2	2	2	2	2	2
48	8944756930	COVER-END		1	t	1	1	1	1	1	1
49	8944756830	ARMATURE (INCLUDES ITEMS 50-52)	2920-66-128-4640	1	1	1	J.	1	1	1	1
50	8944756850	BEARING-BALL-REAR	3110-66-128-4641	1	1	1	1	1	1	1	1
51	NSS										
52	8944756840	BEARING-BALL-FRONT	3110-66-128-4642	1	1	1	1	1	1	1	t
53	8944756880	COLLAR ASSY (INCLUDES ITEMS 54 AND 55)	2920-66-128-4644	1	1	1	1	1	1	1	1
54	NSS										
55	NSS										
56	NSS										

GROUP QF

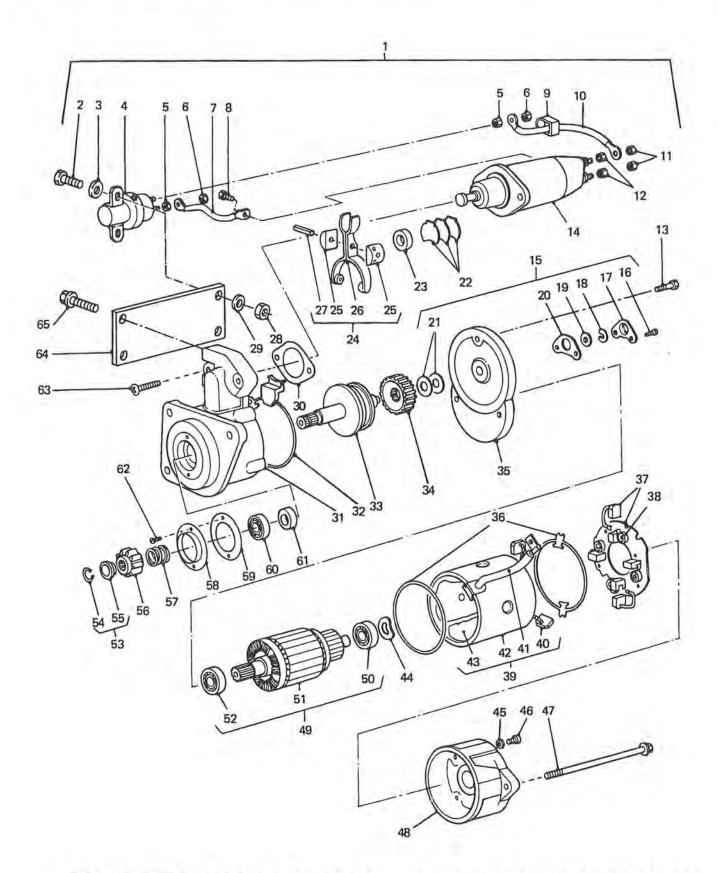


STARTER MOTOR AND SOLENOID ASSEMBLY

0	QF /1/1	STARTER MOTOR AND SO	LENOID ASSEMBI	LY		DEDI	VATIV	E COL			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186					2212	2219 CP
57	8970387350	SPRING		1	1	1	1	1	1	1	4
58	8944756950	COVER		1	1	1	1	1	1	1	1
59	8944756940	PLATE		1	1	1	1	1	1	1	j
60	6204V144	BEARING AND BUSH ASSY (INCLUDES BUSH MYH3697)	3110-66-128-4646	1	1	1	1	1	1	1	1
61	PR3290	SEAL-STARTER	5330-66-128-5928	1	1	i	1	1	14	1	1
62	NSS										
63	NSS										
64	AYG458	BRACKET-RELAY MOUNTING		1	1	1	1	1	Ť	1	1
6	NSS	USE 8944757010 SCREW SET									
	8944757010	SET-SCREWS (INCLUDES ITEMS 8, 13, 46, 62, 63, 65)	5305-66-128-4561	1	1	t	1	1	1.	1	1

CHANGE POINT


GROUP QG/1 SHEET 1

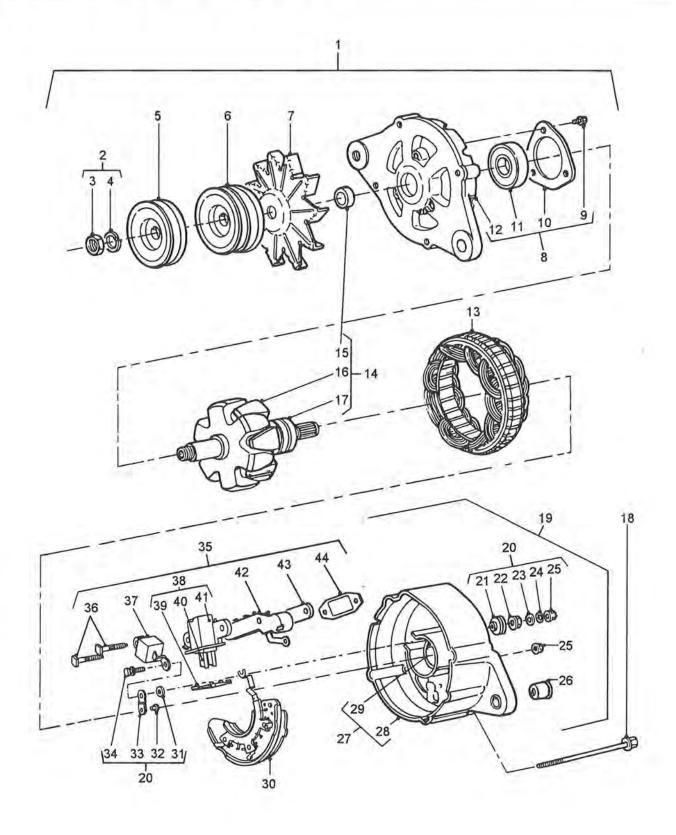

ALTERNATOR - 12 VOLT, 70 AMP AND VACUUM PUMP ASSEMBLY

1	QG /1/1	ALTERNATOR - 12 VOLT,	70 AMP AND VACU	UM P	UMP	ASSE	MBL	Y				
ITEM	PART NO.	DESCRIPTION	<u>NSN</u>	2185	2186			2210		2212	2219 0	CP
1	8941754481	ALTERNATOR-12V AND VACUUM PUMP ASSY.	2920-66-128-4658	1	1	1	ĵ	1	1	1	1	
2	8941566010	NUT-PULLEY (INCLUDES ITEMS 3 AND 4)	5310-66-128-4560	1	1	1.	1	1	1	1	1	
3	NSS											
4	NSS											
5	8944103980	PULLEY-SINGLE GROOVE-12V, 70A ALT.	3020-66-128-4659	1	1	1		1				
6 (MYH3508	PULLEY-TWIN GROOVE-12V, 70A ALT. & TYRE PUMP COMP.	3020-66-128-5956				1		1	1	1	
7	8944150150	FAN-ALTERNATOR	2920-66-128-5957	1	1	t	1	1	1	1	3	
8	8941164330	COVER & BEARING ASSY-FRONT	2920-66-128-4662	1	1	1	1	1	1	1	11	
9	NSS											
10	8942239740	RETAINER-BEARING		.1	1	1	1	1	1.	1	4	
11	8942239790	BEARING-FRONT	3110-66-128-4666	1	1	1	1	1	1	1	1	
12	NSS											
13	8944103940	STATOR	2920-66-128-4673	i	1	1	1	1	1	1	1	
14	8944103930	ROTOR & REAR BEARING ASSY	6115-66-128-4675	1	1	1	1	1	1	1	1	
15	.4SS											
16	NSS											
17	8941211780	BEARING-REAR	3110-66-128-4678	1	1	1	1	1	1	1	1	
18	8941164350	BOLT-THROUGH		4	4	4	4	4	4	4	4	
19	8943810200	COVER ASSY-COMPLETE-REAR	2920-66-128-4689	1	ì	Ť	1	1	1	तं	1	
20	8941565970	TERMINAL BOLT ASSY	2920-66-128-4963	1	1	1	1	1	1	1	1	
21	NSS											
22	NSS											

GROUP QG/1 SHEET 1

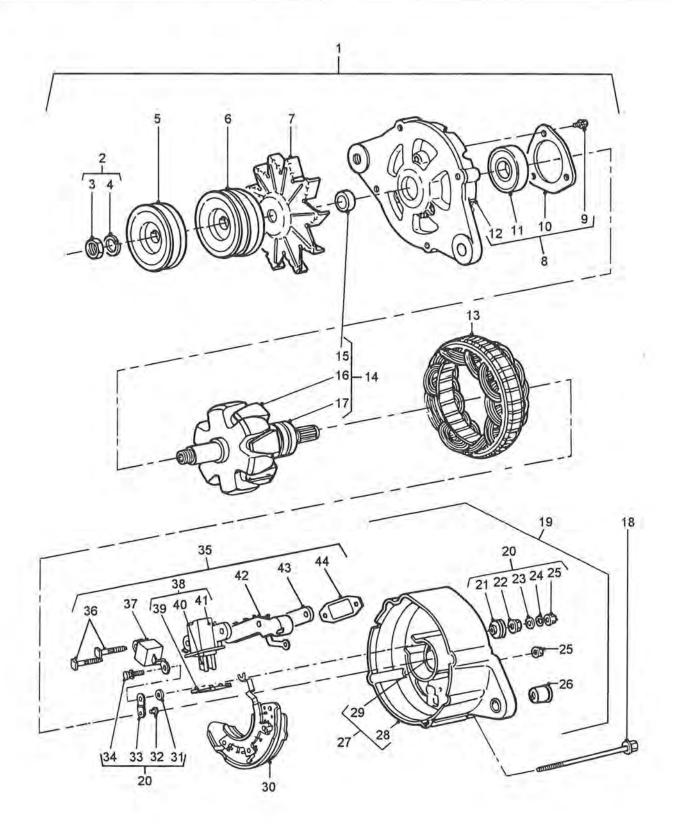


ALTERNATOR - 12 VOLT, 70 AMP AND VACUUM PUMP ASSEMBLY

	QG /1/1	ALTERNATOR - 12 VOLT, 7	O AMP AND VACU	UM P	UMP	ASSE	MBL	Y			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186			E COI 2210		2212	2219 CP
23	NSS										
24	NSS										
25	NSS	PART OF SCREW KIT 8941566030									
26	NSS										
27	8944103960	COVER ASSY-REAR		7	1	1	1	1	4	1	1
28	NSS										
29	8941565890	SEAL-OIL	5330-66-128-4562	1.	1	1	1	1	1	1	1:
30	8944103970	RECTIFIER ASSY	5961-66-128-4929	1	1	4	1	1	1	1	1
31	VSS										
32	8941565980	RIVET		1	1	1	1	1	1	1	1
33	NSS										
34	NSS										
35	8941674100	REGULATOR AND BRUSH ASSY		j	1	1	1	1	1	1	1
36	NSS	PART OF SCREW KIT 8941566030									
37	8941565940	CONDENSER	5910-66-128-5958	1	1	1	1	1	1	İ	1
38	8941565920	BRUSH HOLDER ASSY	5977-66-128-4813	1	1	1	1	1	1	1	्ते:
39	NSS										
40	8941565930	BRUSH		2	2	2	2	2	2	2	2
41	ISS										
42	8942377270	DIODE		1	1	1	1	1	1	1	1
43	8941565910	TERMINAL BLOCK	5961-66-128-4930	1	1	1	1	1	1	1	1
44	8942509640	REGULATOR	2920-66-128-4692	1	1	1	1	1	1	1	1
	8944707700	CONNECTOR-ALTERNATOR		1	1	1	1	1	1	1	1
	8941566030	KIT-SCREWS-ALTERNATOR AND VACUUM PUMP		1	1	1	1	1	1	1	1

CHANGE POINT

GROUP QG/1 SHEET 2

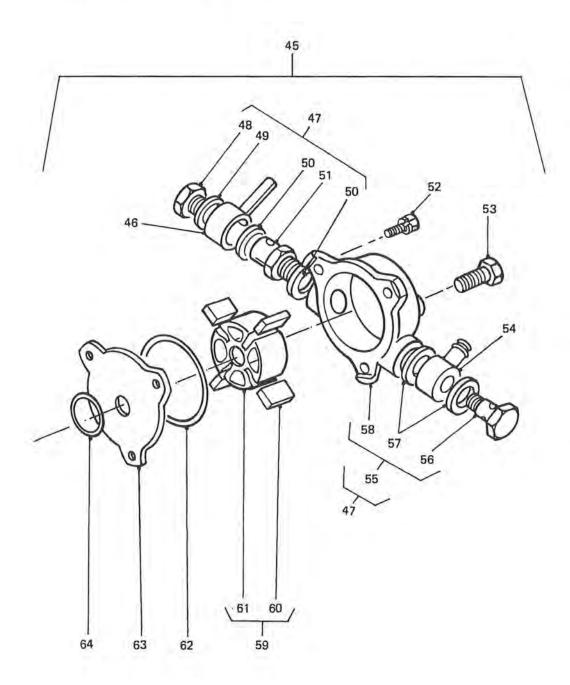


VACUUM PUMP ASSEMBLY

1	QG /1/2	VACUUM PUMP ASSEMBL	Y						_		
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186			E COI 2210		2212	2219 CP
45	8944103990	PUMP ASSY-VACUUM (ALSO PART OF QG/1/1, ITEM 1)	4310-66-128-4694	1	1	1	1	1	1	1	1
46	5196190330	CONNECTOR-SUCTION		1	1	1	1	4	1	1	1
47	8942239910	VALVE ASSY	4820-66-128-4695	1	1	1	1	1	1	1	1
48	NSS										
49	8942239930	PACKING	5330-66-128-4563	1	1	1	1	1	1	1	1
50	8942239920	PACKING	5330-66-128-4566	2	2	2	2	2	2	2	2
51	NSS										
52	8941566030	KIT-SCREWS-ALTERNATOR AND VACUUM PUMP		1	1	1	1	1	1	į	1
53	8942239890	BOLT-BANJO	4730-66-128-5282	1	11	1	1	1	t	1	1
54	8941566400	CONNECTOR-DELIVERY	4710-66-128-5000	1	Ė	1	1	1	1.	_ j	à
55	8944674240	HOUSING ASSY		1	1	1	1	1	1	4	4
56	5196190310	BOLT-BANJO	4730-66-128-5287	1	1.	1	1	1	1	1	1
57	5196790042	SEAL-BANJO BOLT	5330-66-128-4567	2	2	2	2	2	2	2	2
58	NSS										
59	8941566050	ROTOR	4320-66-128-4706	1	1	1	1	1	Ť	1	4
60	8942239850	VANE		4	4	4	4	4	4	4	4
61	NSS										
62	8942239940	O.RING	5330-66-128-4568	1	1	1	1	1	1	1	1
63	941566060	PLATE-CENTRE		1	1	1	4	4	1	1	11
64	8941566080	O RING	5330-66-128-4569	1	1	1	1	1	1	1	1

CHANGE POINT

GROUP QGA

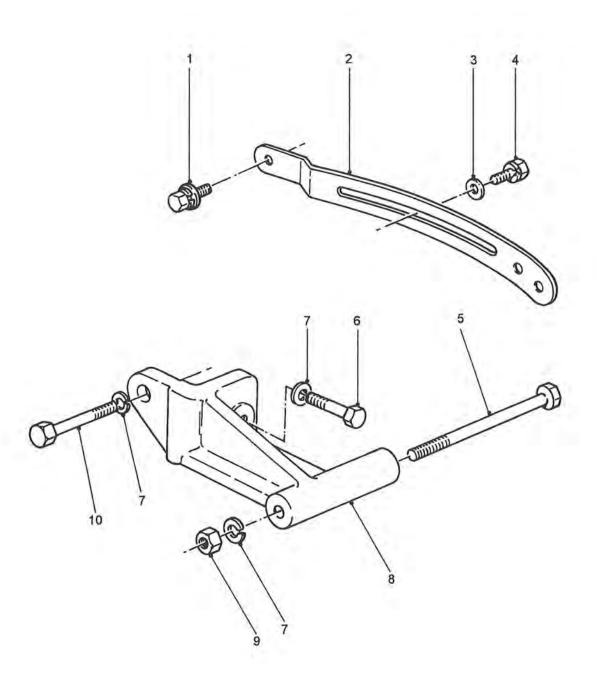


ALTERNATOR MOUNTINGS - 12 VOLT, 70 AMP - ALL VARIANTS

	QGA /1/1	ALTERNATOR MOUNTINGS	- 12 VOLT, 70 AM	IP - A	LL VA	RIAN	NTS VATIV	E COL	10			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186	100,000,000	4.5-0 6.6-0	~ ~~		2212	2219	CP
1	9019910400	BOLT-ENGINE	5306-66-128-5330	1	1	1	1	1	1	1	1	
2	8941578361	PLATE-ADJUSTING	2920-66-128-4713	1	1	1	1	1	1	1	1.	
3	9091647080	WASHER	5310-66-128-4570	1	1	4	1	1	1	1	1	
4	9019108300	BOLT-MOUNTING	5306-66-128-4571	1	1	13	1	1	1	1	1	
5	BH110241L	BOLT	5306-99-122-8373	1	1	1	1	1	1	1	1	
	BH110251	BOLT					1	1				
6	SH210251	SCREW	5305-66-128-5318	2	2	2	2	2	2	2	2	
7	WL110001L	WASHER-LOCK	5310-99-138-9228	4	4	4	4	4	4	4	4	
8	AYG427	BRACKET-MOUNTING	5340-66-128-5242	1	1	1	1	1	1	1	1	
9	FN110041	NUT	5310-66-098-4403	1	1	1	1	1	1	1	1	
10	BH210081	BOLT	5306-66-128-5331	1	1	1	1	1	1	1	1	
	SH214251	SCREW-REDUNDANT ALTERNATOR OIL FEED HOLE	5305-66-128-5276	1)	1	1	1	1	1 -	1	1	
	AYG33	WASHER-COPPER-REDUNDANT ALTERNATOR OIL FEED HOLE		1	1	1	Ť	1	à	î	1	

CHANGE POINT


GROUP QGB/1

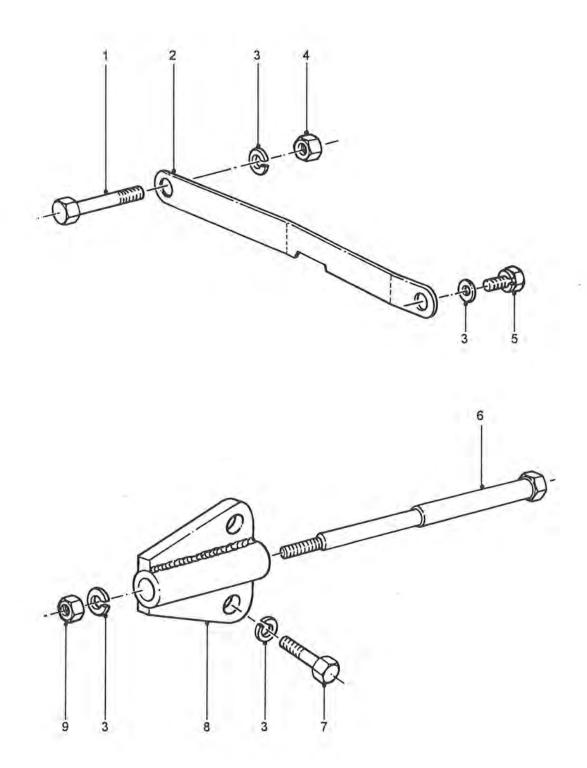

ALTERNATOR MOUNTINGS - 24 VOLT, 55 AMP - GMV AND ERV

ALTERNATOR MOUNTINGS - 24 VOLT, 55 AMP - GMV & ERV DERIVATIVE CODE QGB /1/1 ITEM PART NO. DESCRIPTION NSN 2185 2186 2208 2209 2210 2211 2212 2219 CP BH110251 BOLT 1 1 2 AYG508 LINK-ALTERNATOR 1 1 3 WL110001L WASHER-LOCK 5310-99-138-9228 5 5 FN110041 NUT 5310-66-098-4403 4 1 1 5 SH210201 SCREW 1 1 -AYG509 **BOLT-ALTERNATOR** 6 1 1 7 SCREW SH210251 5305-66-128-5318 2 2 8 AYG507 BRACKET-MOUNTING-1 1 ALTERNATOR NUT NT210041 1 1 CHANGE POINT ARN INTRODUCTION

GROUP QGB/2

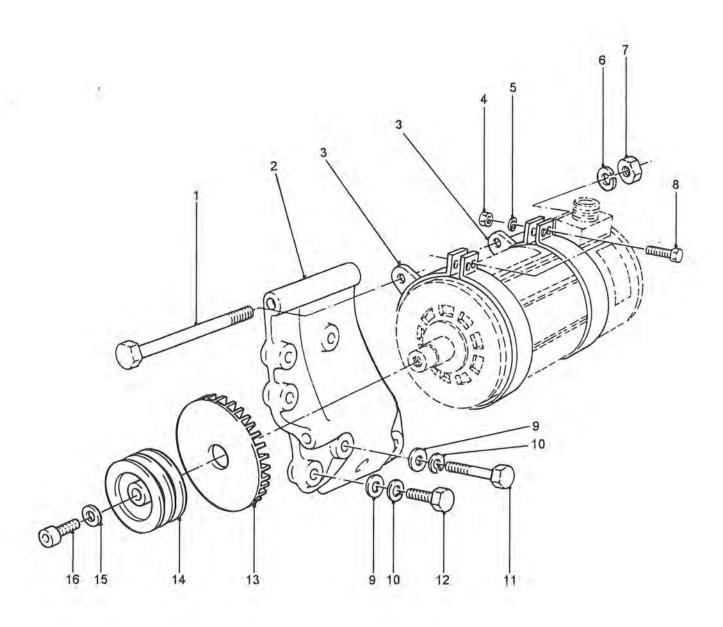


GENERATOR MOUNTINGS - 28 VOLT D.C. - FFR - AMBULANCE AND AIR DEFENCE

GENERATOR MOUNTINGS - 28 VOLT D.C., 100 AMP - AMBULANCE & AIR DEFENCE DERIVATIVE CODE QGB /2/1 2185 2186 2208 2209 2210 2211 2212 2219 CP NSN ITEM PART NO. DESCRIPTION 1 BH112321 **BOLT-LONG** 5306-66-128-5292 2 2 1 2 BRACKET-MOUNT-100 AMF 5340-66-128-5314 1 AYG464 ALTERNATOR & ENGINE MOUNT-LH AYG489 **CLAMP RING ASSY** 5340-66-128-5332 2 2 3 4 FN108041 NUT 5310-99-499-8033 4 4 WL108001L WASHER-LOCK 5310-99-138-9227 4 5 6 WL112001L WASHER-LOCK 5310-66-128-5111 2 2 7 NH112041L NUT 5310-66-128-5086 2 2 8 FB108101 BOLT 5306-99-122-5256 4 4 7 7 9 WA110061L WASHER-PLAIN 5310-99-122-6476 7 7 10 WL110001L WASHER-LOCK 5310-99-138-9228 11 BH210111 BOLT 5306-66-128-5313 1 1 6 SH210301 SCREW 5305-66-128-5289 6 12 6150-66-095-0371 13 DE290020003 FAN-GENERATOR 1 DE290020002 PULLEY-GENERATOR 3020-66-090-7565 1 14 1 15 DE290010046 WASHER-SPECIAL 5310-66-095-8033 1 16 NSS SCREW 5305-66-129-9836 1

CHANGE POINT

GROUP QGC/1

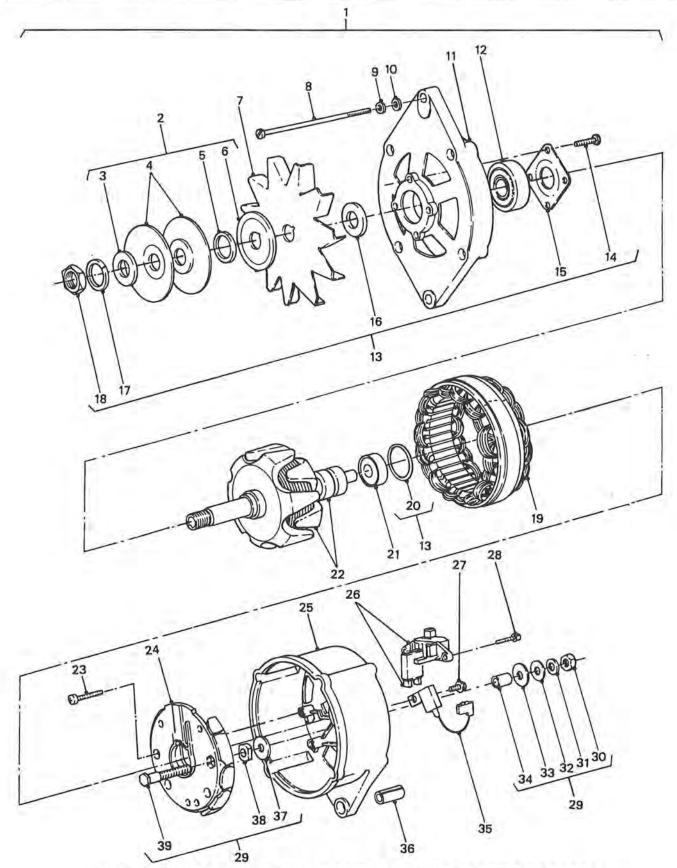


ALTERNATOR - ENGINE ACCESSORY - 24 VOLT, 55 AMP - GMV AND ERV

QGC /1/1 ALTERNATOR - ENGINE ACCESSORY - 24 VOLT, 55 AMP - GMV & ERV

	QGC /1/1	ALTERNATOR - ENGINE A	ACCESSORY - 24 V	OLT, 55 AMP - GMV & DERIVATIV	ERV
ITEM	PART NO.	DESCRIPTION	NSN		2210 2211 2212 2219 CP
1	AYG498	ALTERNATOR-24V, 55A	2920-66-128-6038	j	1
2	HYL9519	KIT-PULLEY (INCLUDES ITEMS 3-6)	3020-66-128-6040	1	1
3	NSS				
4	NSS				
5	NSS				
6	NSS				
7	HYL9516	FAN-ALTERNATOR	6115-66-128-6047	1	1
8	HYL9508	SCREW	5305-66-128-6048	4	4
9	HYL9506	WASHER-LOCK		4	4
10	HYL9507	WASHER-PLAIN		4	4
12	HYL9498	BEARING-BALL	3110-00-554-3238	1	1
13	HYL9517	PARTS-ROTOR (INCLUDES ITEMS 14 TO 18,20)	2920-66-128-6205	1	Ť
14	NSS				
15	NSS				
16	NSS				
17	NSS				
18	NSS				
19	HYL9505	STATOR	2920-66-128-6206	t.	1
20	VSS				
21	HYL9500	BEARING-BALL	3110-00-203-4103	1	1
22	HYL9499	ROTOR	2920-66-128-6053	4	10
23	HYL9503	SCREW ASSY		3	3
24	HYL9502	RECTIFIER	5961-66-128-6054	1	1
25	HYL9501	COVER-REAR		1	f
26	HYL9504	REGULATOR	2920-66-128-6055	i.	1
27	HYL9514	SCREW ASSY		1	f
28	HYL9510	SCREW ASSY		2	2

GROUP QGC/1

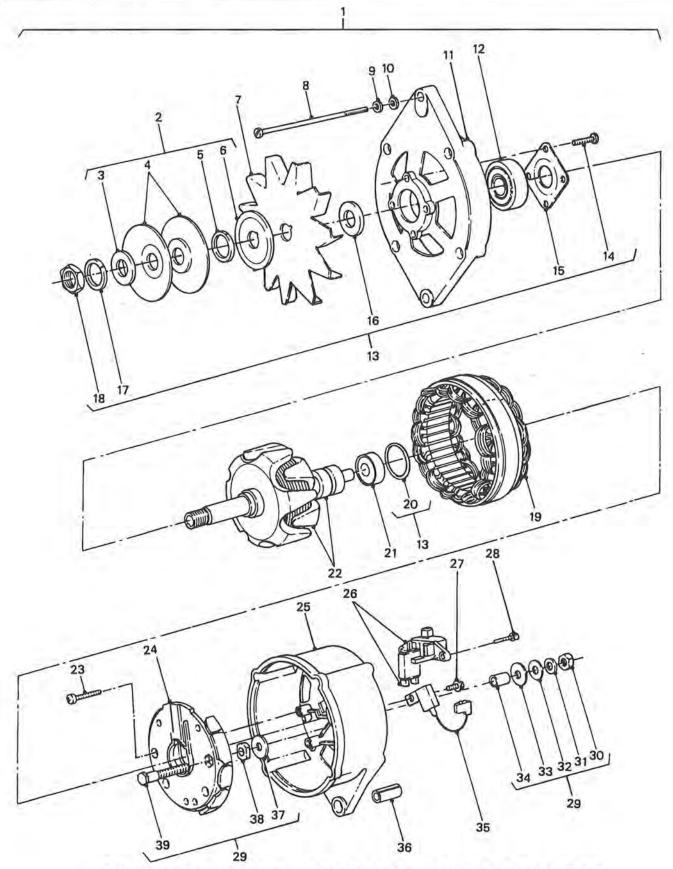


ALTERNATOR - ENGINE ACCESSORY - 24 VOLT, 55 AMP - GMV AND ERV

-(QGC /1/1	ALTERNATOR - ENGINE AC	CESSORY - 24 VC	OLT, 55 AM	P - GMV 8	ERV	
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186	2208 2209	2210 2211	2212 2219 CP
29	HYL9518	PARTS-TERMINAL			1	1	
30	NSS						
31	NSS						
32	NSS						
33	NSS						
34	NSS						
35	HYL9515	CAPACITOR	5910-66-128-6059		1	1	
36	HYL9511	SLEEVE-SPLIT			1	1	
37	NSS						
38	NSS						
39	NSS						

ARN INTRODUCTION

CHANGE POINT

GROUP QGC/2

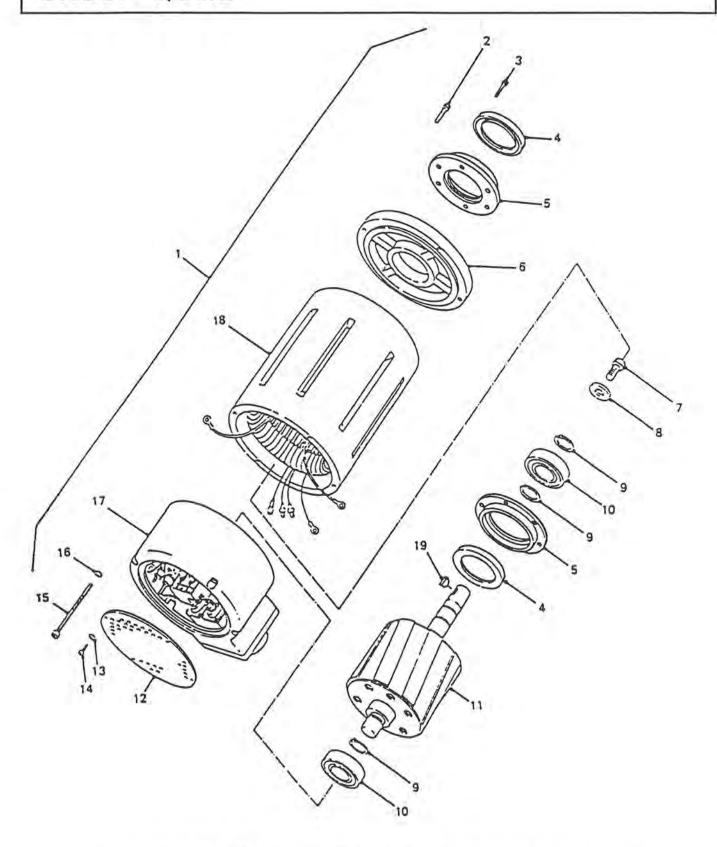

GENERATOR - ENGINE ACCESSORY - 28 VOLT D.C., 100 AMP - FFR - AMBULANCE AND AIR DEFENCE


 QGC /2/1
 GENERATOR - ENGINE ACCESSORY - 28 VOLT D.C., 100 AMP - FFR VEHICLES DERIVATIVE CODE

 PART NO.
 DESCRIPTION
 NSN
 2185 2186 2208 2209 2210 2211 2212 2219 CP

 DE290010001
 GENERATOR
 2920-66-095-0364
 1
 1

ITEM	PART NO.	DESCRIPTION	<u>NSN</u>	2185 2186 2208	2209 2210 2211 2212	221
1	DE290010001	GENERATOR	2920-66-095-0364	1	1	
2	NSS		5306-66-095-8035			
3	NSS		5305-99-122-3380			
4	NSS		5330-66-129-9832			
5	NSS		3110-66-095-0369			
6	NSS		2920-66-095-0370			
7	NSS		5306-66-095-8037			
8	DE290010046	WASHER-SPECIAL	5310-66-095-8033	1	- 1	
9	NSS		5365-66-095-0368			
10	NSS		3110-66-133-4554			
11	NSS		2920-66-095-0366			
12	NSS		2920-66-095-0367			
13	NSS		5310-66-034-5612			
14	NSS		5305-99-135-0589			
15	NSS		5305-12-151-0668			
16	NSS		5310-66-037-2591			
17	NSS					
18	NSS		2920-66-095-0365			
19	NSS		5315-66-012-9979			

CHANGE POINT

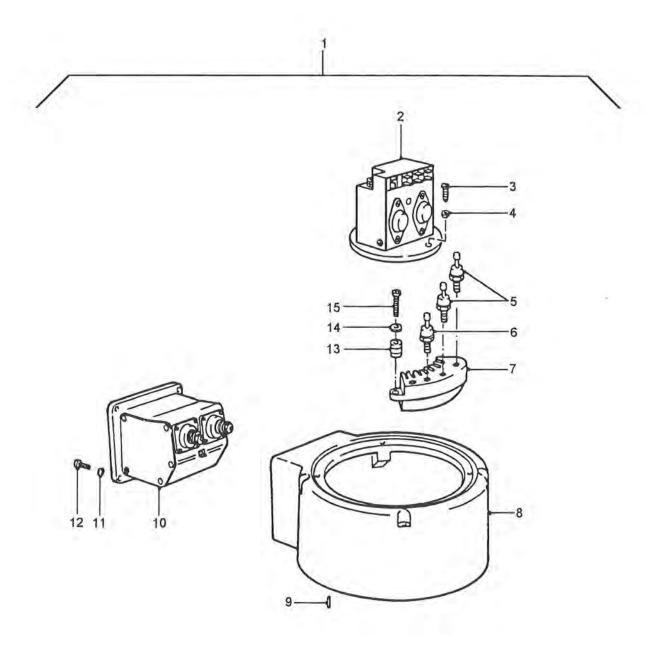

GENERATOR - 28 VOLT D.C. END BELL/HEATSINK ASSEMBLY


QGD /1/1 GENERATOR - 28 VOLT D.C. - END BELL/HEATSINK ASSEMBLY

ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE 2185 2186 2208 2209 2	CODE 2210 2211 2212 2219 CP
1.	NSS		5999-66-096-4323		
2	DE290010019	REGULATOR	2920-66-095-0372	1	.1
3	NSS		5305-99-135-0603		
4	NSS		5310-66-029-0699		
5	NSS		5961-01-013-9354		
6	NSS		5961-66-126-9903		
7	NSS		5999-66-096-4324		
8	NSS				
9	NSS		5315-66-095-8038		
10	NSS				
11	NSS		5310-66-029-0703		
12	NSS		5305-99-135-0591		9
13	NSS		5970-66-096-4325		
14	WA105001L	WASHER-PLAIN	5310-99-122-3032	6	6
15	NSS		5305-99-135-0606		

CHANGE POINT

GROUP QGE

FFR VEHICLES

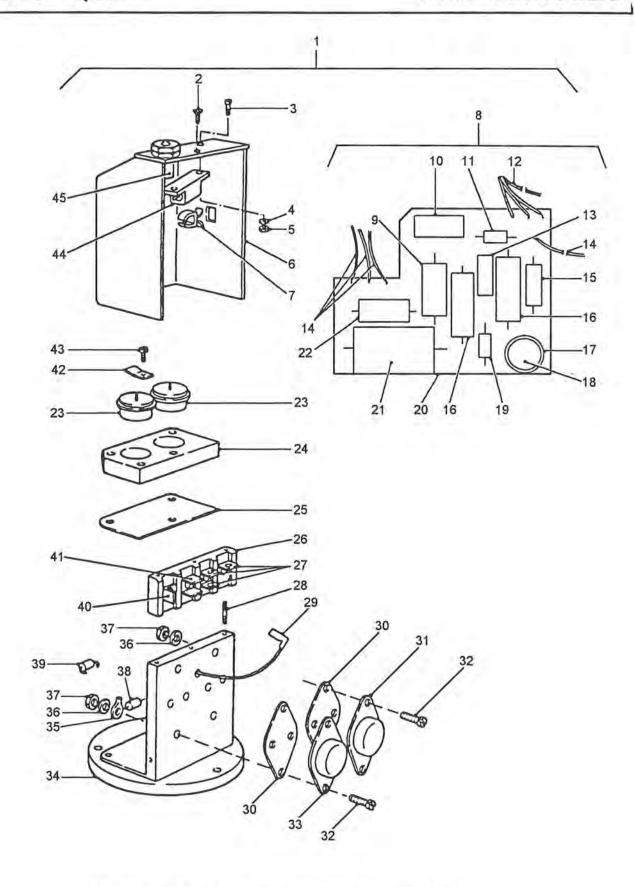


GENERATOR - 28 VOLT D.C. REGULATOR ASSEMBLY

QGE /1/1 GENERATOR - 28 VOLT D.C. - REGULATOR ASSEMBLY

1 DE290010019 REGULATOR 2920-66-095-0372 1 NSS 5305-99-135-0485 3 NSS 5305-99-135-0485 4 NSS 5310-12-149-5707 5 NSS 5310-66-024-9219 6 NSS 7 NSS 8 NSS 9 NSS 5905-99-014-0545 10 NSS 5905-99-014-0555 11 NSS 5961-00-723-3602 12 NSS 13 NSS 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 19 NSS 5961-00-938-7657 19 NSS 5910-99-653-7264 22 NSS 21 NSS 5905-99-664-5837 23 NSS	12 2219 CP
3 NSS 5305-99-135-0485 4 NSS 5310-12-149-5707 5 NSS 5310-66-024-9219 6 NSS 7 7 NSS 8 8 NSS 5905-99-014-0545 10 NSS 5905-99-014-0555 11 NSS 5961-00-723-3602 12 NSS 13 NSS 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 19 NSS 20 NSS 21 NSS 22 NSS 23 NSS	t
4 NSS 5310-12-149-5707 5 NSS 5310-66-024-9219 6 NSS 7 NSS 8 NSS 9 NSS 5905-99-014-0545 10 NSS 5905-99-014-0555 11 NSS 5961-00-723-3602 12 NSS 13 NSS 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 20 NSS 21 NSS 22 NSS 23 NSS	
5 NSS 5310-66-024-9219 6 NSS 7 NSS 8 NSS 5905-99-014-0545 10 NSS 5905-99-014-0555 11 NSS 5961-00-723-3602 12 NSS 13 NSS 14 NSS 15 NSS 15 NSS 16 NSS 17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 5910-99-664-5837 23 NSS 5905-99-664-5837	
6 NSS 7 NSS 8 NSS 9 NSS 5905-99-014-0545 10 NSS 5905-99-014-0555 11 NSS 5961-00-723-3602 12 NSS 13 NSS 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837	
7 NSS 8 NSS 9 NSS 10 NSS 10 NSS 11 NSS 11 NSS 12 NSS 13 NSS 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 19 NSS 20 NSS 21 NSS 21 NSS 22 NSS 23 NSS	
8 NSS 9 NSS 5905-99-014-0545 10 NSS 5905-99-014-0555 11 NSS 5961-00-723-3602 12 NSS 13 NSS 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837	
9 NSS 5905-99-014-0545 10 NSS 5905-99-014-0555 11 NSS 5961-00-723-3602 12 NSS 5961-00-723-3602 13 NSS 5961-00-938-7657 16 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
10 NSS 5905-99-014-0555 11 NSS 5961-00-723-3602 12 NSS 13 NSS 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
11 NSS 5961-00-723-3602 12 NSS 13 NSS 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
12 NSS 13 NSS 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
13 NSS 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
14 NSS 15 NSS 16 NSS 17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
15 NSS 16 NSS 17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
16 NSS 17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
17 NSS 18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
18 NSS 5961-00-938-7657 19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
19 NSS 5961-00-060-1759 20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
20 NSS 21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
21 NSS 5910-99-653-7264 22 NSS 5905-99-664-5837 23 NSS	
22 NSS 5905-99-664-5837 23 NSS	
23 NSS	
24 NSS	
25 NSS	
26 NSS	
27 NSS	
28 NSS	
29 NSS	

FFR VEHICLES

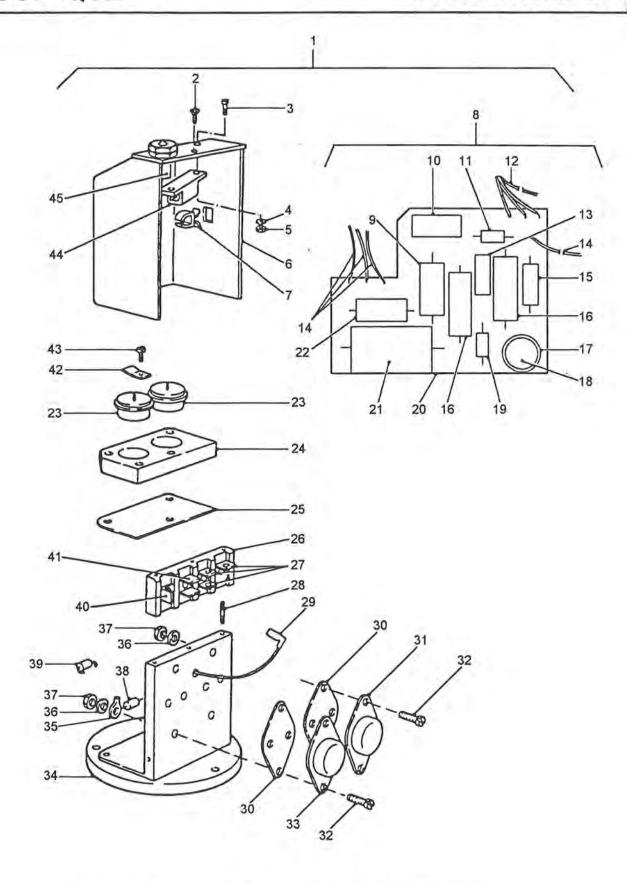


GENERATOR - 28 VOLT D.C. REGULATOR ASSEMBLY

QGE /1/1 GENERATOR - 28 VOLT D.C. - REGULATOR ASSEMBLY DERIVATIVE CODE ITEM PART NO. 2185 2186 2208 2209 2210 2211 2212 2219 CP DESCRIPTION NSN 30 NSS 31 NSS 5961-66-098-4594 NSS 32 5305-66-102-4318 33 NSS 5961-66-070-0210 NSS 34 5940-66-041-6207 35 NSS 36 NSS NSS 5310-12-122-0012 37 38 NSS 5905-66-063-9731 39 NSS 40 NSS 5940-66-096-4372 41 NSS 42 NSS 5940-66-018-4333 43 NSS 5305-66-102-4319 44 NSS 45 NSS

ARN INTRODUCTION

CHANGE POINT

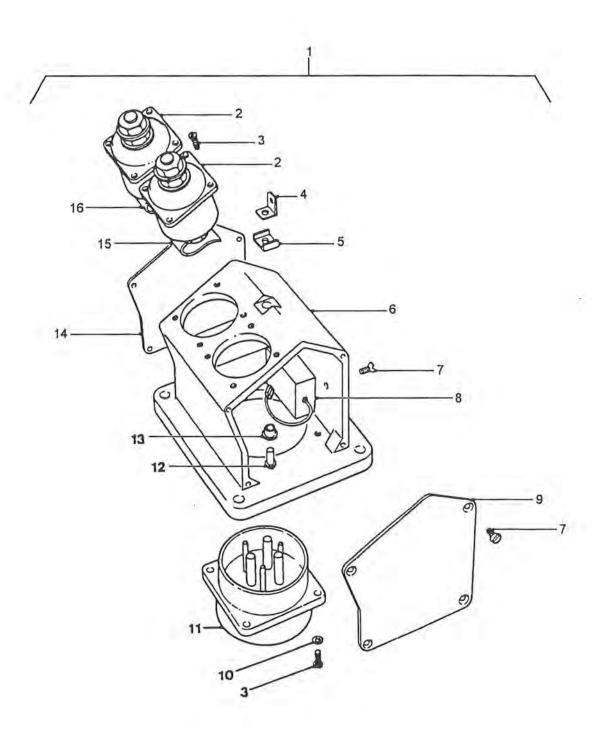


GENERATOR - 28 VOLT D.C. FILTER ASSEMBLY (EARLY TYPE)

QGF /1/1 GENERATOR - 28 VOLT D.C. - FILTER ASSEMBLY (EARLY TYPE)

ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
1	NSS		5915-66-096-4328	
2	NSS		5910-66-096-4368	
3	NSS		5305-99-135-0590	
4	NSS		5940-66-096-4372	
5	NSS		5970-66-096-4365	
6	NSS		5915-66-096-4362	
7	NSS		5305-99-135-0484	
8	NSS		5915-66-096-4363	
9	NSS		2920-66-095-0375	
10	NSS		5310-66-029-0703	
11	NSS		5935-00-729-8811	
12	NSS		5320-66-095-8039	
13	NSS		5970-66-096-4364	
14	NSS		2920-66-095-0374	
15	NSS		6150-66-118-4060	
16	NSS		6150-66-096-4369	

CHANGE POINT

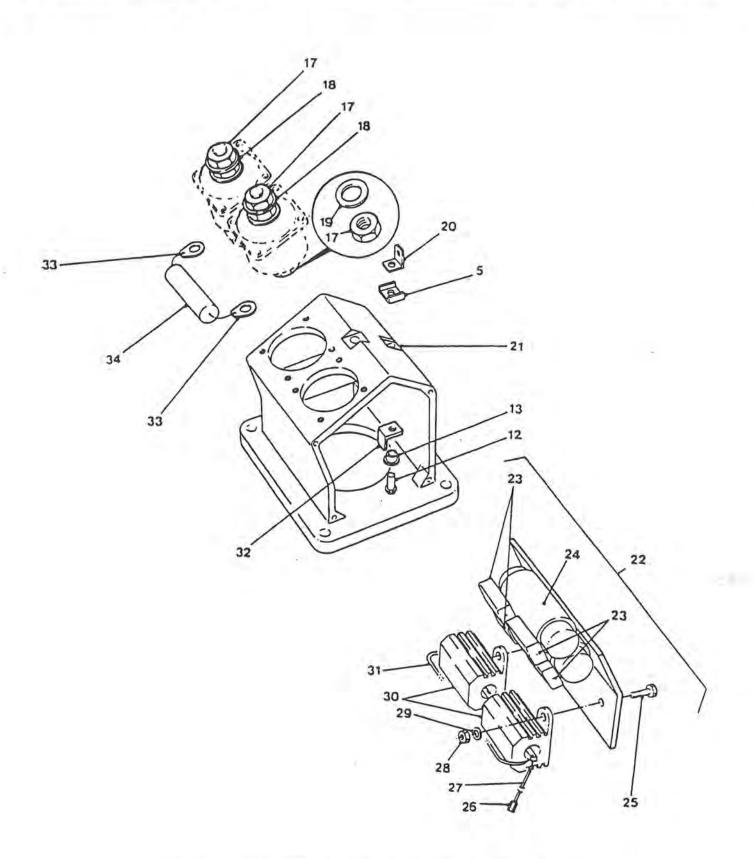

GENERATOR - 28 VOLT D.C. FILTER ASSEMBLY (LATE TYPE)


QGF /1/2 GENERATOR - 28 VOLT D.C. - FILTER ASSEMBLY (LATE TYPE)

DERIVATIVE CODE

ITEM	PART NO.	DESCRIPTION	NSN	2185 2186	DERIVATIVE C 2208 2209 22	ODE 10 2211 2212 22	19 CP
	NOO		5010 00 010 7000				
17	NSS		5310-66-010-7828				
18	NSS		5310-66-014-1549				
19	NSS		5310-66-016-5982				
20	NSS						
21	NSS						
22	NSS						
23	NSS						
24	NSS						
25	NSS		5305-66-104-8417				
26	NSS		5940-66-096-4371				
27	NSS						
28	NSS		5310-66-024-9219				
29	NSS						
30	NSS						
31	NSS						
32	NSS						
33	NSS						
34	NSS		5910-01-066-5477				
	HYM82	PLUG-CONNECTOR	5935-00-825-7282		P	1	

CHANGE POINT

GROUP QH/1

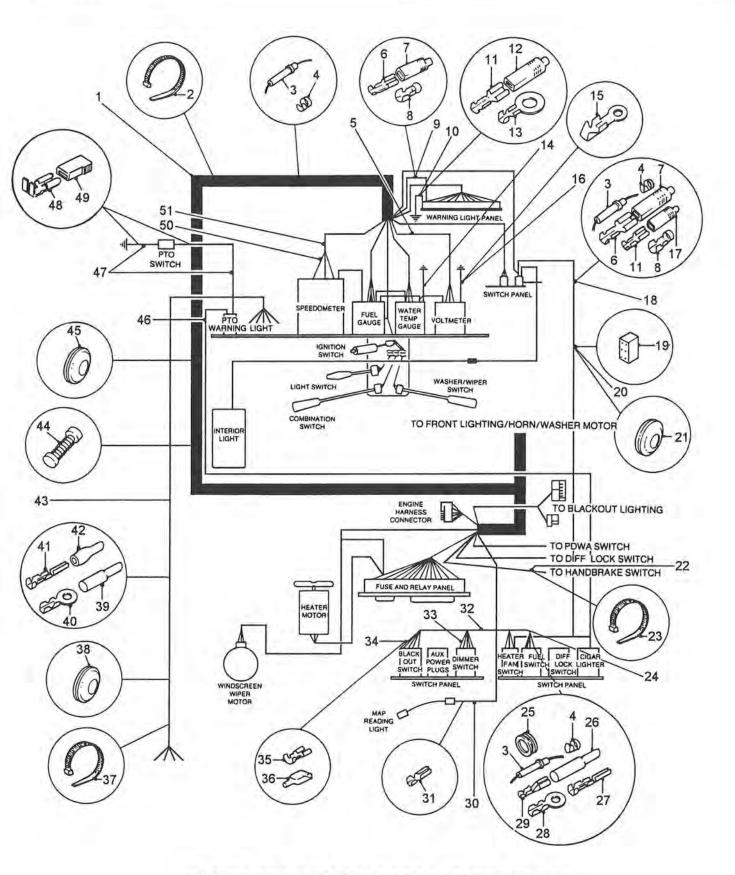

CAB WIRING AND FITTINGS
- CARGO VEHICLES ONLY

CAB WIRING AND FITTINGS - CARGO VEHICLES ONLY QH /1/1 **DERIVATIVE CODE** DESCRIPTION NSN 2185 2186 2208 2209 2210 2211 2212 2219 CP ITEM PART NO. HARNESS-MAIN-WITH PRC6757 1 BARREL FUSES HARNESS-MAIN-WITH PRC7850 1 1 01 **BLADE FUSES** PRC8244 HARNESS-MAIN-WITH 1 1 02 BLADE FUSES AND HEADLAMP DELAY PRC8384 HARNESS-MAIN-WITH 1 1 1 03 BLADE FUSES, HEADLAMP DELAY AND WIPE/WASH DELAY **BHA4460** CONNECTOR 2 2 2 -MAIN HARNESS **AAU3686** CABLE STRAP-HARNESS 2 2 2 TO INNER DASH PANEL NSS 3 NSS 4 5 PRC3053 LEAD-VOLTMETER TO 1 1 1 **HARNESS** 6 NSS 7 NSS 5940-66-128-4737 8 MYH2565 TERMINAL 18 19 18 LEAD-6WD INDICATOR 9 √YG9896 1 1 1 POWER FEED TO LIGHT 10 AYG9629 LEAD-6WD SWITCH TO 1 1 -1 EARTH NSS 11 12 NSS 13 NSS

1

1

LEAD-TEMPERATURE


GAUGE TO EARTH

14

PRC3055

1

GROUP QH/1

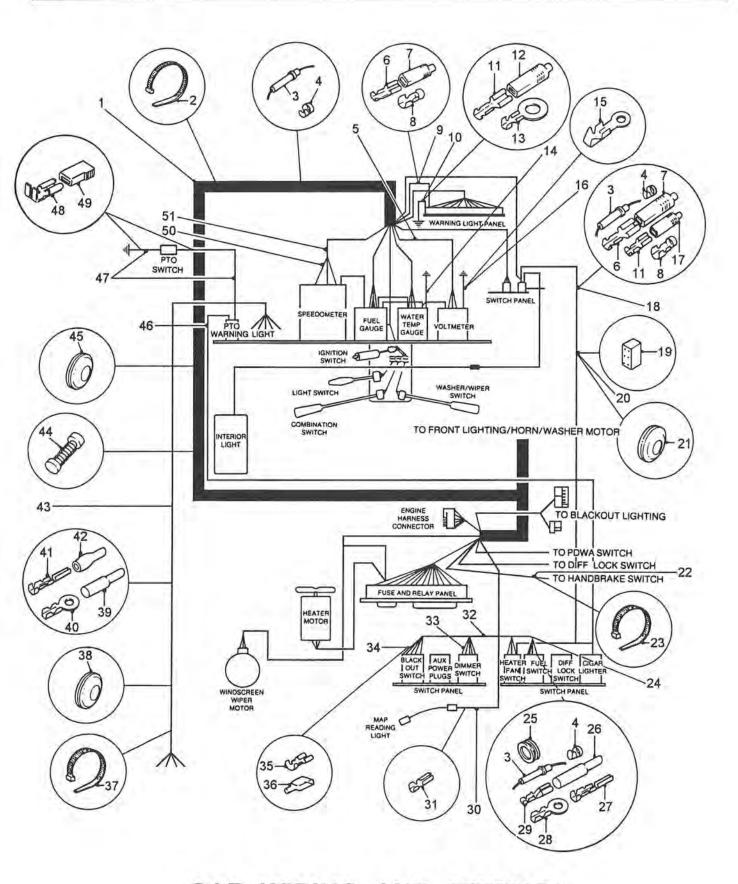


CAB WIRING AND FITTINGS
- CARGO VEHICLES ONLY

QH /1/1 CAB WIRING AND FITTINGS - CARGO VEHICLES ONLY

	QH /1/1	CAB WIRING AND FITTING	GS - CARGO VEHIO	CLES	DNLY	DERIVATIVE CODE	
ITEM	PART NO.	DESCRIPTION	NSN	2185		2208 2209 2210 2211 2212 2219	CP
15	NSS						
16	AYG9830	CABLE-INSTRUMENT EARTH		1	1	i	
17	NSS						
18	AYG9899	HARNESS-CIGAR LIGHTER INTERIOR LIGHT, HEATER FAN SWITCHES (BARREL FUSE TYPE)		1	1.1		
	BYG9064	HARNESS-CIGAR LIGHTER INTERIOR LIGHT, HEATER FAN SWITCHES (BLADE FUSE TYPE)		1	1	1	01
19	AYG9806	CONNECTOR-6 PIN-INTERIOR LIGHT CABLE		1	1	i	
20	BYG9178	HARNESS-INTERIOR LAMP		1	1	- 1	
21	RFR208	GROMMET-CABLE -INTERIOR LAMP	5325-66-089-5324	3	3	3	
22	PRC4442	CABLE-HANDBRAKE SWITCH		1	1	1	
23	DRC1538	CABLE TIE		4	4	4	
24	BYG9358	HARNESS-FUEL SWITCH TO RELAY		1	1	33	
25	NSS						
26	NSS						
27	NSS						
28	NSS						
29	NSS						
30	AYG9731	HARNESS-MAP READING LIGHT		-1	1	Ā	
31	NSS						
32	AYG9768	CABLE-DIMMER SWITCH TO MAIN HARNESS		1	1	į.	


GROUP QH/1

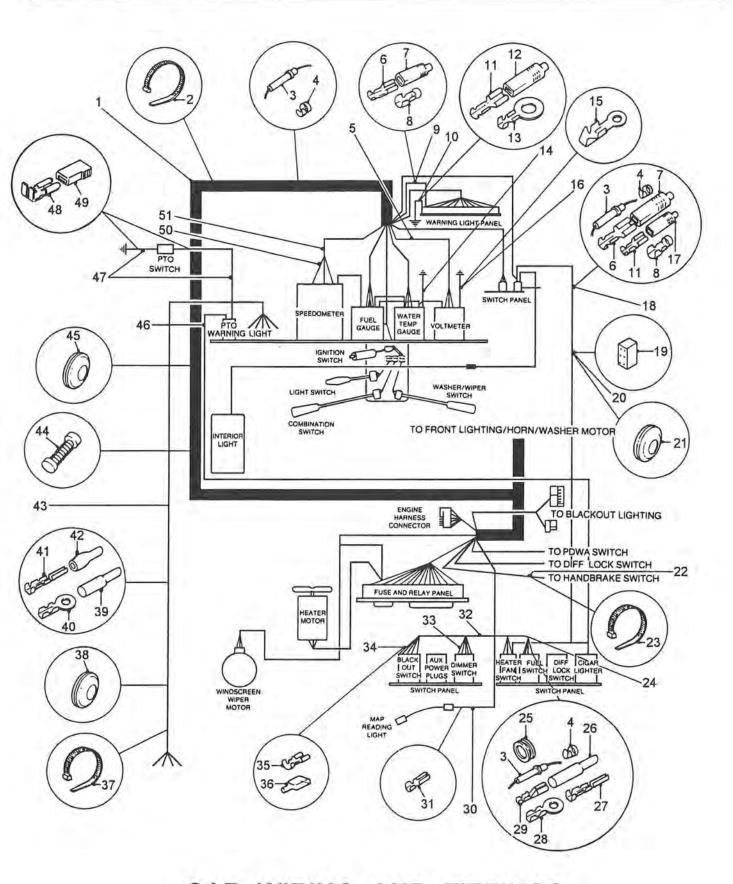

- CARGO VEHICLES ONLY

CAB WIRING AND FITTINGS - CARGO VEHICLES ONLY QH /1/1 ITEM PART NO. DESCRIPTION NSN 2185 2186 2208 2209 2210 2211 2212 2219 CP CABLE-FEED-DIMMER 33 AYG9767 1 1 SWITCH LINK-FUSED-DIMMER BYG9120 1 04 SWITCH CABLE-BLACKOUT LIGHT 34 BYG9357 1 1 SWITCH 35 NSS 36 NSS 37 MYH1940 CABLE TIE 5340-99-618-3776 6 6 -SUPPLEMENTARY HARNESS 38 R269257 **GROMMET-HARNESS** 5325-99-828-1011 2 2 2 39 NSS 40 NSS NSS 41 NSS

GROUP QH/1

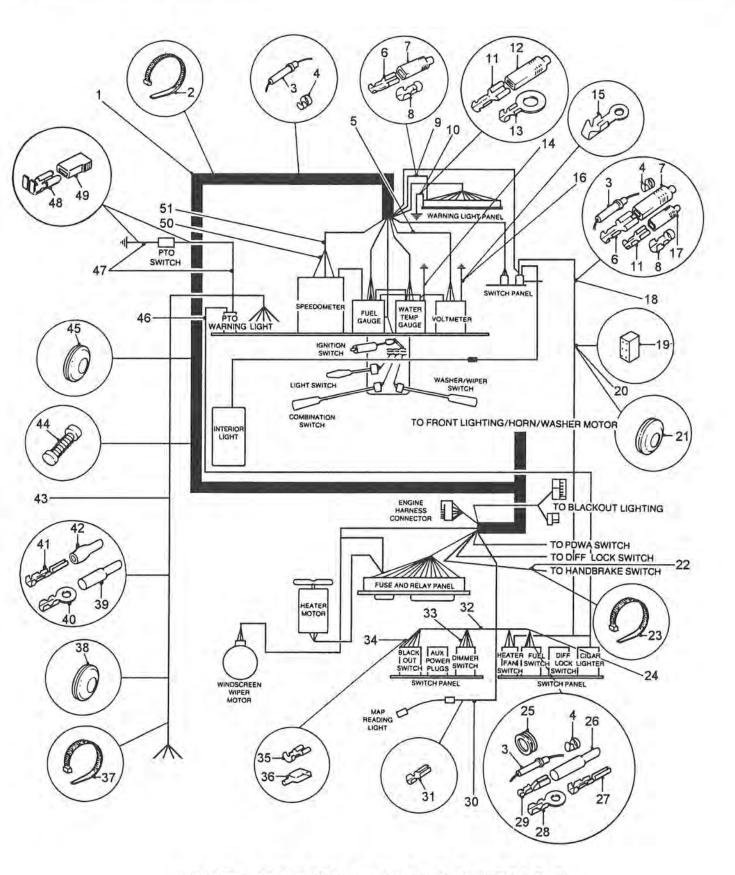


- CARGO VEHICLES ONLY

QH /1/1 CAB WIRING AND FITTINGS - CARGO VEHICLES ONLY

			AND THE AND A CONTROL	200	2,000	DERIVATIVE CODE
<u>ITEM</u>	PART NO.	DESCRIPTION	NSN	2185	2186	2208 2209 2210 2211 2212 2219 CP
	BYG9073	FUSEBOX-BLADE TYPE		1	1	1
	RTC4501	FUSE-10AMP-BLADE TYPE		1	1	4
	PRC3095	CABLE-MAIN HARNESS TO PDWA SWITCH		1	1	1
ľ	HYG6094	GUARD-FOAM-MAIN HARNESS		-1	1	1
	AAU3686	CABLE STRAP-HARNESS & GUARD TO INNER DASH PANEL		1	1	1
	MYH1780	CONNECTOR-LEAD TO MAIN HARNESS-6WD	5940-66-017-9989	1	1	9
	MYH1780	CONNECTOR-REVERSE LEAD TO ENGINE HARNESS	5940-66-017-9989	1	1)	1
	BYG9140	CABLE-LINK-HEADLAMP OVERIDE		1	1	t ·


CHANGE POINT	ARN INTRODUCTION	
1	INTRODUCTION BLADE TYPE FUSES	
2	INTRODUCTION HEADLAMP RELAY	
3	INTRODUCTION WIPER DELAY SYSTEM	
4	50-853 CARGO	

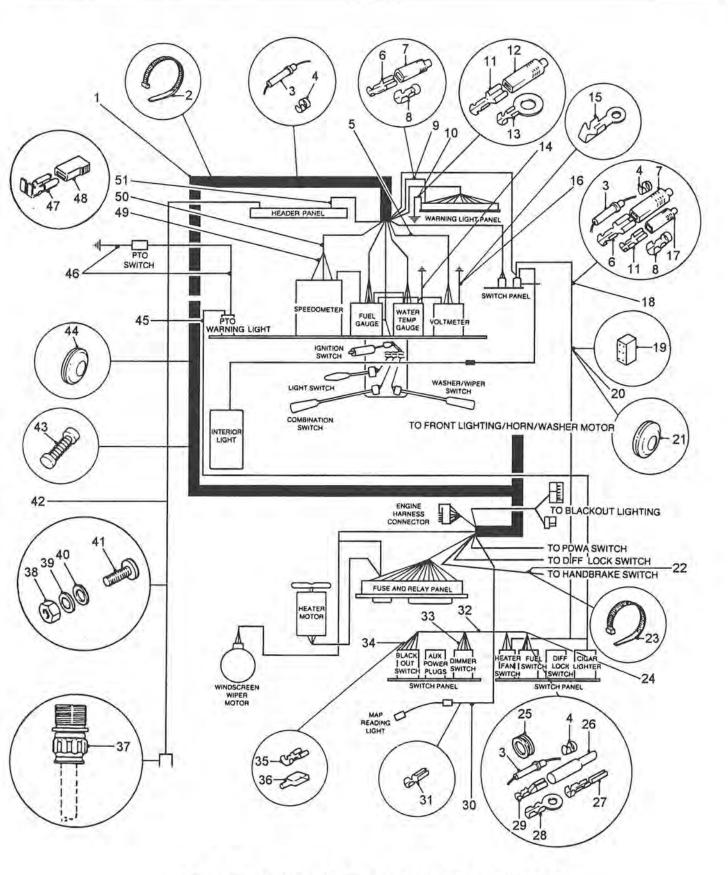

CAB WIRING AND FITTINGS

- AMBULANCE VEHICLES ONLY


1	QH /2/1	CAB WIRING AND FITTIN	GS - AMBULANCE			
<u>ITEM</u>	PART NO.	DESCRIPTION	NSN		/ATIVE CODE 2209 2210 2211 2212 :	2219 CP
1	PRC6757	HARNESS-MAIN-WITH BARREL FUSES		1		
1	BYG9182	HARNESS-MAIN-WITH BLADE FUSES		1		01
	BHA4460	CONNECTOR -MAIN HARNESS		2		
2	AAU3686	CABLE STRAP-HARNESS TO INNER DASH PANEL		2		
3	NSS			4		
4	NSS					
5	PRC3053	LEAD-VOLTMETER TO HARNESS		1		
6	NSS				-	
7	NSS					
8	MYH2565	TERMINAL	5940-66-128-4737	21		
9	AYG9896	LEAD-6WD INDICATOR POWER FEED TO LIGHT		1		
10	AYG9629	LEAD-6WD SWITCH TO EARTH		1.		
11	NSS					
12 /	NSS					
13	NSS					
14	PRC3055	LEAD-TEMPERATURE GAUGE TO EARTH		1		
15	NSS					
16	AYG9830	CABLE-INSTRUMENT EARTH		1		
17	NSS					
18	AYG9899	HARNESS-CIGAR LIGHTER INTERIOR LIGHT, HEATER FAN SWITCHES (BARREL FUSE TYPE)		1		

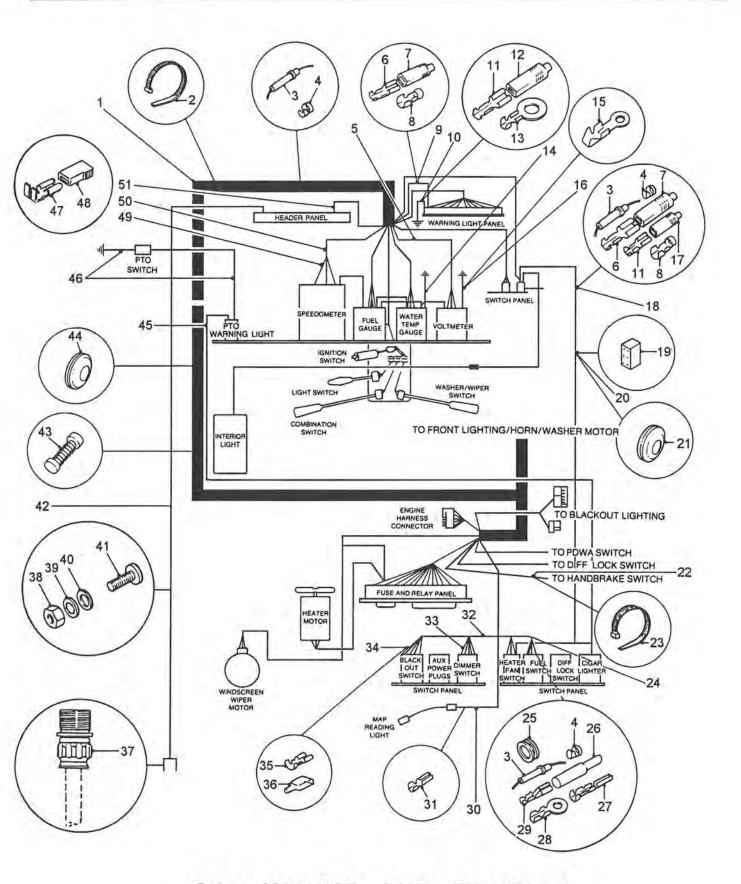

CAB WIRING AND FITTINGS

- AMBULANCE VEHICLES ONLY


1	QH /2/1	CAB WIRING AND FITTING	GS - AMBULANCE	VEHICLES ONLY	
ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219	CP
	BYG9064	HARNESS-CIGAR LIGHTER INTERIOR LIGHT, HEATER FAN SWITCHES (BLADE FUSE TYPE)		1	02
19	AYG9806	CONNECTOR-6 PIN-INTERIOR LIGHT CABLE		1	
20	BYG9178	HARNESS-INTERIOR LAMP		Ť	
21	RFR208	GROMMET-CABLE -INTERIOR LAMP	5325-66-089-5324	3	
22	PRC4442	CABLE-HANDBRAKE SWITCH		1	
23	DRC1538	CABLE TIE-HANDBRAKE SWITCH LEAD		4	
24	BYG9358	HARNESS-FUEL SWITCH TO RELAY		T	
25	NSS				
26	NSS				
27	NSS				
28	NSS				
29	NSS				
30	AYG9731	HARNESS-MAP READING LAMP		1	
1		LAMP			
31	NSS				
32	AYG9768	CABLE-DIMMER SWITCH TO MAIN HARNESS		1	
33	AYG9767	CABLE-FEED-DIMMER SWITCH		1	
	BYG9120	LINK-FUSED-DIMMER SWITCH		1.	
34	BYG9357	CABLE-BLACKOUT LIGHT SWITCH		4	

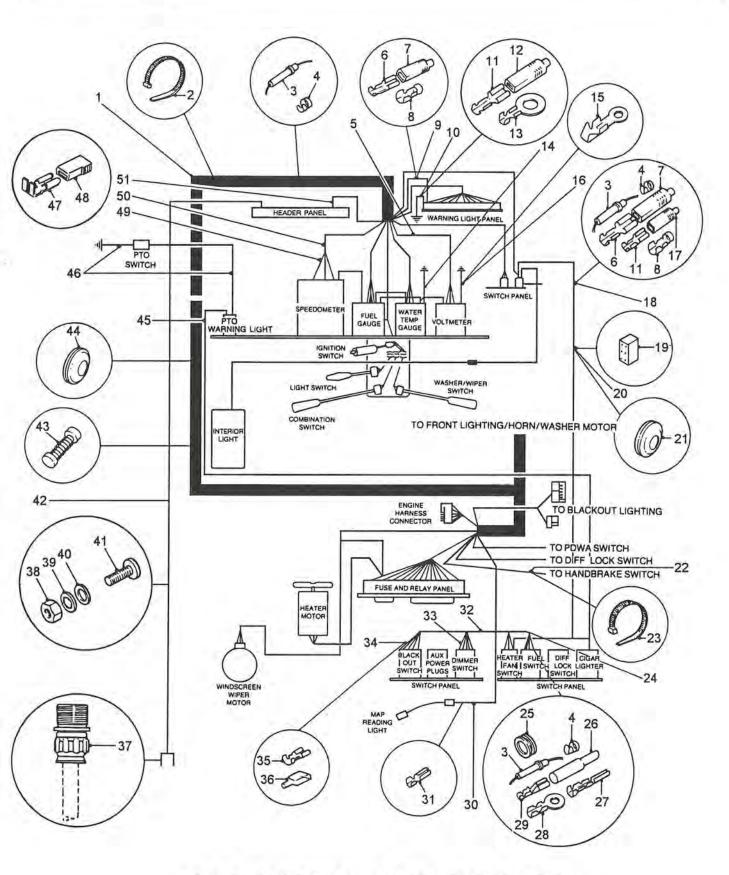

CAB WIRING AND FITTINGS

- AMBULANCE VEHICLES ONLY

QH /2/1 CAB WIRING AND FITTINGS - AMBULANCE VEHICLES ONLY **DERIVATIVE CODE** ITEM PART NO. DESCRIPTION NSN 2185 2186 2208 2209 2210 2211 2212 2219 CP NSS 35 NSS 36 37 BYG9002 PLUG-SOCKET-HEADER 1 PANEL HARNESS **NUT-HARNESS TO CAB** MYH3389 38 4 REAR PANEL WASHER-LOCK 39 MYH3390 4 40 WA103001L WASHER-PLAIN 5310-99-122-3030 4 SCREW 41 MYH3388 4 HARNESS-HEADER PANEL 42 AYG9995 1 TO CAB REAR RESISTOR-100 OHMS 2 PRC9096 43 44 R276054 GROMMET-INNER DASH 5325-99-828-1012 1 PANEL-MAIN HARNESS AYG9945 CABLE-POWER FEED TO 45 1 P.T.O. WARNING LAMP AYG9946 HARNESS-P.T.O. 46 1 WARNING LAMP 47 NSS 48 NSS CABLE-SPEEDOMETER 49 PRC7329 1 ILLUMINATION BYG9147 HARNESS-INSTRUMENTS 50 1 51 BYG9068 HARNESS-HEADER PANEL 1 TO MAIN HARNESS BYG9119 LINK-FUSED-INSPECTION 1 SOCKET FEED BYG9073 **FUSEBOX-BLADE TYPE** RTC4501 FUSE-10AMP-BLADE TYPE MYH1968 CABLE TIE-HEADER PANEL 5340-66-128-4558 5 HARNESS TO ENGINE **HARNESS**

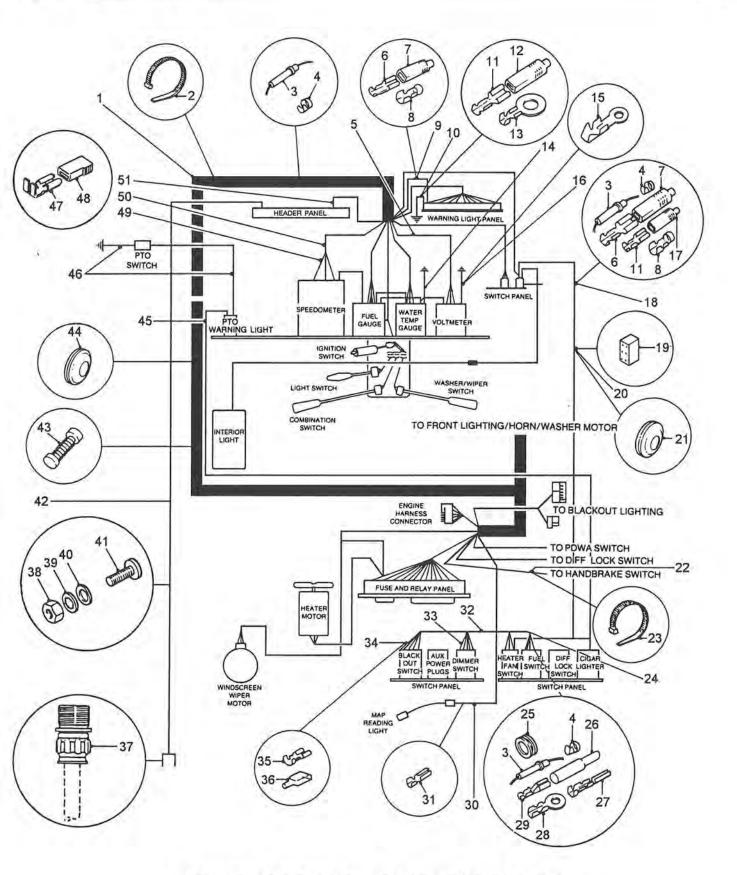


CAB WIRING AND FITTINGS

- AMBULANCE VEHICLES ONLY


	QH /2/1	CAB WIRING AND FITTING	35 - AMBULANCE	VEHICLES ONLY DERIVATIVE CODE
<u>ITEM</u>	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
	YWB10032	RELAY-HARNESS-HEADER PANEL TO MAIN HARNESS	5945-99-739-6093	1
	SE105121L	SCREW-HARNESS RELAY MTG. BLOCK TO FUSEBOX & RELAY MTG. PANEL	5305-99-135-0429	1
	WA105001L	WASHER-PLAIN	5310-99-122-3032	1
	WL105001L	WASHER-LOCK	5310-99-977-1102	1
	NH105041L	NUT	5310-66-098-4400	1
	BYG9000	PLUG-AMBULANCE MODULE		1
(1YM242	HOUSING-CONNECTOR -FEMALE		i
	HYM241	HOUSING-CONNECTOR -MALE		1
	BYG9180	CONNECTOR-PLUG-MAIN HARNESS		1
	PRC3095	CABLE-MAIN HARNESS TO PDWA SWITCH		1
	BYG9140	CABLE-LINK-HEADLAMP OVERIDE		1
	MYH1780	CONNECTOR-LEAD TO MAIN HARNESS-6WD	5940-66-017-9989	1
(MYH1780	CONNECTOR-REVERSE LEAD TO ENGINE HARNESS	5940-66-017-9989	1

CHANGE POINT	ARN INTRODUCTION
11	FITMENT OF CONNECTOR PLUG TO ALLOW OPERATION OF TRAILER WARNING LAMP
2	BLADE TYPE FUSES

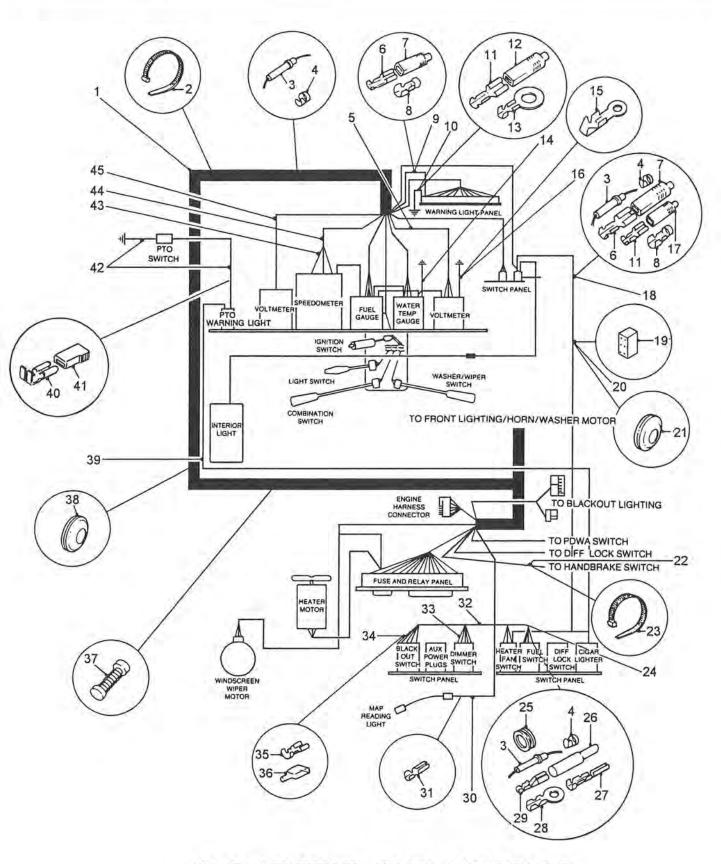


CAB WIRING AND FITTINGS
- GMV & ERV ONLY

0	QH /3/1	CAB WIRING AND FITTIN	GS - GMV & ERV C	NLY	DEDU/ATE		
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186	DERIVATIV 2208 2209		1 2212 2219 CP
1	PRC6757	HARNESS-MAIN-WITH BARREL FUSES			1	1	
	PRC7850	HARNESS-MAIN-WITH BLADE FUSES			1	1	01
	PRC8244	HARNESS-MAIN-WITH BLADE FUSES AND HEADLAMP DELAY			1	1	02
	PRC8384	HARNESS-MAIN-WITH BLADE FUSES, HEADLAMP DELAY AND WASH/WIPE DELAY			1	1	03
(
,	BYG9182	HARNESS-MAIN-WITH BLADE FUSES, HEADLAMP DELAY AND WASH/WIPE DELAY			1	1	04
	BHA4460	CONNECTOR -MAIN HARNESS			2	2	
2	AAU3686	CABLE STRAP-HARNESS TO INNER DASH PANEL			2	2	
3	NSS				4	4	
	NSS						
5	PRC3053	LEAD-VOLTMETER TO HARNESS			1	1	
6	VSS						
7	NSS						
8	MYH2565	TERMINAL	5940-66-128-4737		19	19	
9	AYG9896	LEAD-6WD INDICATOR			1	1	
		POWER FEED					
10	AYG9629	LEAD-6WD SWITCH TO EARTH			1	1	
11	NSS						
12	NSS						

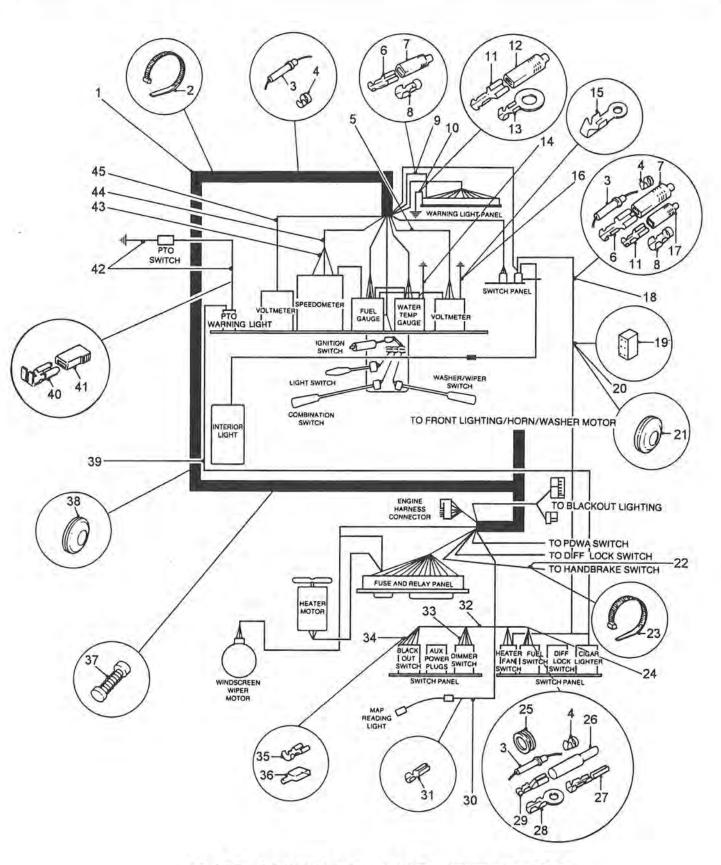


CAB WIRING AND FITTINGS
- GMV & ERV ONLY

	QH /3/1	CAB WIRING AND FITTIN			DERIVATIV			
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186	2208 2209	2210 2211	2212 2	2219 CP
13	NSS							
14	PRC3055	LEAD-TEMPERATURE GAUGE TO EARTH			1	1		
15	NSS							
16	AYG9830	CABLE-INSTRUMENT EARTH			4	1		
17	NSS							
18	AYG9899	HARNESS-CIGAR LIGHTER INTERIOR LIGHT, HEATER FAN SWITCHES			1	1		
18	3YG9064	HARNESS-CIGAR LIGHTER INTERIOR LIGHT, HEATER FAN SWITCHES			1	1		01
19	AYG9806	CONNECTOR-6 PIN-INTERIOR LIGHT CABLE			1	1	+	
20	BYG9178	HARNESS-INTERIOR LAMP			1	1		
21	RFR208	GROMMET-CABLE -INTERIOR LAMP	5325-66-089-5324		3	3		
22	PRC4442	CABLE-HANDBRAKE SWITCH			1	1		
23	DRC1538	CABLE TIE			4	4		
24	BYG9358	HARNESS-FUEL SWITCH TO RELAY			1	1		
25	NSS							
26	NSS							
27	NSS							
28	NSS							
29	NSS							
30	AYG9731	HARNESS-MAP READING LIGHT			1	1		
31	NSS							

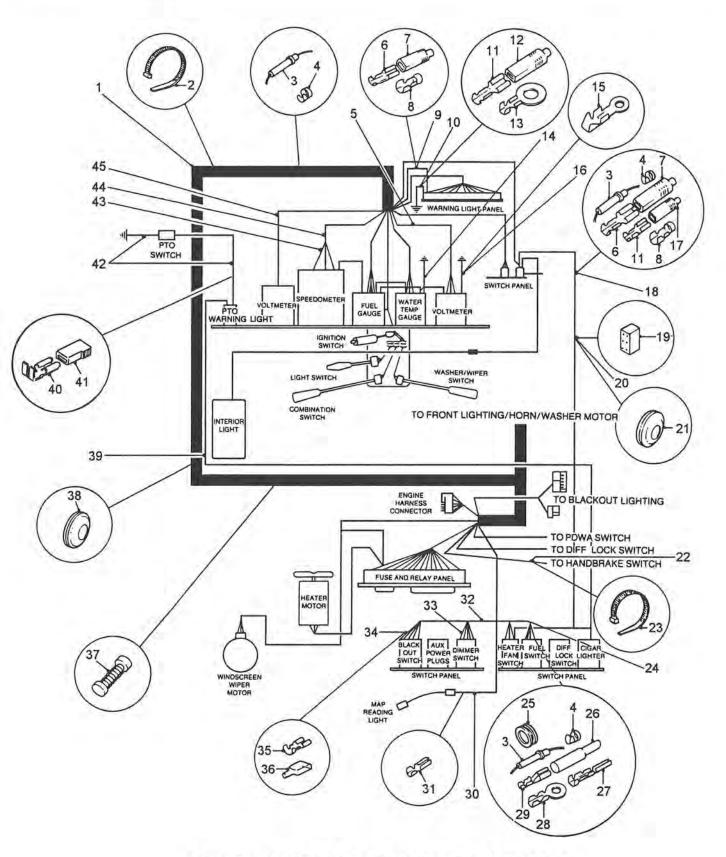

CAB WIRING AND FITTINGS
- GMV & ERV ONLY


Y	QH /3/1	CAB WIRING AND FITTING	SS - GMV & ERV O	NLY				
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186	DERIVATIV 2208 2209		1 2212 22	19 CP
32	AYG9768	CABLE-DIMMER SWITCH TO MAIN HARNESS			1.	1		
33	AYG9767	CABLE-FEED-DIMMER SWITCH			4	1		
	BYG9120	LINK-FUSED-DIMMER SWITCH			1	1		
34	BYG9357	CABLE-BLACKOUT LIGHT SWITCH			1	1		
35	NSS							
36	NSS							
37	PRC9096	RESISTOR-100 OHMS			1	1		
38	R276054	GROMMET-INNER DASH PANEL-MAIN HARNESS	5325-99-828-1012		1	1	12	
39	AYG9945	CABLE-POWER FEED TO P.T.O. WARNING LAMP			1			
40	NSS							
41	NSS							
42	AYG9946	HARNESS-P.T.O. WARNING LAMP			1			
43	PRC7329	CABLE-SPEEDOMETER			1	1		
44	3YG9147	HARNESS-INSTRUMENTS			1	1		
45	AYG9769	HARNESS-VOLTMETER 24V-FEED			1	1		
	PRC3095	CABLE-MAIN HARNESS TO PDWA SWITCH			1	1		
	MYH1780	CONNECTOR-LEAD TO MAIN HARNESS-6WD	5940-66-017-9989		1	1		
	MYH1780	CONNECTOR-REVERSE LEAD TO ENGINE HARNESS	5940-66-017-9989		1	1		

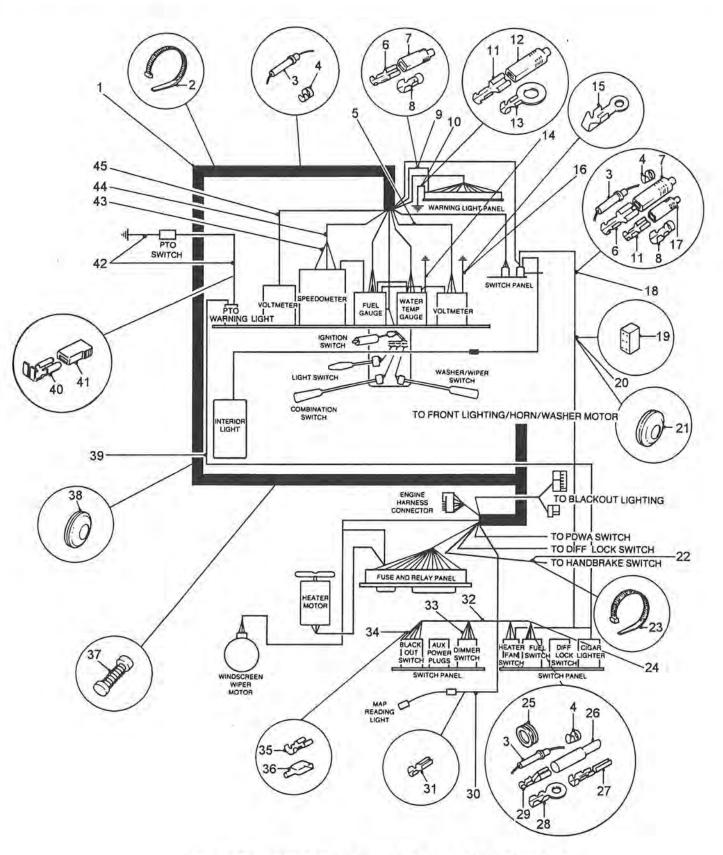

CAB WIRING AND FITTINGS
- GMV & ERV ONLY

- 5	QH /3/1	CAB WIRING AND FITTING	SS - GMV & ERV O	NLY	DEDNATA	E CODE		
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186	DERIVATIV 2208 2209		2212 2219	CP
	BYG9140	CABLE-LINK-HEADLAMP OVERIDE			1	1		
	BYG9119	LINK-FUSED-INSPECTION SOCKET-FEED			1	1		
	BYG9073	FUSEBOX-BLADE TYPE			1	1		
	RTC4501	FUSE-10AMP-BLADE TYPE			1	া		
	HYG6094	GUARD-FOAM-MAIN HARNESS			1	1		
1	AAU3686	CABLE STRAP-HARNESS & GUARD TO INNER DASH PANEL			1	1		
	BYG9031	HARNESS-24V/55A ALTERNATOR TO WARNING LIGHT MODULE & 24V VOLTMETER			1	1		
	YWB10032	RELAY-24V/55A ALTERNATOR HARNESS	5945-99-739-6093		1	i		
	SE105121L	SCREW-HARNESS RELAY MTG BLOCK TO FUSE BOX & RELAY MTG. PANEL	5305-99-135-0429		1	1		
	WA105001L	WASHER-PLAIN	5310-99-122-3032		1	1		
	WL105001L	WASHER-LOCK	5310-99-977-1102		1	1		
	NH105041L	NUT	5310-66-098-4400		1	1		
(/IYH5256/300	SPIREWRAP-24V/55A ALTERNATOR CABLE TO EARTH CABLE OVER CHASSIS CROSSMEMBER			1	Í		
	BYG9180	CONNECTOR PLUG-MAIN HARNESS			1	1		


CHANGE POINT	ARN INTRODUCTION
1	50-842 ELECTRONIC REPAIR VEHICLE - BLADE TYPE FUSES
2	INTRODUCTION HEADLAMP RELAY
3	INTRODUCTION WIPER DELAY SYSTEM
4	FITMENT OF CONNECTOR PLUG TO ALLOW OPERATION OF TRAILER WARNING LAMP

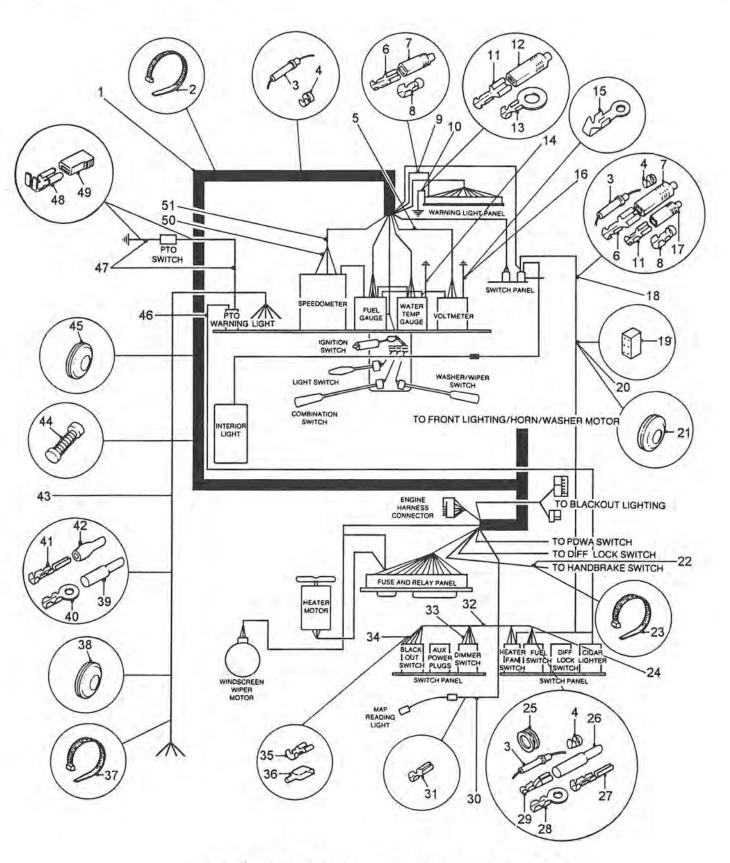

CAB WIRING AND FITTINGS

- AIR DEFENCE VEHICLES ONLY


10	QH /4/1	CAB WIRING AND FITTIN	GS - AIR DEFENCE	VEHICLES ONLY
ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
1	PRC6757	HARNESS-MAIN-WITH BARREL FUSES		1
	PRC7850	HARNESS-MAIN-WITH BLADE FUSES		1 01
	PRC8244	HARNESS-MAIN-WITH BLADE FUSES AND HEADLAMP DELAY		1 02
	PRC8384	HARNESS-MAIN-WITH BLADE FUSES, HEADLAMP DELAY AND WASH WIPE DELAY		1 03
- (
1	JHA4460	CONNECTOR -MAIN HARNESS		2
2	AAU3686	CABLE STRAP-HARNESS TO INNER DASH PANEL		2
3	NSS			
4	NSS			
5	PRC3053	LEAD-VOLTMETER TO HARNESS		1
6	NSS			
7	NSS			
8	MYH2565	TERMINAL	5940-66-128-4737	19
9	\YG9896	LEAD-6WD INDICATOR POWER FEED		1
10	AYG9629	LEAD-6WD SWITCH TO EARTH		1
11	NSS			
12	NSS			
13	NSS			
14	PRC3055	LEAD-TEMPERATURE GAUGE TO EARTH		Ť

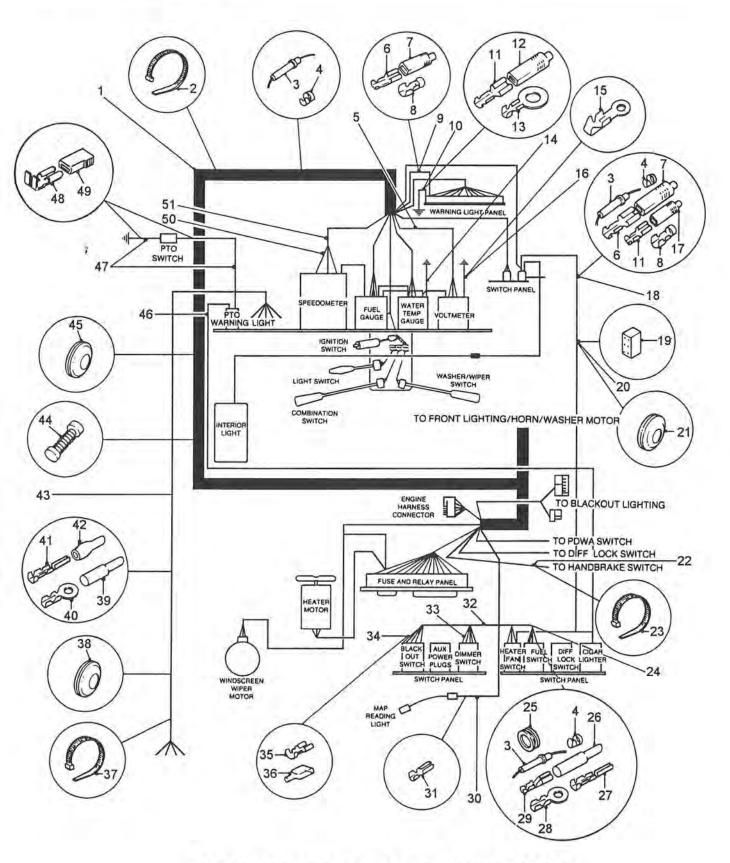

CAB WIRING AND FITTINGS

- AIR DEFENCE VEHICLES ONLY


-10	QH /4/1	CAB WIRING AND FITTING	GS - AIR DEFENCE	VEHICLES ONLY
ITEM	PART NO.	DESCRIPTION	<u>NSN</u>	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
15	NSS			
16	AYG9830	CABLE-INSTRUMENT EARTH		1
17	NSS			
18	AYG9899	HARNESS-CIGAR LIGHTER INTERIOR LIGHT, HEATER FAN SWITCHES		1
18	BYG9064	HARNESS-CIGAR LIGHTER INTERIOR LIGHT, HEATER FAN SWITCHES		1 01
19	4YG9806	CONNECTOR-6 PIN-INTERIOR LIGHT CABLE		1 1
20	BYG9178	HARNESS-INTERIOR LAMP		1
21	RFR208	GROMMET-CABLE -INTERIOR LAMP	5325-66-089-5324	3
22	PRC4442	CABLE-HANDBRAKE SWITCH		1
23	DRC1538	CABLE TIE		4
24	BYG9358	HARNESS-FUEL SWITCH TO RELAY		1
25	NSS			
26	NSS			
27	SS			
28	NSS			
29	NSS			
30	AYG9731	HARNESS-MAP READING LIGHT		1
31	NSS			
32	AYG9768	CABLE-DIMMER SWITCH TO MAIN HARNESS		Ť
33	AYG9767	CABLE-FEED-DIMMER SWITCH		1

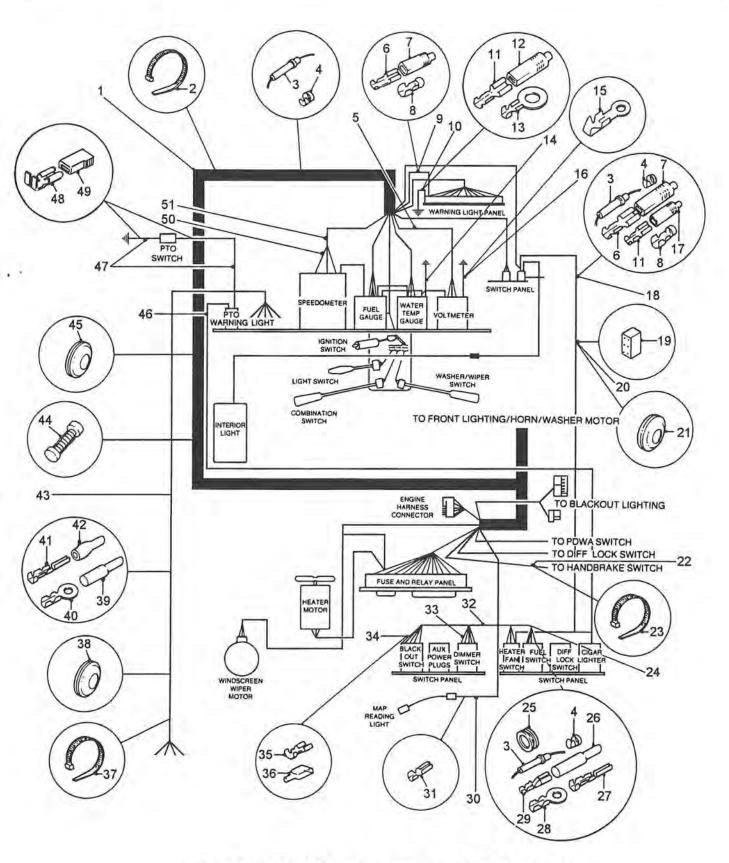

CAB WIRING AND FITTINGS

- AIR DEFENCE VEHICLES ONLY


-7	QH /4/1	CAB WIRING AND FITTING	GS - AIR DEFENCE	VEHICLES ONLY
ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
34	BYG9357	CABLE-BLACKOUT LIGHT SWITCH		1
35	NSS			
36	NSS			
37	MYH1940	CABLE TIE-SUPPLEMENTARY HARNESS	5340-99-618-3776	6
38	R269257	GROMMET-HARNESS	5325-99-828-1011	1
39	NSS			
40	NSS			
41	SS			
42	NSS			
43	AYG9841	HARNESS-SUPP. DISTRIBUTION BOX, AMMETER & HOURMETER		
44	PRC9096	RESISTOR-100 OHMS		1
45	R276054	GROMMET-INNER DASH PANEL-MAIN HARNESS	5325-99-828-1012	1
46	AYG9945	CABLE-POWER FEED TO P.T.O. WARNING LAMP		1
47	BYG9147	HARNESS-INSTRUMENTS		1
48	NSS			
49	SS			
50	PRC7329	CABLE-SPEEDOMETER ILLUMINATION		1
51	BYG9147	HARNESS-INSTRUMENTS		·t
	PRC3095	CABLE-MAIN HARNESS TO PDWA SWITCH		1
	MYH1780	CONNECTOR-LEAD TO MAIN HARNESS-6WD	5940-66-017-9989	· i
	MYH1780	CONNECTOR- REVERSE LEAD TO ENGINE HARNESS	5940-66-017-9989	1

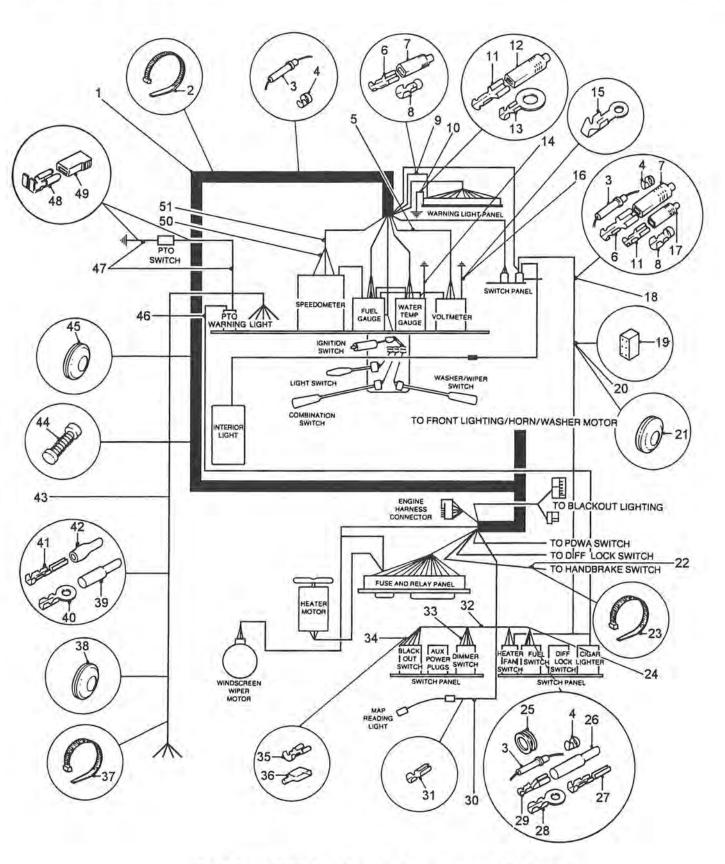

CAB WIRING AND FITTINGS


- AIR DEFENCE VEHICLES ONLY

1	QH /4/1	CAB WIRING AND FITTINGS - AIR DEFENCE VEHICLES ONLY DERIVATIVE CODE							
ITEM	PART NO.	<u>DESCRIPTION</u> <u>NSI</u>	<u>2185</u> 218	86 2208 2209 2210 2211	2212 2219 CP				
	AYG9946	HARNESS-P.T.O. WARNING LAMP			1				
	BYG9120	LINK-FUSED-DIMMER SWITCH			1				
	BYG9119	LINK-FUSED-INSPECTION SOCKET FEED			1				
	BYG9073	FUSEBOX-BLADE TYPE			1				
	RTC4501	FUSE-10 AMP-BLADE TYPE			1				
CHAN	GE POINT	ARN INTRODUCTION							
1		INTRODUCTION BLADE TYPE FU	SES						
- 1	2	INTRODUCTION HEADLAMP REL	AY						
	3	51-870 AIR DEFENCE RAPIER - IN	TRODUCTION WIPE	ER DELAY SYSTEM					

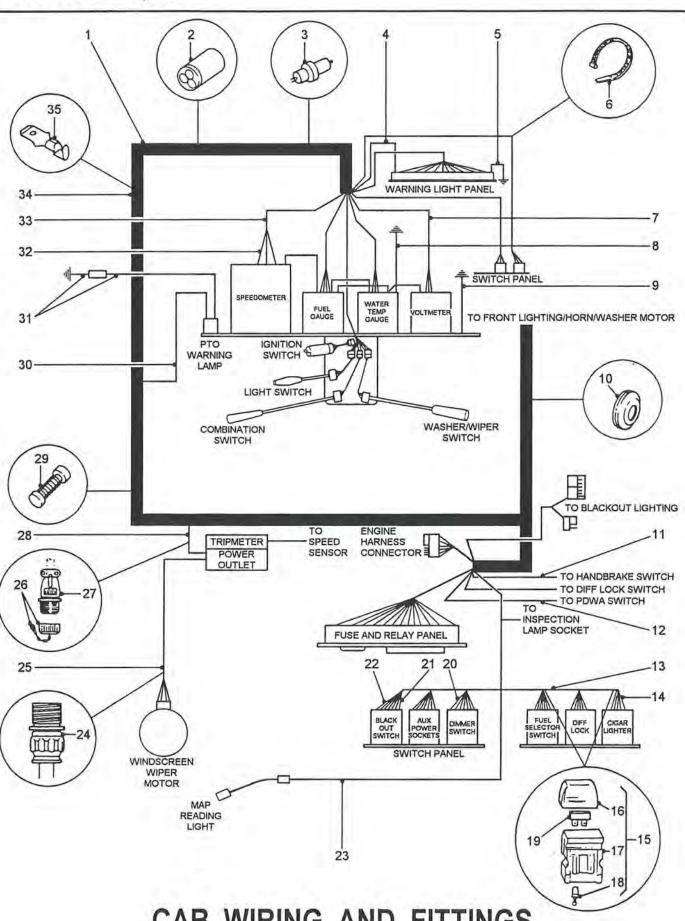


CAB WIRING AND FITTINGS
- LRPV ONLY

0	QH /5/1	CAB WIRING AND FITTIN	GS - LRPV ONLY	
ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
1	BYG9059	HARNESS-MAIN-LRPV		1
2	BHA4460	CONNECTOR -MAIN HARNESS		2
3	AAU5034	DIODE		1
4	AYG9896	LEAD-6WD INDICATOR POWER FEED		1
5	AYG9629	LEAD-6WD SWITCH TO EARTH		1
6	AAU3686	CABLE STRAP-FUEL HARNESS		2
- 4	AFU1090	CLIP-HARNESS TO INNER VALANCE		4
	AAU3686	CABLE STRAP-HARNESS TO INNER DASH VALANCE		2
7	PRC3053	LEAD-VOLTMETER TO HARNESS		1
8	PRC3055	LEAD-TEMPERATURE GAUGE TO EARTH		. 1
9	AYG9830	CABLE-INSTRUMENT EARTH		1.1
10 {	R276054	GROMMET-INNER DASH PANEL-MAIN HARNESS	5325-99-828-1012	-1
11	PRC4442	CABLE-HANDBRAKE SWITCH		1
	DRC1538	CABLE TIE-HANDBRAKE SWITCH CABLE		4
12	PRC3095	CABLE-MAIN HARNESS TO PDWA SWITCH		1
13	BYG9358	HARNESS-FUEL SWITCH TO RELAY		4

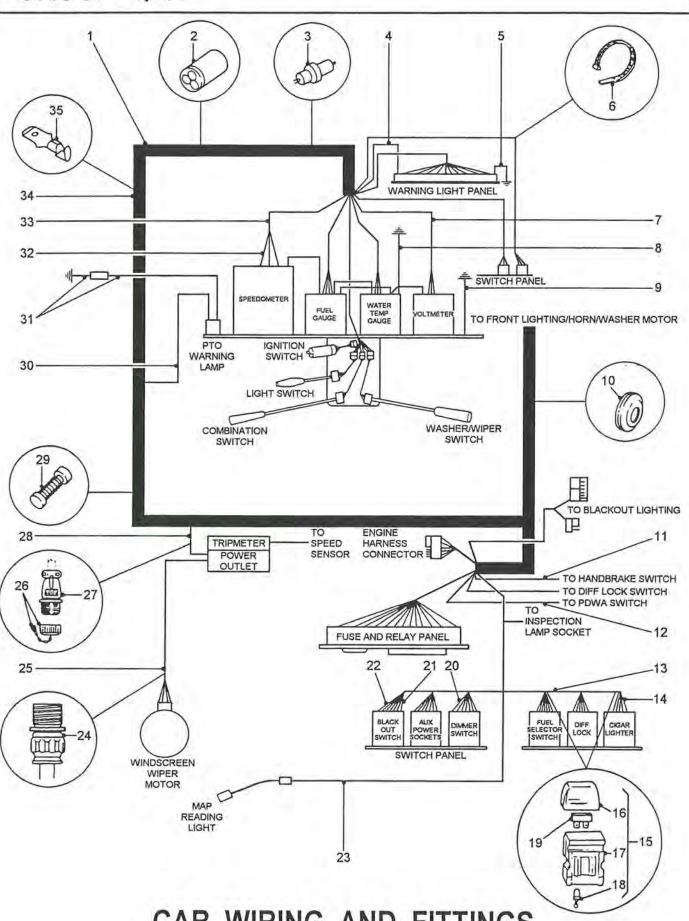

CAB WIRING AND FITTINGS
- LRPV ONLY


QH /5/1		CAB WIRING AND FITTIN	GS - LRPV ONLY	Station (September 22)
ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
14	BYG9064	HARNESS-CIGAR LIGHTER INTERIOR LIGHT, HEATER FAN SWITCHES		1
15	BYG9073	FUSE BOX-BLADE TYPE		4
16	NSS			
17	NSS			
18	NSS			
19	RTC4497	FUSE-5 AMP	5920-99-767-2990	- . 1
	RTC4501	FUSE-10 AMP	5920-99-759-5252	1
	RTC4503	FUSE-15 AMP	5920-99-759-5253	1-
20 ((YG9768	CABLE-DIMMER SWITCH TO MAIN HARNESS		4
	BYG9120	LINK-FUSED-DIMMER SWITCH		4
21	BYG9357	CABLE-BLACKOUT LIGHT SWITCH		4
	BYG9119	LINK-FUSED-INSPECTION SOCKET-FEED		3
22	BYG9056	CABLE-4 POSITION BLACKOUT SWITCH		1
23	BYG9268	HARNESS-MAP READING LIGHT		i
24	YG9058	PLUG-CANNON-7 PIN	5935-00-201-4610	1
25	BYG9061	HARNESS-DASH PLUG TO WIPER MOTOR		1
26	AYG9963	CAP AND CHAIN	5935-00-221-8620	1
27	BYG9057	SOCKET-CANNON-7 PIN	5935-00-201-2770	4
	MYH3388	SCREW-HARNESS TO DASH FACIA MOULDING		4
	WA103001L	WASHER-PLAIN	5310-99-122-3030	4
	MYH3390	WASHER-LOCK		4

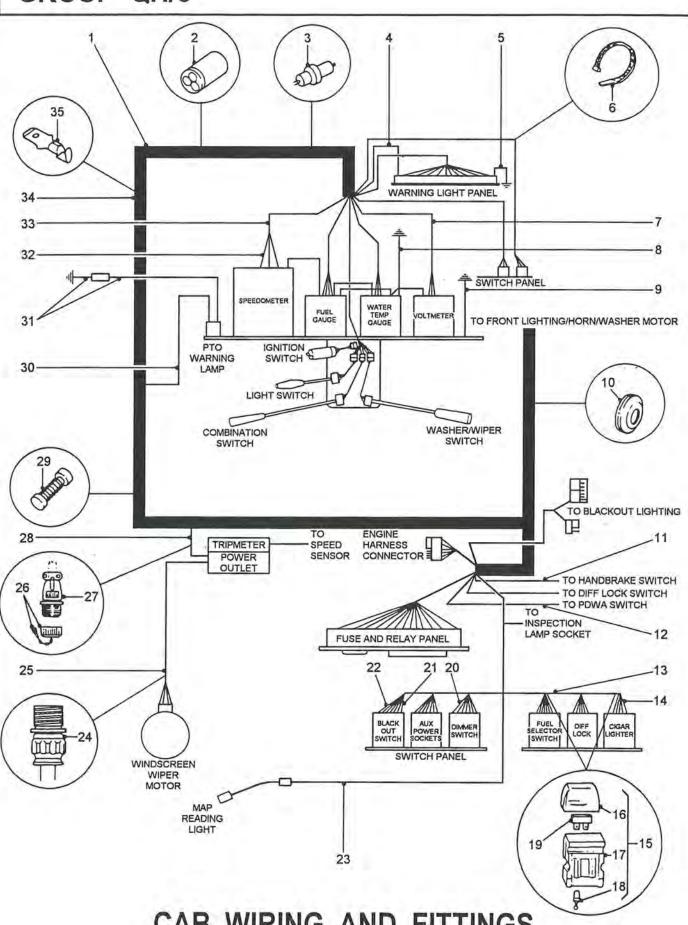

CAB WIRING AND FITTINGS
- LRPV ONLY

	QH /5/1	CAB WIRING AND FITTINGS	S - LRPV ONLY	DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
	MYH3389	NUT		4
28	BYG9060	HARNESS-DASH PLUG TO MAIN HARNESS		1
29	PRC9096	RESISTOR-100 OHMS		1
30	AYG9945	CABLE-POWER FEED TO P.T.O. WARNING LAMP		1.
31	AYG9946	HARNESS-P.T.O. WARNING LAMP		4
32	PRC7329	CABLE-SPEEDOMETER ILLUMINATION		1
33	JYG9147	HARNESS-INSTRUMENTS		1
34	BYG9140	CABLE-LINK-HEADLAMP OVERIDE		7
	MYH2697	'P' CLIP-MAIN HARNESS TO RH CHASSIS SIDEMEMBER	5340-66-128-4546	1
	MYH3337	SCREW	5305-66-128-5341	1
CHAN	IGE POINT	ARN INTRODUCTION		

GROUP QJA

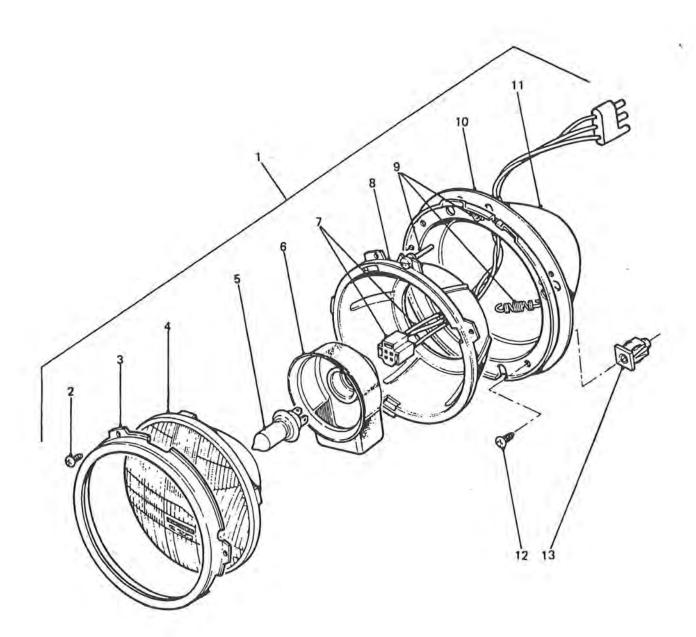


HEADLAMP ASSEMBLY

1	QJA /1/1	HEADLAMP ASSEMBLY				DEBI	VATIV	E COL	E			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186	2208	0.7-0.0.0.7		-	2212	2219	CP
1	BAU2144	HEADLAMP ASSY (INCLUDES ITEMS 2-11)	6220-99-755-8187	2	2	2	2	2	2	2	2	
2	AB606021L	DRIVE SCREW	5305-66-098-2815	6	6	6	6	6	6	6	6	
3	PRC7992	RIM-HEADLAMP	6220-99-804-5566	2	2	2	2	2	2	2	2	
4	RTC4615	LIGHT UNIT	6220-66-128-5860	2	2	2	2	2	2	2	2	
5	GLB472	BULB 60/55 WATT	6240-66-108-4835	2	2	2	2	2	2	2	2	
6	R156206	COVER-SEALING	6220-99-827-5264	2	2	2	2	2	2	2	2	
7	BAU2110	ADAPTOR & CABLE	6220-99-803-3878	2	2	2	2	2	2	2	2	
8	27H6481L	RIM-SEATING		2	2	2	2	2	2	2	2	
9	BHM7058L	KIT-SCREWS		2	2	2	2	2	2	2	2	
10	R531586	GASKET	6220-99-805-4311	2	2	2	2	2	2	2	2	
11	NSS											
12	AB608047	SCREW		8	8	8	8	8	8	8	8	
13	R79051	NUT-LOKUT	5310-99-138-0422	8	8	8	8	8	8	8	8	
	HYM438	PROTECTOR KIT-HEADLAMP	6220-66-134-9948	1	1	1	1	1	1	1	1	

CHANGE POINT ARN INTRODUCTION

GROUP QJB

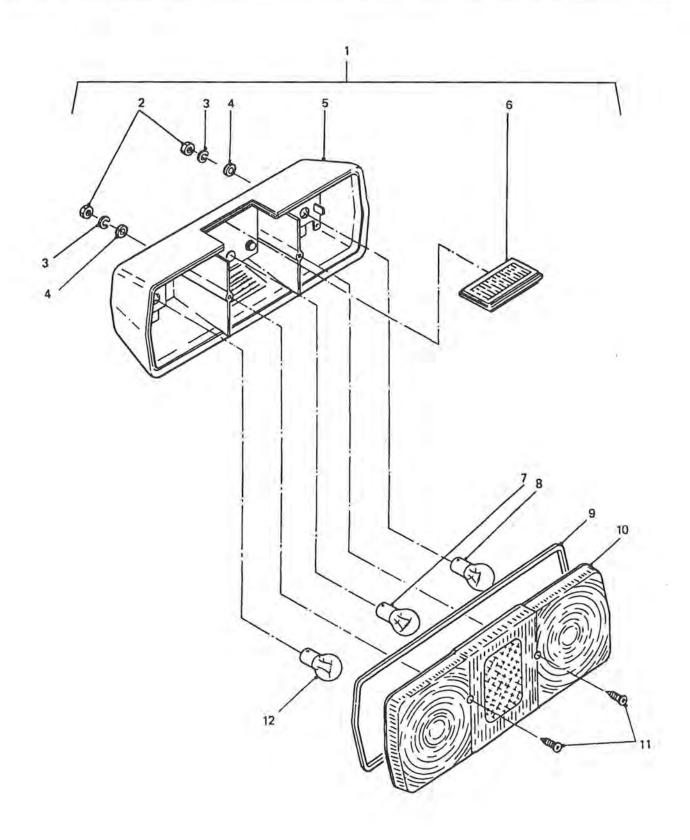


REAR STOP, TAIL, TURN INDICATOR, NUMBER PLATE AND REVERSE LAMP

1	QJB /1/1	REAR STOP. TAIL. TURN II	NDICATOR, NUMB	ER PL	ATE	AND	REVE	ERSE	LAN	IP		
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186					2212	2219	CP
1	AYG9552	REAR LIGHT ASSY (INCLUDES ITEMS 2-12)	6220-66-112-9597	2	2	2	2	2	2	2	2	
2	NH604041L	NUT	5310-66-019-3956	4	4	4	4	4	4	4	4	
3	WM600041L	WASHER-LOCK		4	4	4	4	4	4	4	4	
4	WA106041L	WASHER-PLAIN	5310-66-098-4440	4	4	4	4	4	4	4	4	
5	NSS											
6	HYL8898	LENS-NUMBER PLATE		2	2	2	2	2	2	2	2	
7	HYL8644	GLOBE-12V, 21/6W	6240-66-022-3583	2	2	2	2	2	2	2	2	
8	HYL8641	GLOBE-12V, 10W	6240-66-022-9434	2	2	2	2	2	2	2	2	
9	HYL8670	GASKET-LENS	5330-66-054-8813	2	2	2	2	2	2	2	2	
10	HYL8584	LENS	6220-66-112-9598	2	2	2	2	2	2	2	2	
11.	NSS								0.5			
12	GLB382	GLOBE-12V, 21W-STOP TAIL	6240-66-010-8161	2	2	2	2	2	2	2	2	
	WM600041L	WASHER-LOCK-REAR LAMP TO TOOL BOXES		4	4	4	4	4	4		4	

CHANGE POINT

ARN INTRODUCTION

GROUP QJC

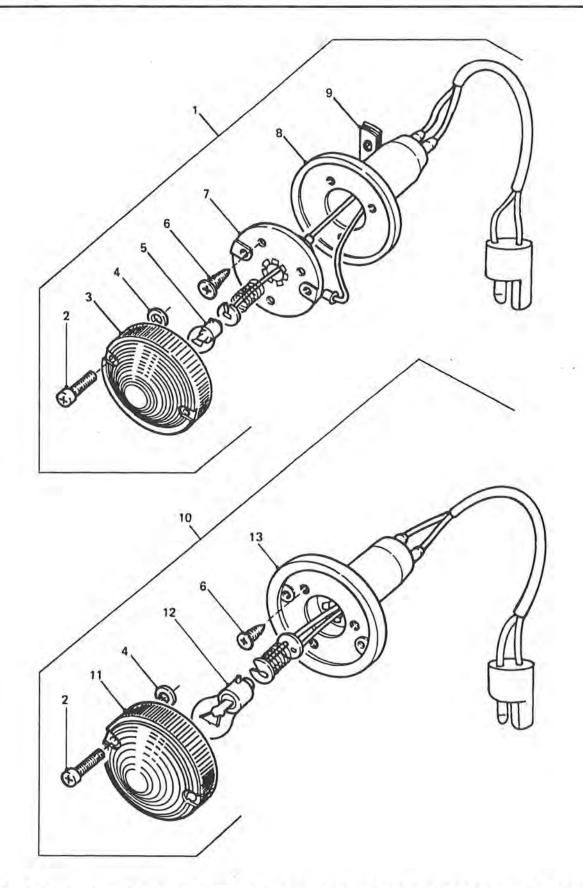


FRONT PARK AND TURN INDICATOR LAMPS

100	QJC /1/1	FRONT PARK AND TURN	INDICATOR LAMPS			DEDI	VATIN					
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186		VATIV 2209			2212	2219	CP
1	RTC5012	SIDE LAMP (INCLUDES ITEMS 2-9)	6220-66-095-8576	2	2	2	2	2	2	2	2	
2	R608004	SCREW/WASHER	5305-99-831-1505	4	4	4	4	4	4	4	4	
3	R589284	LENS-SIDE LAMP	6220-66-095-8574	2	2	2	2	2	2	2	2	
4	NSS	USE ITEM 2										
5	R570822	GLOBE-12V, 6W	6240-99-995-3248	2	2	2	2	2	2	2	2	
6	AB606041L	SCREW	5305-99-950-4416	6	6	6	6	6	6	6	6	
7	NSS											
8	NSS											
9	AK606021L	NUT-SPRING	5310-99-739-5282	6	6	6	6	6	6	6	6	
10	RTC5013	FLASHER LAMP-FRONT	6220-99-828-7807	2	2	2	2	2	2	2	2	
11	R589285	LENS-FLASHER LAMP	6220-99-828-7809	2	2	2	2	2	2	2	2	
12	GLB382	GLOBE-12V, 21W	6240-66-010-8161	2	2	2	2	2	2	2	2	
13	NSS											
	AB608047	SCREW-FRONT & SIDE LAMPS TO WING NOSE PANEL		12	12	12	12	12	12	12	12	

CHANGE POINT

ARN INTRODUCTION

GROUP QJD

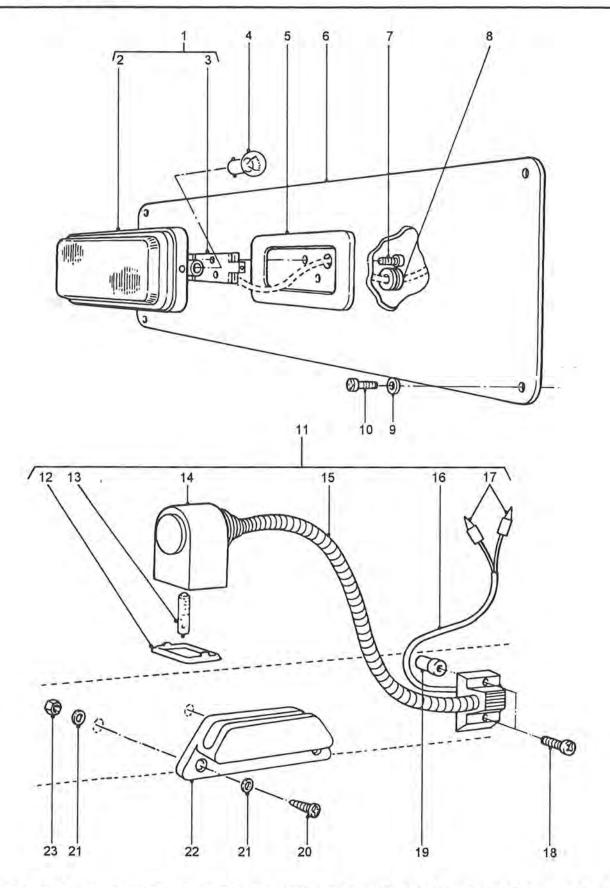


INTERIOR LAMP AND MAP READING LAMP - CAB

-	QJD /1/1	INTERIOR LAMP AND M	AP READING LAMP -	CAB								
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186		2209			2212	2219	CP
1	STC251	LAMP-INTERIOR	6220-66-128-6113	1	1	11	1	1	1		1	
2	NSS											
3	NSS											
4	GLB382	GLOBE-12V, 21W	6240-66-010-8161	1	1	- 1	1	1	1		1	
5	MWC9601	GASKET-LAMP		1	1	1	1	1	1		1	
6	HYG3497	PLATE-COVER		1	1	11	1	1	Ì		1	
7	SE104121L	SCREW		2	2	2	2	2	2		2	
8	R312856	GROMMET	5325-66-089-5324	1	1	1	1	1	1		1	
9	WL105004	WASHER-LOCK	5310-66-128-5784	6	6	6	6	6	6		6	
10	SE105204	SCREW	5305-66-128-4955	6	6	6	6	6	6		6	
11	AYG9759	MAP LIGHT	6220-66-128-4245	1	1	1	1	1	1	1	1	
12	NSS											
13	YL125	GLOBE-MAP LIGHT	6240-66-128-4237	1	1	1	1	1	1	1	1	
14	NSS											
15	NSS											
16	NSS											
17	NSS											
18	SE104164	SCREW	5305-66-128-5817	2	2	2	2	2	2	2	2	
19	MM104301	RIVNUT		2	2	2	2	2	2	2	2	
20	SE104204	SCREW	5305-66-128-4574	2	2	2	2	2	2	2	2	
21	WA104004L	WASHER-PLAIN	5310-99-550-3198	4	4	4	4	4	4	4	4	
22	R392954	HOOK-RETAINING	5340-66-128-5862	1	1	1	1	1	1	1	1	
23	NY104041L	NUT-NYLOC	5310-99-119-3324	2	2	2	2	2	2	2	2	

CHANGE POINT

ARN INTRODUCTION

GROUP QJE

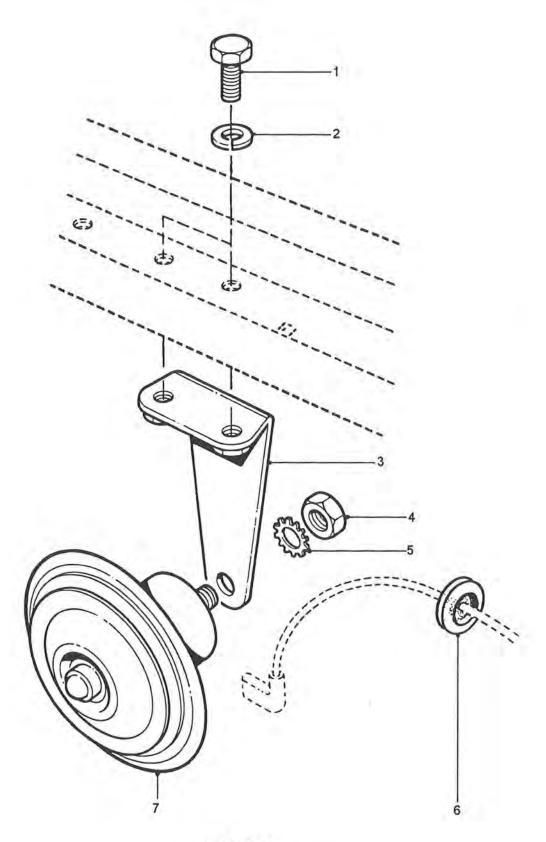


HORN

Ĭ,	QJE /1/1	HORN				DERI	VATIV	E COL	Œ			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186	E-2000		-	A second	2212	2219	CP
1	SH106141	SCREW	5305-99-137-5622	2	2	2	2	2	2	2	2	
2	WL106001L	WASHER-LOCK	5310-99-137-9232	2	2	2	2	2	2	2	2	
3	PRC1984	BRACKET-MOUNTING	5340-66-128-5027	1	1	1	1	1	1	1	1	
4	NT108041L	NUT	5310-99-139-0313	1	1	1	1	1	1	1	1	
5	WE108001L	WASHER-LOCK	5310-66-128-4577	1	1	1	1	1	1	1	1	
6	R235113	GROMMET	5325-99-804-8115	Ť	1	đ	1	1	1	1	1	
7	PRC2057	HORN	2590-99-797-3883	1	1	1	1	1	1	1	1	

CHANGE POINT

ARN INTRODUCTION


GROUP QJF

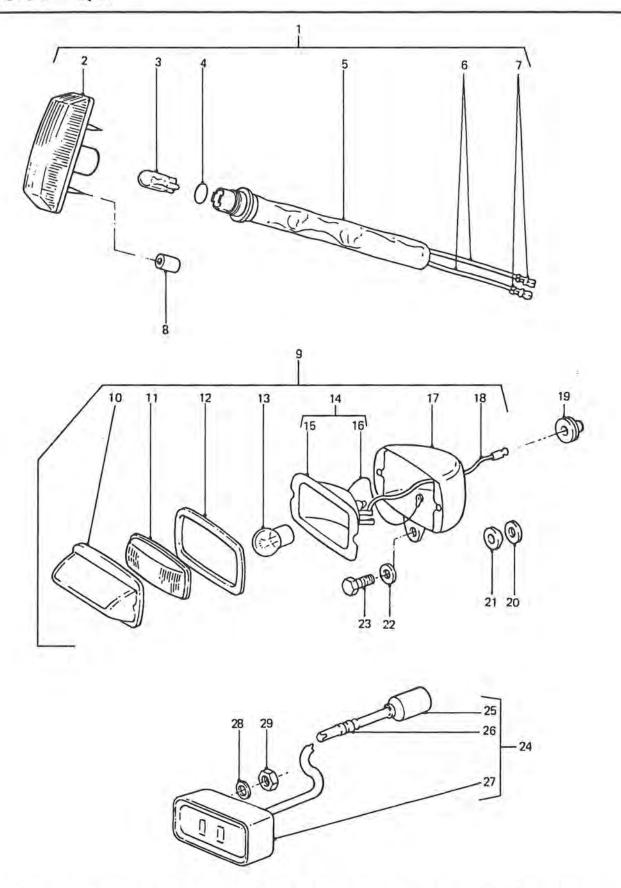

SIDE REPEATER, REDUCED HEADLAMP AND FRONT BLACKOUT LAMP

1	QJF /1/1	SIDE REPEATER, REDUCE	ED HEADLAMP ANI	D FRO	NT B	LAC	KOUT	LAN	1P			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186		2209			2212	2219 CF	1
t	PRC7044	LAMP-REPEATER (INCLUDES ITEMS 2 TO 7)	6220-66-128-5301	2	2	2	2	2	2	2	2	
2	NSS	LENS										
3	BFS501	GLOBE-12V, 5W	6240-99-995-2312	2	2	2	2	2	2	2	2	
4	NSS											
5	NSS											
6	NSS											
7	NSS											
8	MWC9606	BUSH-FRICTION		4	4	4	4	4	4	4	4	
9	HYG2584	HEADLAMP-REDUCED (INCLUDES ITEMS 10-18, 20-23)	6220-12-121-7310	2	2	2	2	2	2	2	2	
10	HYL9619	RIM- BLACKOUT HEADLAMP	6220-66-026-3719	2	2	2	2	2	2	2	2	
11	NSS											
12	NSS											
13	BFS221	GLOBE-12V, 18W	6240-66-028-3519	2	2	2	2	2	2	2	2	
14	NSS											
15	NSS											
16	NSS											
17	ISS											
18	AYG9761	CABLE- REDUCED HEADLAMP		2	2	2	2	2	2	2	2	
19	MYH3345	GROMMET	5325-66-128-4578	2	2	2	2	2	2	2	2	
20	NSS											
21	NSS											
22	NSS											
23	NSS											
24	AYG9726	LAMP-BLACKOUT MARKER (INCLUDES ITEMS 25-27)	6220-66-128-4247	2	2	2	2	2	2	2	2	

GROUP QJF

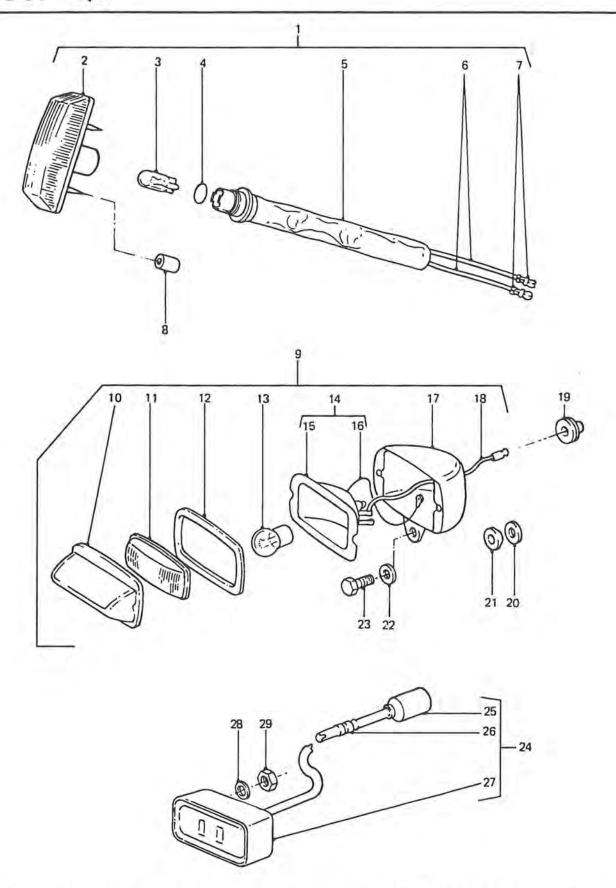


SIDE REPEATER, REDUCED HEADLAMP AND FRONT BLACKOUT LAMP

1	QJF /1/1	SIDE REPEATER, REDUCE	D HEADLAMP AND	FRO	NT B	LACI	COUT VITAV	FLAN	/IP			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186		2007/20		The second second	2212	2219	CP
25	NSS											
26	NSS											
27	NSS											
28	WA105001L	WASHER-PLAIN	5310-99-122-3032	2	2	2	2	2	2	2	2	
29	NY808041	NUT-NYLOC	5310-66-128-4579	2	2	2	2	2	2	2	2	

ARN INTRODUCTION

CHANGE POINT

GROUP QJG

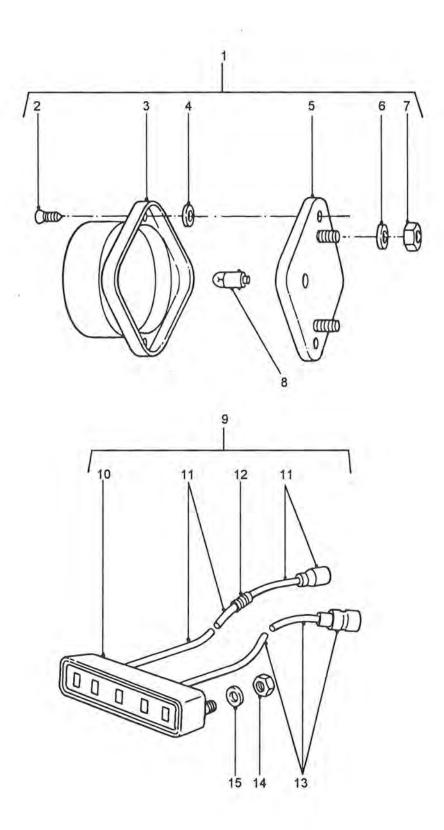


CONVOY AND BLACKOUT LAMPS

7		QJG /1/1	CONVOY AND BLACKOU	T LAMPS			DEDI	VATIN	F 00F				
1	1	PART NO.	DESCRIPTION	NSN	2185	2186			2210		2212	2219	CP
1		AYG9596	LAMP-CONVOY (INCLUDES ITEMS 2-7)	6220-66-128-4242	1	1	1	1	1	1	1	1	
2		NSS											
3		NSS											
4		NSS											
5		NSS											
6		NSS											
7		NSS											
8		MYH3264	BULB-12V, 2W	6240-66-030-7433	1	1	1	1	1	1	1	1	
9		AYG9727	LAMP-BLACKOUT-REAR (INCLUDES ITEMS 10-13)	6220-01-088-5915	2	2	2	2	2	2	2	2	
1		NSS											
11		NSS											
12		NSS											
13		NSS											
14		NY808011	NUT-NYLOC	5310-66-128-4580	4	4	4	4	4	4	4	4	
15	i	WA105001L	WASHER-PLAIN	5310-99-122-3032	4	4	4	4	4	4	4	4	
		AYG5984	BRACKET-CONVOY LAMP TO CHASSIS		1	1	1	1	1	1	1	1	
		MYH3337	SCREW-BRACKET TO CHASSIS	5305-66-128-5341	2	2	2	2	2	2	2	2	

CHANGE POINT

ARN INTRODUCTION

GROUP QJH/1 SHEET 1

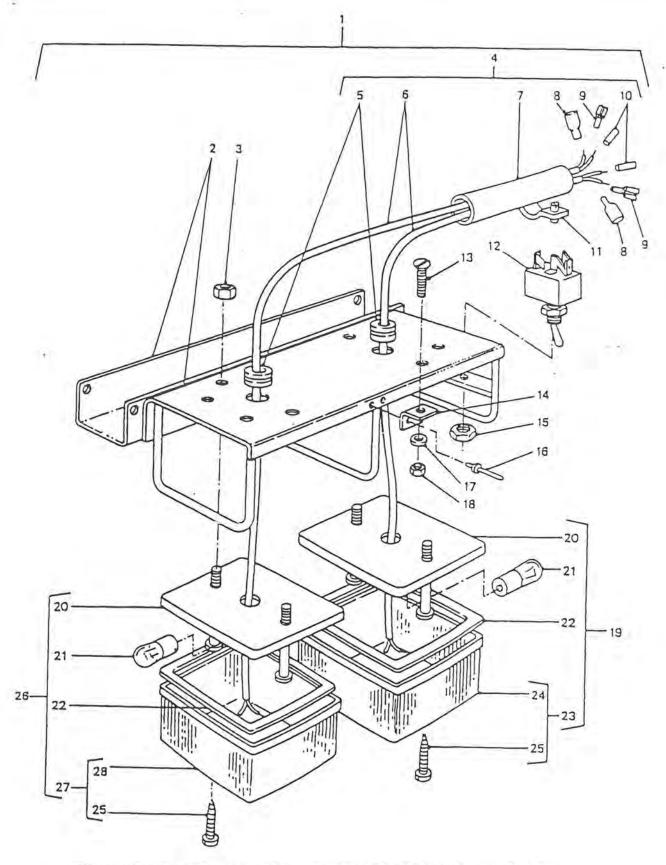

INTERIOR LAMP ASSEMBLY - FFR
- AIR DEFENCE ONLY

6	~ W 444		LAND ROVER PAR	
4427	QJH /1/1	INTERIOR LAMP ASSEMB		DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
1	AYG9803	LAMP ASSY-INTERIOR-FFR (INCLUDES ITEMS 2 - 10, 12, 15, 19 - 28)	6240-66-128-8468	1
2	NSS			
3	NY106041L	NUT-NYLOC	5310-99-138-8423	i di
4	AYG9925	HARNESS-LAMP		7
5	NSS			
6	NSS			
7	NSS			
8/	NSS			
9	NSS			
10	NSS			
11	MYH3280	CLIP-CABLE	5340-66-128-4596	6
12	AYG9800	SWITCH-LAMP	5930-66-128-5304	i i
13	SF106251	SCREW	5305-66-128-5452	id.
14	HYG2665	STEADY-LAMP		1.1
15	NSS			
16	RA610166L	POP RIVET		2
17	WA106041L	WASHER-PLAIN	5310-66-098-4440	2
18	MYH3315	NUT-NYLOC	5310-66-128-4648	2
19	AYG9791	LAMP ASSY-CLEAR	6220-66-128-5056	1.0
20	NSS			
21	HYL8585	BULB	6240-00-295-2668	2
22	HYL8648	GASKET-LENS		2
23	HYL8646	LENS-CLEAR	6220-66-128-5058	1
24	NSS			
25	NSS			
26	AYG9792	LAMP ASSY-RED	6220-66-128-5055	(4)
27	HYL8647	LENS-RED	6220-66-128-5057	(41)


CHANGE POINT

NSS

28

ARN INTRODUCTION


GROUP QJH/1 SHEET 2

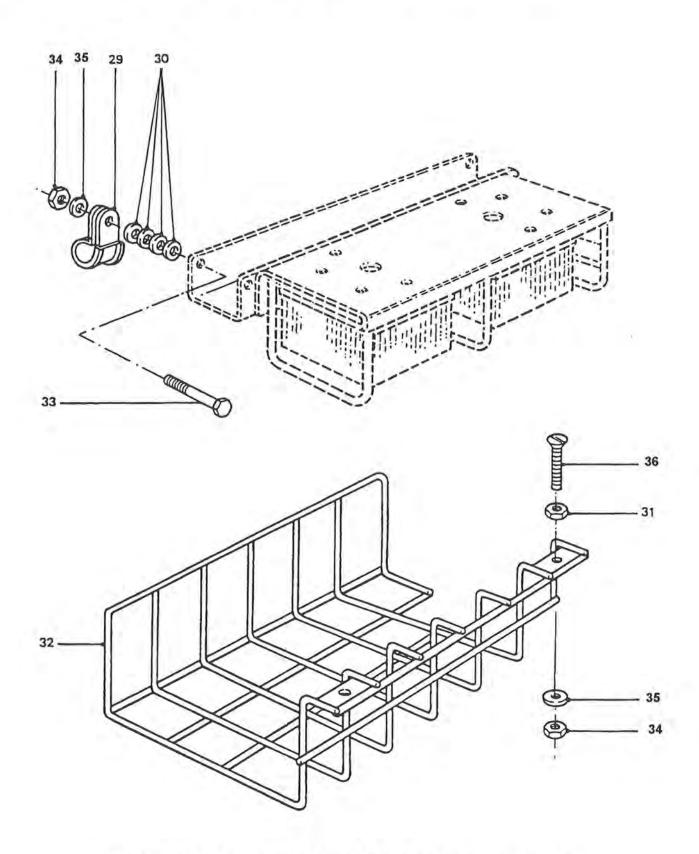

INTERIOR LAMP ASSEMBLY - FFR - AIR DEFENCE ONLY- CONTINUED

	QJH /1/2	INTERIOR LAMP ASSEMBLY	Y - FFR - AIR DEF	ENCE - CONTINUED DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
29	BYG9026	P CLIP		2
30	WJ106001L	WASHER-PLAIN	5310-66-128-4699	10
31	NH106041L	NUT	5310-66-098-4401	2
32	BYG9013	GUARD-LAMP		T'
33	BH106141L	BOLT	5305-99-122-5252	2
34	MYH3315	NUT-NYLOC	5310-66-128-4648	4
35	WA106041L	WASHER-PLAIN	5310-66-098-4440	4
36	SF106251	SCREW	5305-66-128-5452	2
CHA	E POINT	ARN INTRODUCTION		

GROUP QJJ

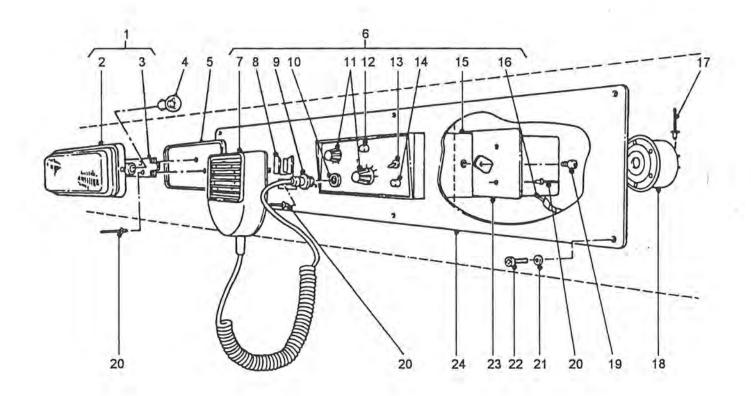


HEADER RAIL LAMP, SIREN CONTROLS AND WARNING BUZZER - AMBULANCE ONLY

8	QJJ /1/1	HEADER RAIL LAMP, SIRE	N CONTROLS, & V	WARNING BUZZER - AMBULANCE
ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
1	STC251	LAMP-INTERIOR	6220-66-128-6113	1
2	NSS			
3	NSS			
4	GLB382	GLOBE-12V, 21W	6240-66-010-8161	1
5	MWC9601	GASKET-LAMP		1
6	HYL9491	SIREN & MICROPHONE ASSY (INCLUDES ITEMS 7-16)	5965-66-128-5916	1
7	HYL9492	MICROPHONE	5965-66-128-5869	1
8	NSS			
9	HYL9549	PLUG-MICROPHONE		1
10	HYL9550	SOCKET-MICROPHONE		1
11	HYL9551	KNOB-SWITCHES		2
12	HYL9552	LENS-YELLOW		1
13	HYL9553	SWITCH		i
14	HYL9554	LENS-RED		1
15	NSS			
16	NSS			
17	RU612083	POP RIVET		1
18	HYL9493	BUZZER-WARNING		1
19	SS105121	SCREW		2
20	RU612123	POP RIVET		8
21	WL105004	WASHER-LOCK	5310-66-128-5784	6
22	SE105204	SCREW	5305-66-128-4955	6
23	HYL9494	BRACKET-RH-CONTROL BC		1:
23	HYL9495	BRACKET-LH-CONTROL BO		1
24	HYG3497	PLATE-COVER		1
9.111		141 2010 XIII.20 Z Wellies		

CHANGE POINT

ARN INTRODUCTION

GROUP QJK

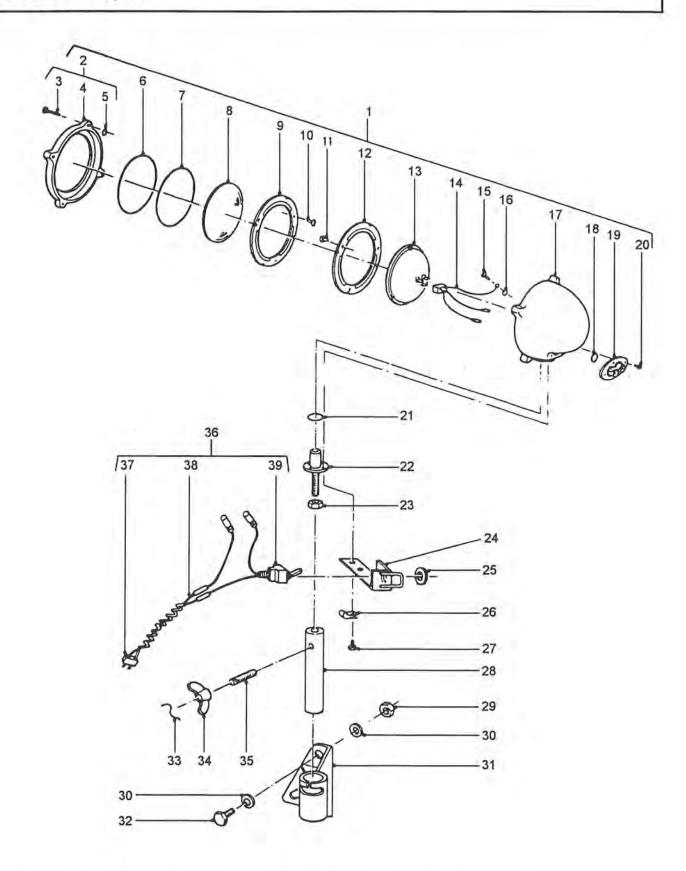


INFRARED LAMP ASSEMBLY AND MOUNTINGS - LRPV ONLY

QJK /1/1 INFRARED LAMP ASSEMBLY AND MOUNTINGS - LRPV ONLY

ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
1	BYG9207	LAMP ASSY-INFRA RED (INCLUDES ITEMS 2-28 AND 33 TO 36)	6220-66-128-6287	1
2	NSS		6220-07-962-2263	
3	NSS		5305-00-737-5694	
4	NSS		6220-00-014-7069	
5	NSS		5340-00-732-0642	
6	NSS		5330-00-159-3469	
7	NSS		5330-00-543-7160	
8	NSS		6220-00-557-8228	
9	NSS		6220-00-796-2261	
10	NSS			
11	NSS			
12	NSS		6220-00-421-1671	
13	BYG9198	SEALED BEAM-12V	6240-66-128-6288	3
14	NSS		2590-00-707-7532	
15	NSS		5305-00-984-6189	
16	NSS		5310-66-014-1505	
17	NSS			
18	NSS		5330-00-618-0801	
19	NSS			
20	NSS		5305-00-889-3002	
21	NSS		5330-00-599-0507	
22	NSS		5340-00-404-7446	
23	NSS		5310-66-019-3959	
24	BYG9210	MOUNTING-SWITCH		1
25	NSS			
26	MYH2413	'P' CLIP		7
27	NSS		5305-00-013-2969	
28	BYG9209	HANDLE-LAMP		4


GROUP QJK

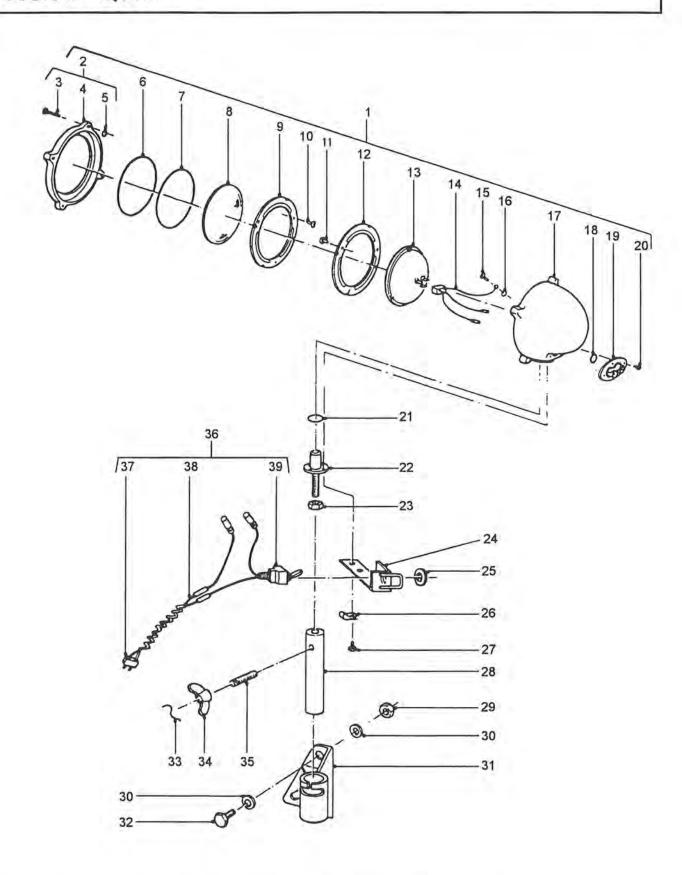

INFRARED LAMP ASSEMBLY AND MOUNTINGS - LRPV ONLY

1	QJK /1/1	INFRARED LAMP ASSEME	BLY AND MOUNTIN	IGS - LRPV ONLY DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
29	NY110041L	NUT-NYLOC	5310-99-122-5497	-1
30	WA110061L	WASHER-PLAIN	5310-99-122-6476	2
31	HYG5702	MOUNTING-LAMP		1.0
32	BH110151	BOLT		1
33	NSS			
34	NB110010	NUT-WING	5310-66-128-6289	t
35	BYG9211	STUD	5307-66-128-6290	- 19 -
36	BYG9208	HARNESS ASSY (INCLUDES ITEMS 25, 37-39)	Tr.	1
37	MYH3702	PLUG-SINGLE PIN		2
38	NSS			
39	BYG9206	SWITCH-TOGGLE	5930-66-128-6292	1
CHAN	IGE POINT	ARN INTRODUCTION	<u>.</u>	8.1

GROUP QKA/1

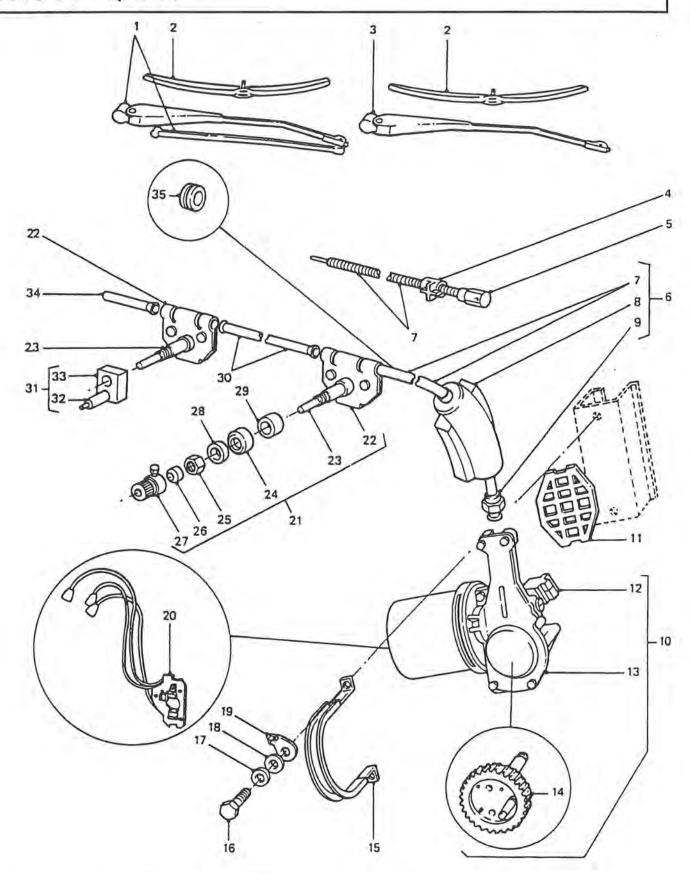


WINDSCREEN WIPER MOTOR AND LINKAGE
- EXCEPT LRPV

WINDSCREEN WIPER MOTOR AND LINKAGE - EXCEPT LRPV QKA /1/1 **DERIVATIVE CODE** 2185 2186 2208 2209 2210 2211 2212 2219 CP ITEM PART NO. DESCRIPTION NSN AYG9852 ARM-WIPER-RH 2540-66-128-5615 AYG9853 **BLADE-WIPER** 2540-66-128-5616 ARM-WIPER-LH 2540-66-128-5617 AYG9876 **FERRULE** 37H3694L **RACK-WIPER** 2540-66-128-4976 RTC4682 TUBE-WHEELBOX AYG9869 2540-66-128-5618 NSS NSS NSS MOTOR-WIPER (INCLUDES 2540-99-733-8614 RTC4678 ITEMS 12-14, 20) PAD 5340-99-819-8231 R150844 SWITCH-PARKING (PART R520160 2540-99-821-9330 OF RTC4678) NSS GEAR WIPER MOTOR (PART R517646 OF RTC4678) BHA4790L STRAP & SLEEVE 2540-99-824-3663 FS106161 SCREW 5305-99-122-5360 WL106001L WASHER-LOCK 5310-99-137-9232 WA106041L WASHER-PLAIN 5310-66-098-4440 R505205 TERMINAL-LUCAR 5940-99-805-0400 RTC5575 **BRUSH SET-WIPER MOTOR** 5977-66-128-4891 WHEEL BOX-WIPER PRC8495 2540-99-495-7006 NSS NSS NSS NSS

NSS


GROUP QKA/1

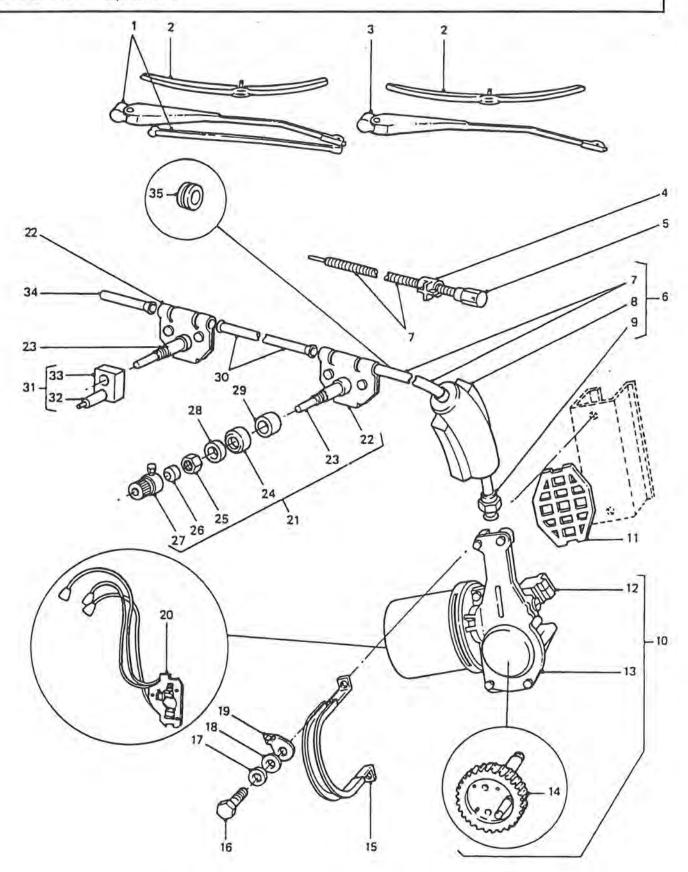

WINDSCREEN WIPER MOTOR AND LINKAGE
- EXCEPT LRPV

	QKA /1/1	WINDSCREEN WIPER MOTO	OR AND LINKAGE	- EX	CEPT	LRP	V VATIV	F COL	F			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186	1-1-1-1	2209	-		2212	2219	CP
27	RTC4480	DRUM-SPLINED		1	1	1	1	1		1	1	
28	AYG9857	SPACER-W/BOX-RH & LH SIDES-EXTERNAL		2	2	2	2	2		2	2	
29	AYG9877	SPACER-W/BOX-LH SIDE-INTERNAL		1	1	1	Ť	1		t	1	
30	AYG9870	TUBE-WHEELBOX	2540-66-128-5619	1	4	1	1	1		1	1	
31	AYG9859	PIN & SPACER-RH SIDE-INTERNAL		1	1	1	1	1		1	1	
32	NSS											
33	NSS											
34	AYG9871	TUBE-WHEELBOX END	2540-66-128-5620	1	1	1	1	1		1	1	
35	R269257	GROMMET	5325-99-828-1011	1	1	1	1	1	1-	Ì	1	
CHAI	ICE DOINT	ARN INTRODUCTION										

GROUP QKA/2

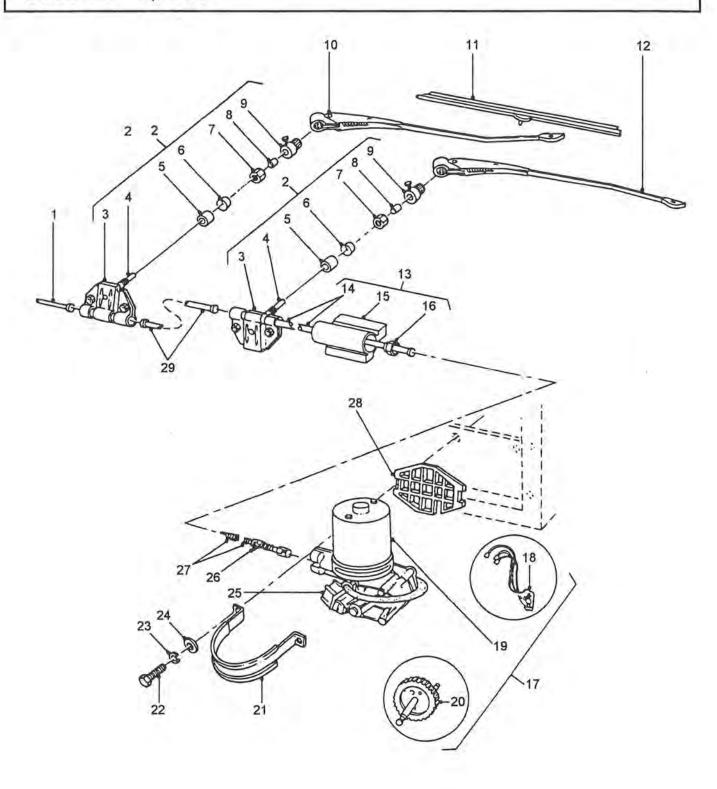


WINDSCREEN WIPER MOTOR AND LINKAGE - LRPV ONLY

QKA /2/1 WINDSCREEN WIPER MOTOR AND LINKAGE - LRPV ONLY

	QKA /2/1	WINDSCREEN WIPER MOT	FOR AND LINKAGE	- LRPV ONLY
ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
1	AYG9871	TUBE-WHEELBOX END	2540-66-128-5620	1
2	PRC8495	WHEELBOX-WIPER	2540-99-495-7006	2
3	NSS			
4	NSS			
5	HYG4075	SPACER WHEELBOX-INTERNAL		.2
6	NSS			
7	NSS			
8	NSS			
9	RTC4480	DRUM-SPLINED		1
10	AYG9876	ARM-WIPER-LH	2540-66-128-5617	্ৰ
11	AYG9853	BLADE-WIPER	2540-66-128-5616	2
12	BYG9049	ARM-WIPER-RH	2540-66-128-6297	1.5
13	BYG9084	TUBE-WIPER MOTOR TO WHEELBOX	2590-66-128-6295	4
14	NSS			
15	NSS			
16	NSS			
17	RTC4678	MOTOR-WIPER (INCLUDES ITEMS 18-20, 25)	2540-99-733-8614	1
18	RTC5575	BRUSH SET-WIPER MOTOR	5977-66-128-4891	4
19	NSS			
20	R517646	GEAR-WIPER MOTOR (PART OF RTC4678)		1
21	BHA4790L	STRAP & SLEEVE	2540-99-824-3663	ain ain
22	FS106161	SCREW	5305-99-122-5360	2
23	WL106001L	WASHER-LOCK	5310-99-137-9232	2
24	WA106041L	WASHER-PLAIN	5310-66-098-4440	2
	MM106301	RIVNUT	5310-66-128-5543	2
25	R520160	SWITCH-PARKING (PART OF RTC4678)	2540-99-821-9330	1

GROUP QKA/2

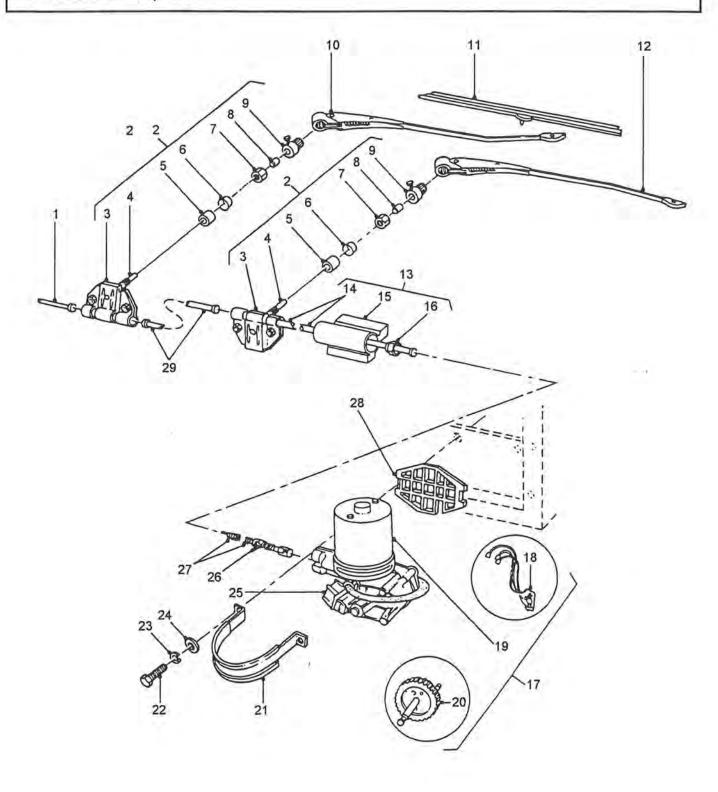


WINDSCREEN WIPER MOTOR AND LINKAGE - LRPV ONLY

	QKA /2/1	WINDSCREEN WIPER MOTOR AND LINKAGE - LRPV ONLY DERIVATIVE CODE								
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP						
26	37H3694L	FERRULE		t						
27	RTC4682	RACK-WIPER	2540-66-128-4976	1						
28	R150844	PAD	5340-99-819-8231	1						
29	HYG3886	TUBE-WHEELBOX TO WHEELBOX	2590-66-128-6294	-1						
	HYG5930	SPACER-WIPER MOTOR TO WINDSCREEN FRAME		-1						

CHANGE POINT

ARN INTRODUCTION


GROUP QKB

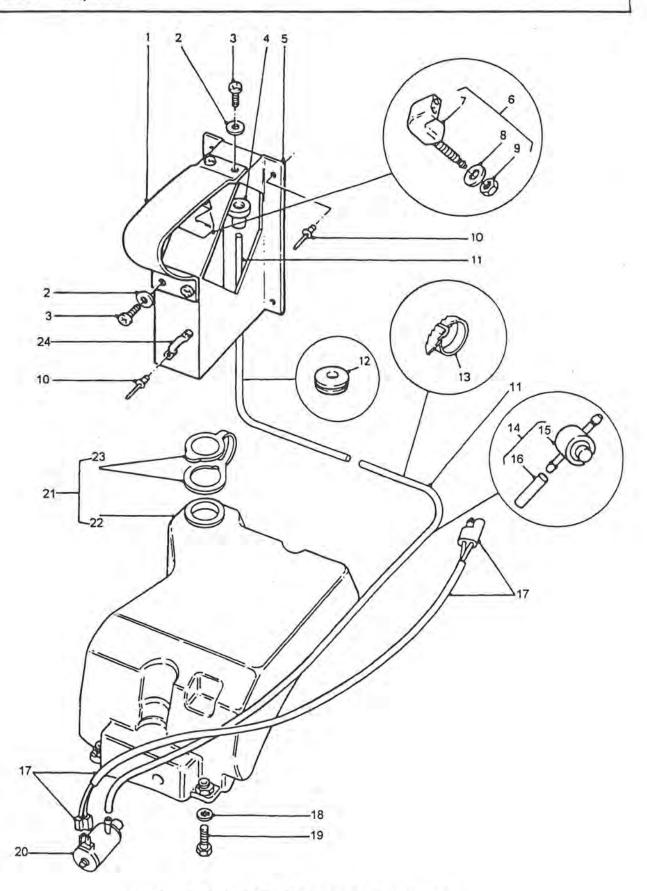

WINDSCREEN WASHER

X.	QKB /1/1	WINDSCREEN WASHER				DEDI	VATIV	F 00F	e			
ITEM	PART NO.	DESCRIPTION	<u>NSN</u>	2185	2186					2212	2219	<u>CP</u>
1	HYG5823	STRIP-PROTECTION- SCREENWASH JET							ŧ)			
2	WL106001L	WASHER-LOCK	5310-99-137-9232						4			
3	SE106161L	SCREW	5305-99-135-0440						4			
4	MM106301	RIVNUT	5310-66-128-5543						4			
5	HYG5822	MOUNTING-SCREENWASH JET							1			
6	PRC5802	JET ASSY	2540-66-128-5621	1	t	Ĭ	1	1	j i	1	4	
7	NSS											
8	ISS											3.
9	NSS											
10	RU612183	POP RIVET	5320-66-128-4938						6			
11	RTC3650/3200	TUBING-SCREENWASH		1	1	1	1	1		1	1	
11	RTC3650/2400	TUBING-SCREENWASH							1			
12	R269257	GROMMET	5325-99-828-1011	1	1	1	1	t	1	1	1	
12	MYH3587	GROMMET							1			
13	R240429	CLIP		2	2	2	2	2		2	2	
14	PRC8051	VALVE-NON RETURN		1	1	1	1	1	1	1	4	
15	NSS											
16	NSS											
17	PRC3794	CABLE-WASHER MOTOR		1	1	1	1	1	1	1	1	
18	WF600041	WASHER-LOCK-CONTAINER TO WING	5310-66-016-5982	3	3	3	3	3	3	3	3	
19	R78210	SCREW	5305-99-849-8616	3	3	3	3	3	3	3	3	
20	GWW1010	PUMP-WASHER	2540-66-128-4975	1	1	1	1	1	1	4	1	
	RTC5827	GROMMET-PUMP TO RESERVOIR		1	1	1	1	1	1	1	1	
21	PRC5756	RESERVOIR ASSY	2540-66-128-6296	1	1	1	1	1	1	1	1	
22	NSS											


GROUP QKB

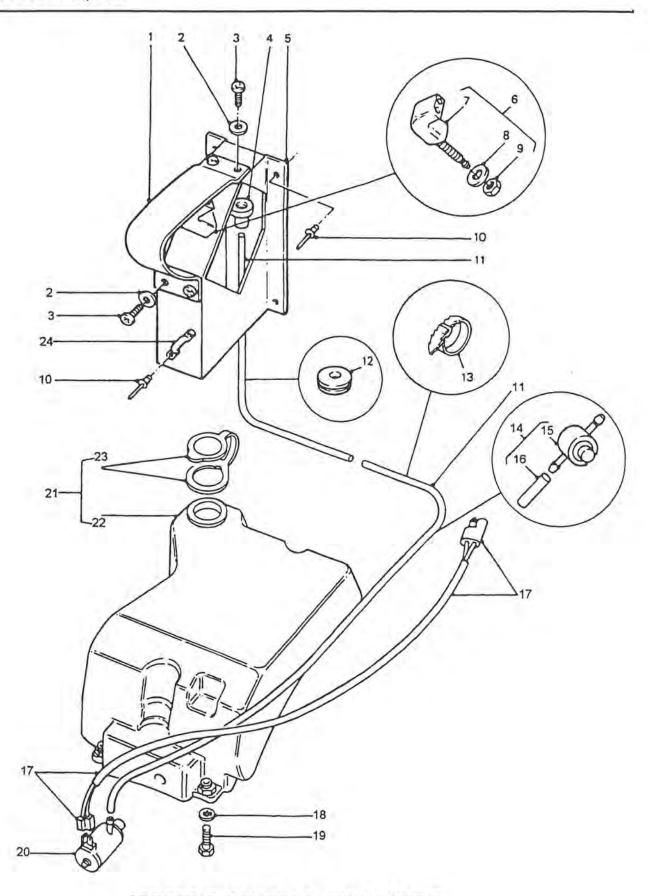

WINDSCREEN WASHER

1	QKB/1/1	WINDSCREEN WASHER		DERIVATIVE CODE								
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186	2208	2209	2210	2211	2212	2219 CP	
23	PRC2854	CAP-RESERVOIR	2540-99-729-2983	1	. 1	1	1	1	1	1	1	
24	R395143	STAPLE	2540-99-824-6204						1			
CHAN	IGE POINT	ARN INTRODUCTION										


GROUP QL/1

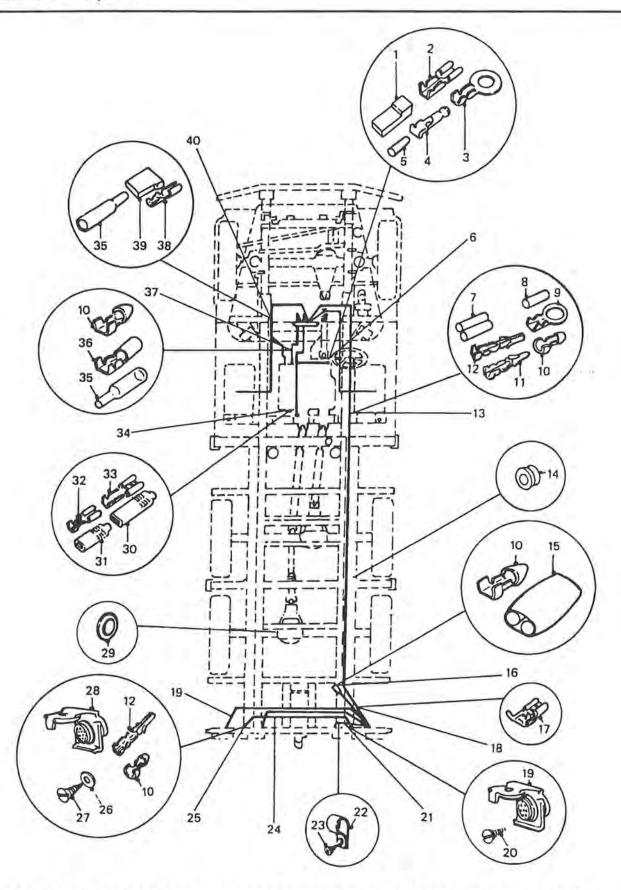

REAR WIRING HARNESSES AND FITTINGS
- EXCEPT LRPV

- 0	QL /1/1	REAR WIRING HARNESSE	S AND FITTINGS -	EXCE	PT L	RPV						
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186			2210		2212	2219	O CP
1	NSS											
2	NSS											
3	NSS											
4	NSS											
5	NSS											
6	PRC3085	LEAD-DIFF. LOCK SWITCH TO CHASSIS		Ť	1	į	1	1		d.	ij	
7	NSS											
8	NSS											
9	ISS											
10	MYH2565	TERMINAL	5940-66-128-4737	7	7	7	7	7		7	7	
11	NSS									1		
12	NSS											
13	AYG9971	HARNESS-CHASSIS		1	1	1	1	1		1		
	BYG9065	HARNESS-CHASSIS		1	1	1	1	1		ì	1	01
14	R589452	GROMMET	5325-66-098-2816	4	4	4	4	4		4	4	
15	AYH9037	CONNECTOR-DOUBLE	5940-66-036-8141	1	1	1	1	1		1	1	
16	AYG9577	HARNESS-CONVOY LAMP		1	1	1	1	1		1	1	
17	AYK9152	TERMINAL	5940-66-119-8561	8	8	8	8	8		8	8	
18	YG9970	HARNESS-REAR LAMPS		2	2	2	2	2		2	2	
19	AYG9967	PLUG & HARNESS-7 PIN	5935-66-055-1378	1	1	1	1	1		1	1	
20	AC610101	SCREW		3	3	3	3	3		3	3	
21	AYG9967	PLUG & HARNESS-7 PIN	5935-66-055-1378	1	1	1	1	1		1	1	
22	MYH2697	'P' CLIP	5340-66-128-4546	6	6	6	6	6		6	6	
23	MYH3337	SCREW	5305-66-128-5341	6	6	6	6	6		6	6	
24	AYG9741	CABLE-BLACKOUT LIGHT		2	2	2	2	2		2	2	
25	BYG9079	CABLE ASSY-NATO PLUG		1	1	1	1	1		1	1	
26	WL106001L	WASHER-LOCK	5310-99-137-9232	4	4	4	4	4	4		4	

GROUP QL/1

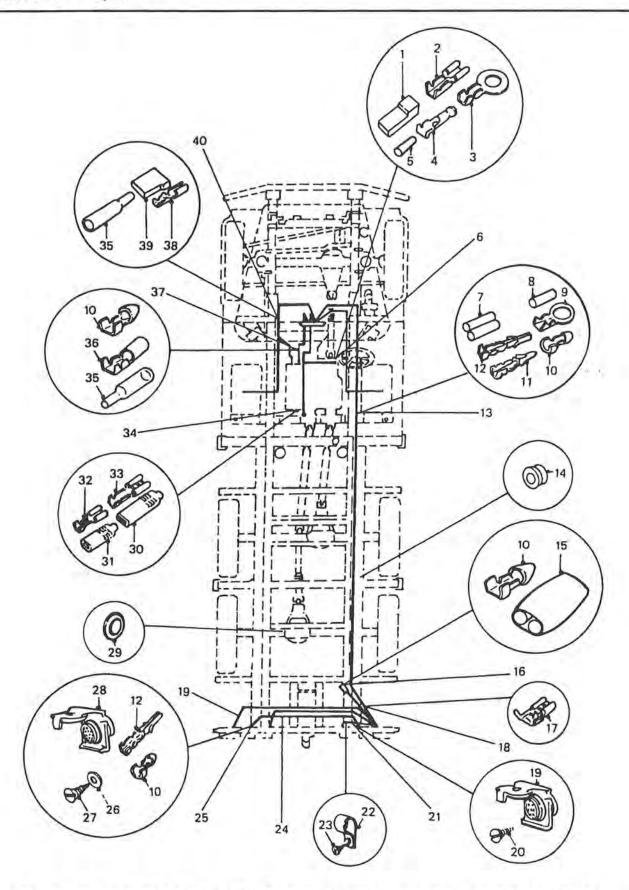

REAR WIRING HARNESSES AND FITTINGS
- EXCEPT LRPV

-T	QL /1/1	REAR WIRING HARNESS	ES AND FITTINGS -	EXCE	PT L			·= 00				
ITEM	PART NO.	DESCRIPTION	<u>NSN</u>	2185	2186			2210		2212	2219	CP
27	MYH3122	SCREW	5305-66-128-4597	4	4	4	4	4	4		4	
28	HYG582	NATO SOCKET	5935-66-010-7853	1	1	1	1	1	1		1	
29	MYH3206	PLUG-BLANKING	5340-66-128-5456	2	2	2	2	2		2	2	
30	NSS											
31	NSS											
32	NSS											
33	NSS											
34	AYG9897	CABLE-6WD LIGHT TO SWITCH		1	1	1	1	1		1	1	
35	YG9120	INSULATOR		3	3	3	3	3		3	3	
36	NSS											
37	PRC2032	CABLE-REVERSE LIGHT		1	1	1	1	1		1	1	
38	NSS									3		
39	NSS											
40	AYG9962	HARNESS-FUEL TANK TO CHANGE VALVE		1	1	1	1	1		1	1	
	MYH1780	CONNECTOR	5940-66-017-9989	2	2	2	2	2		2	2	
	MYH1763	CABLE TIE-ELECTRICAL COMPONENTS	5975-12-199-8964	13	13	13	13	13		13	13	
	R622324	'P' CLIP-NATO PLUG CABLE TO CHASSIS REAR X/MEMBER	5340-66-106-1527	2	2	2	2	2		2	2	
- (MYH3337	SCREW	5305-66-128-5341	2	2	2	2	2		2	2	
	AAU3686	CABLE STRAP-FUEL HARNESS TO RH/LH LONGITUDINAL		4	4	4	4	4		4	4	


CHANGE POINT

1

ARN INTRODUCTION

50-842 ELECTRONIC REPAIR VEHICLE (BLADE TYPE FUSES)


GROUP QL/2

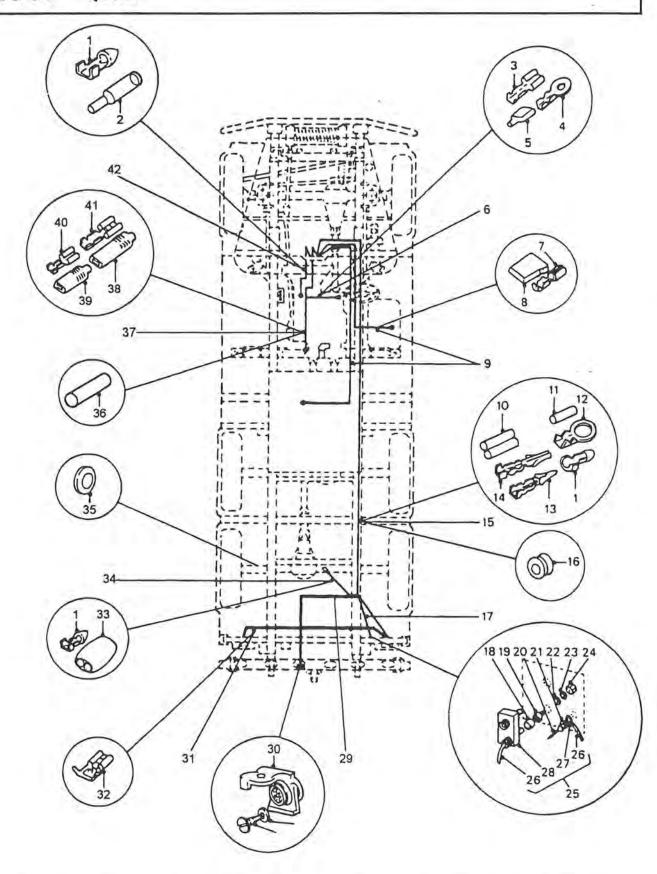

REAR WIRING HARNESSES AND FITTINGS
- LRPV ONLY

1	QL /2/1	REAR WIRING HARNESSI	ES AND FITTINGS	- LRPV ONLY
ITEM	PART NO.	DESCRIPTION	NSN	DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP
1	MYH2565	TERMINAL	5940-66-128-4737	7
2	AYG9120	INSULATOR		3
3	NSS			
4	NSS			
5	NSS			
6	PRC3085	LEAD-DIFF, LOCK SWITCH TO CHASSIS HARNESS		1
7	AYG9119	RECEPTACLE		2
8	NSS			
9 (4YG9962	HARNESS-FUEL TANK TO CHANGE VALVE		1
	SE105121L	SCREW-HARNESS TO CHANGE RELAY MTG. BLOCK	5305-99-135-0429	1
	WA105001L	WASHER-PLAIN	5310-99-122-3032	1
	WL105001L	WASHER-LOCK	5310-99-977-1102	1
	NH105041L	NUT	5310-66-098-4400	1
10	NSS			
11	NSS			
12	NSS			
13	NSS			
14 (VSS			
15	BYG9065	HARNESS-CHASSIS		1
16	R589452	GROMMET-CHASSIS HARNESS	5325-66-098-2816	4
	MYH2697	'P' CLIP-RETAINING HARNESS TO REAR CHASSIS CROSSMEMBER	5340-66-128-4546	3
	MYH3337	SCREW	5305-66-128-5341	3
17	BYG9199	CABLE ASSY-REAR INSPECTION SOCKET		1

GROUP QL/2

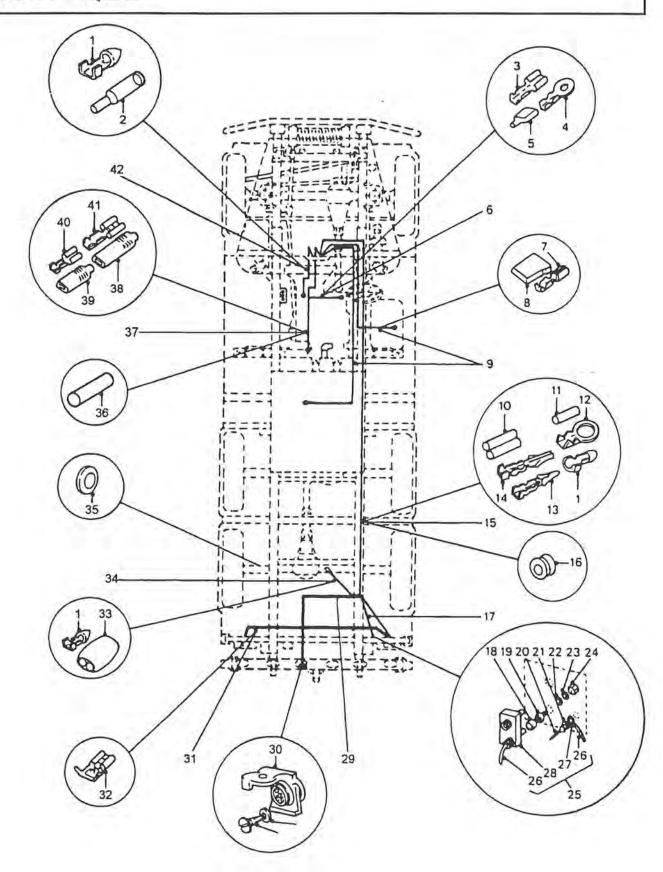

REAR WIRING HARNESSES AND FITTINGS
- LRPV ONLY

QL /2/1 REAR WIRING HARNESSES AND FITTINGS - LRPV ONLY DERIVATIVE CODE ITEM PART NO. DESCRIPTION NSN 2185 2186 2208 2209 2210 2211 2212 2219 CP 5935-99-797-3844 PRC2078 SOCKET-INSPECTION 2 18 19 PRC2080 **BUSH-INSULATION-BLACK** PRC2079 **BUSH-INSULATION-RED** 20 R78248 POP RIVET 5320-99-970-3518 1 21 WA105001L WASHER-PLAIN 5310-99-122-3032 RING-SEALING 2 22 MYH3548 23 R3052 WASHER-PLAIN 5310-99-801-5567 2 24 PRC2087 **NUT-NYLON** 2 25 BYG9070 COVER-PLUG-INSPECTION 1 TERMINAL .VSS 26 MYH3596 1 27 TERMINAL EYE 28 MYH3702 PLUG-SINGLE PIN 2 BYG9194 CABLE ASSY-NATO PLUG 29 1 30 HYG582 NATO SOCKET 5935-66-010-7853 1 SE106201L SCREW-CABLE-NATO 5305-99-796-7536 4 PLUG TO MOTOR CYCLE CRADLE WA106041L WASHER-PLAIN 5310-66-098-4440 4 NY106041L **NUT-NYLOC** 5310-99-138-8423 4 'P' CLIP-CABLE-NATO MYH3574 4 SOCKET 3E106201L SCREW-'P' CLIP TO 5305-99-796-7536 4 MOTOR CYCLE CRADLE WA106041L WASHER-PLAIN 5310-66-098-4440 4 NY106041L **NUT-NYLOC** 5310-99-138-8423 4 31 AYG9970 CABLE ASSY-REAR LAMPS 2 32 AYK9152 TERMINAL 5940-66-119-8561 8

5940-66-036-8141

BYG9001

AYH9037

33


GROMMET-CABLE-REAR

CONNECTOR-DOUBLE

LAMPS

2

GROUP QL/2

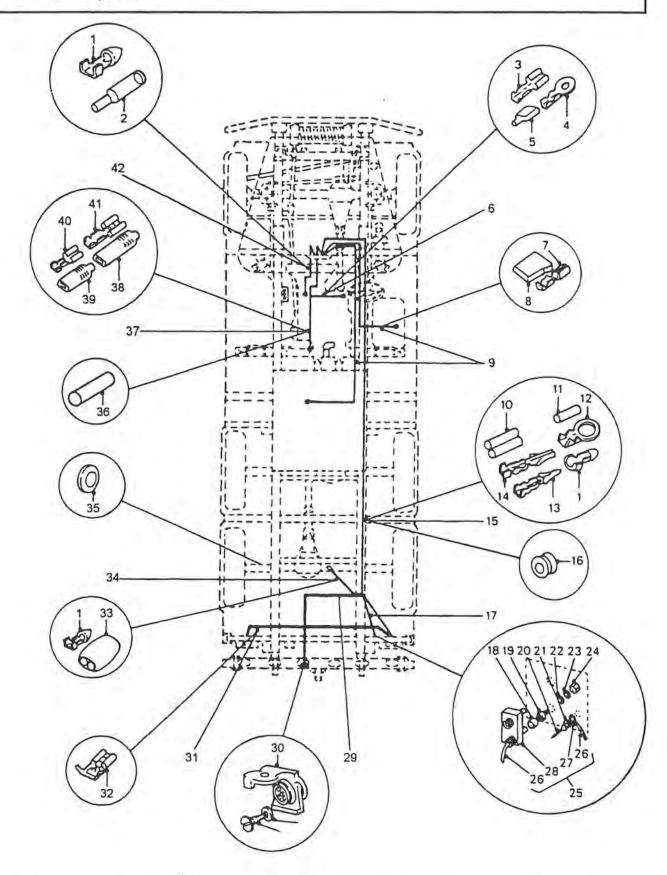


REAR WIRING HARNESSES AND FITTINGS
- LRPV ONLY

11	QL /2/1	REAR WIRING HARNESS	ES AND FITTINGS	- LRPV ONLY DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
34	AYG9577	HARNESS-CONVOY LAMP		1
35	MYH3206	PLUG-CHASSIS-REAR CROSSMEMBER	5340-66-128-5456	2
36	MYH1780	CONNECTOR	5940-66-017-9989	4
37	AYG9897	LEAD-6WD LIGHT TO SWITCH		-1
38	AYH9143	INSULATOR-TERMINAL		1
39	NSS			
40	AYG9065	RECEPTACLE		1
41	AYH9142	RECEPTACLE		-1
42	PRC2032	CABLE-REVERSE LIGHT		4
	AYG9703	CONNECTOR		1.
	MYH1763	CABLE TIE-ELECTRICAL COMPONENTS	5975-12-199-8964	15

CHANGE POINT

ARN INTRODUCTION


GROUP QLA/1 SHEET 1

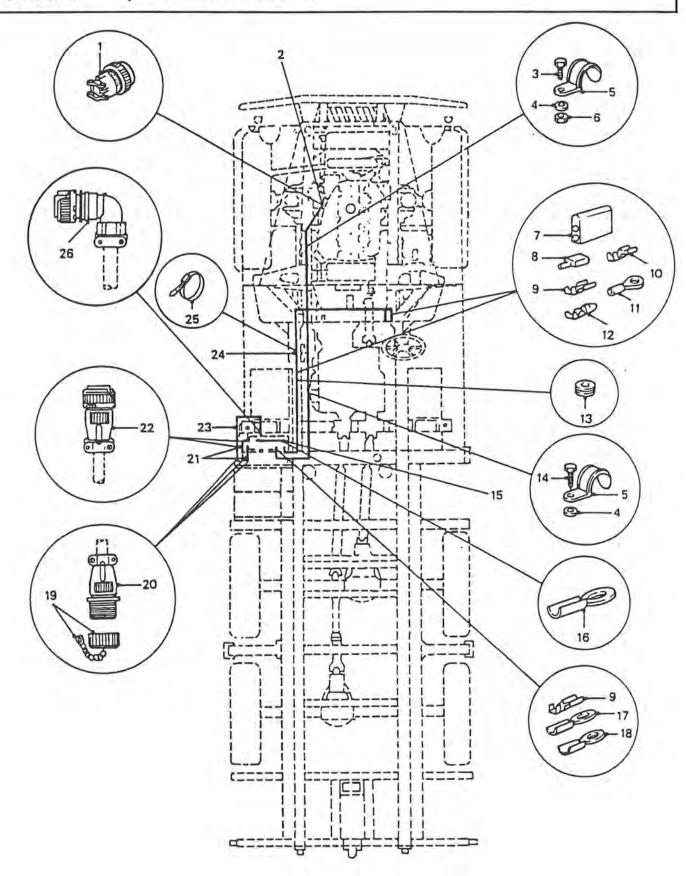

WIRING HARNESSES – FFR VEHICLES – AMBULANCE AND AIR DEFENCE

QLA /1/1 WIRING HARNESSES - FFR - AMBULANCE AND AIR DEFENCE DERIVATIVE CODE ITEM PART NO. DESCRIPTION NSN 2185 2186 2208 2209 2210 2211 2212 2219 CP BYG9006 PLUG-CANNON 5935-00-825-7282 1 1 1 1 HARNESS-DIST. BOX TO 1 2 AYG9957 24V ALTERNATOR 3 FS106201 SCREW 5305-99-122-5361 2 2 4 WC106041L WASHER-PLAIN 5310-99-122-3411 4 4 CLIP-SADDLE 5340-66-128-5339 5 HYG3502 4 4 6 NY106041L **NUT-NYLOC** 5310-99-138-8423 2 2 7 NSS 8 NSS 9 NSS 10 NSS NSS 11 12 MYH2565 TERMINAL 5940-66-128-4737 5 5 13 R269257 GROMMET 5325-99-828-1011 2 2 MYH3337 SCREW 5305-66-128-5341 2 2 14 15 AYG9921 CABLE-LINK-DIST. 1 1 **BOX-INTERNAL** NSS 16 NSS 17 18 NSS 19 AYG9963 COVER & CHAIN-PDB 5935-00-221-8620 3 3 **OUTLETS** 20 BYG9004 SOCKET 5935-66-128-5908 2 2 CABLE-DIST, BOX TO 21 AYG9883 2 2 REAR CAB PANEL-OUTLET 22 PLUG-CANNON BYG9003 5935-00-202-0960 1 1 CABLE-DIST. BOX TO 23 AYG9882 1 1 REAR CAB PANEL-INLET HARNESS-SUPP.-DIST. 24 AYG9841 1 11 **BOX TO GAUGES**

GROUP QLA/1 SHEET 1

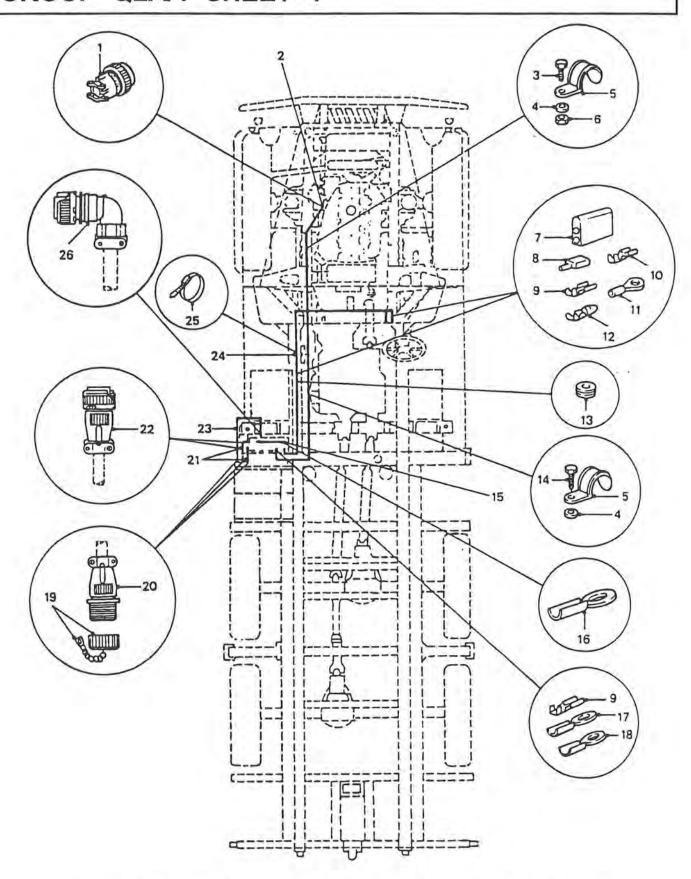


WIRING HARNESSES - FFR VEHICLES - AMBULANCE AND AIR DEFENCE

6	QLA /1/1 WIRING HARNESSES - FFR - AMBULANCE AND AIR DEFENCE DERIVATIVE CODE						
ITEM	PART NO.	DESCRIPTION	NSN		2210 2211 2212 2219 CP		
25	MYH1940	CABLE TIE	5340-99-618-3776	6	11		
26	BYG9005	PLUG-CANNON	5935-00-836-8000	1	1		
	NSS	LOCKWIRE-CANNON PLUG TO 24V ALTERNATOR					
	WA600161	WASHER-PLAIN, 24V HARNESS TO CAB REAR FLOOR PANEL		(1)	3		
	MYH3388	SCREW-CABLE TO REAR CAB PANEL		12	12		
	MYH3390	WASHER-LOCK		12	12		
8	MYH3389	NUT		12	12		
	WA103001L	WASHER-PLAIN CABLE TO REAR CAB PANEL	5310-99-122-3030	9	9		

CHANGE POINT

ARN INTRODUCTION

GROUP QLA/1 SHEET 2

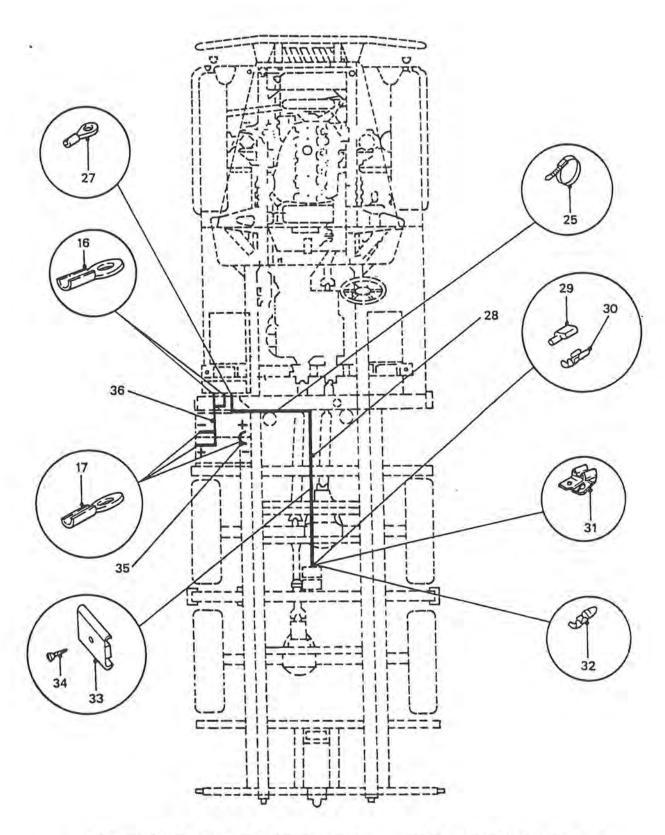


WIRING HARNESSES – FFR VEHICLES

– AMBULANCE AND AIR DEFENCE – CONTINUED

WIRING HARNESSES - FFR - AMBULANCE AND AIR DEFENCE - CONTINUED DERIVATIVE CODE QLA /1/2 2185 2186 2208 2209 2210 2211 2212 2219 CP ITEM PART NO. DESCRIPTION NSN NSS 16 17 NSS 25 MYH1940 CABLE TIE 5340-99-618-3776 6 11 NSS 27 **BYG122** CABLE ASSY-24V RED / 28 1 WHITE LAMP TO **DISTRIBUTION BOX** 29 NSS 30 NSS CONNECTOR-DOUBLE-JOIN 5940-66-036-8141 31 **1YH9037** 1 RED / WHITE HARNESS TO DIST. BOX 32 MYH2565 TERMINAL 5940-66-128-4737 .. 10 33 MYH3505 CLIP-CABLE TO CANOPY 7 FRAME 34 AD604061 SCREW AYG9920 CABLE-LINK 6140-66-128-5322 1 7 35 1 AYG9966 CABLE-BATTERY TO 6140-66-128-5887 36 11 DISTRIBUTION BOX LOCKWIRE-CANNON PLUG MYH5325/200 1 1 TO 24V ALTERNATOR 'WA600161 WASHER-PLAIN, 24V 1 HARNESS TO CAB REAR FLOOR PANEL SCREW-CABLE TO REAR **MYH3388** 12 12 CAB PANEL MYH3390 WASHER-LOCK 12 12 MYH3389 NUT 12 12 WA108001L WASHER-PLAIN CABLE TO 5310-99-122-3030 9 9 REAR CAB PANEL

CHANGE POINT ARN INTRODUCTION

GROUP QM

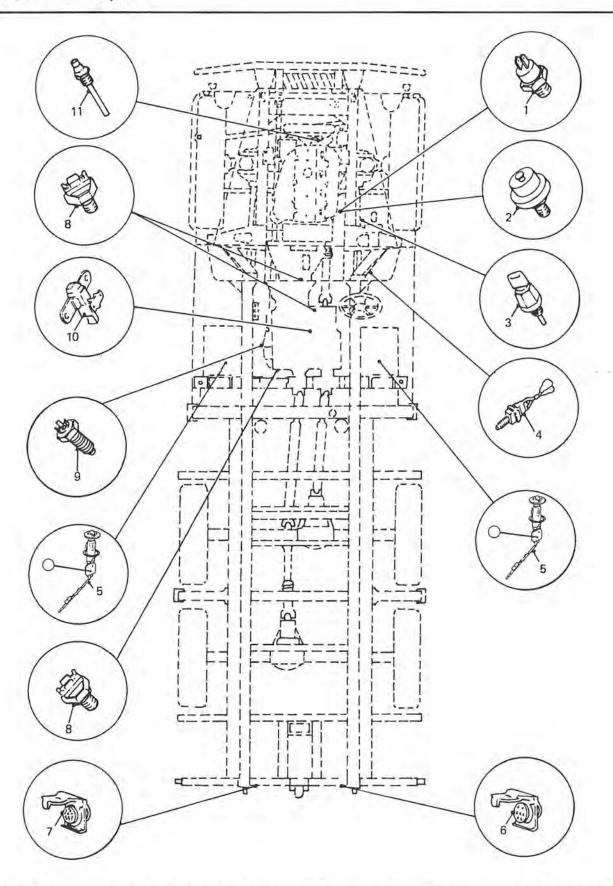


SWITCH, SENDER UNIT AND SOCKET LOCATIONS

- 4	QM /1/1	SWITCH, SENDER UNIT A	ND SOCKET LOCA	TIONS	3	DED	VATIV	- 001			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186			E COI 2210		2212	2219 CP
1	8941780030	SWITCH-PRESSURE- REVERSE LAMPS	5930-66-128-4812	1	1	Ť.	1	1	1.	1	1
2	9827202092	SWITCH-PRESSURE-OIL -ENGINE	5930-66-128-5402	10	1	1	1	1	1	1	1
	MYH3318	ADAPTOR-PRESSURE SWITCHES TO CYL. BLOCK	5340-66-128-4981	Í	1	1.	1	ă:	1	1	1
3	AAU1700	SWITCH-SHUTTLE VALVE	2530-99-839-0450	1	1	1	1	1	1	1	1
4	PRC4297	SWITCH-BRAKE WARNING LIGHT	5930-99-797-8645	1	1	1	1	1	1	1	1
5	AYG9825	UNIT-FUEL LEVEL	6680-66-128-4877	2	2	2	2	2	i	2	2
5	BYG9133	UNIT-FUEL LEVEL-LRPV ONLY	6680-66-128-6117						1		
6	AYG9967	PLUG & HARNESS-7 PIN	5935-66-055-1378	1	1	1	1	1		1	1
7	HYG582	NATO SOCKET	5935-66-010-7853	1	1	Ť	1	t	1	1	1
8	RTC4512	SWITCH-6WD	5930-99-768-3325	1	1	1	1	1	1	1	1
9	R575166	SWITCH-STOP LIGHT	5930-99-822-6376	1	1	1	d	1	1	1	1
10	ADU2888L	SWITCH-HANDBRAKE WARNING	5930-66-128-4764	1	1	1	4	1	1	4	1
11	AYG9603	TRANSMITTER-WATER TEMPERATURE	6685-66-095-8448	1	1	1	1	1	1	1	1

CHA: JE POINT ARN INTRODUCTION


GROUP QMA/1

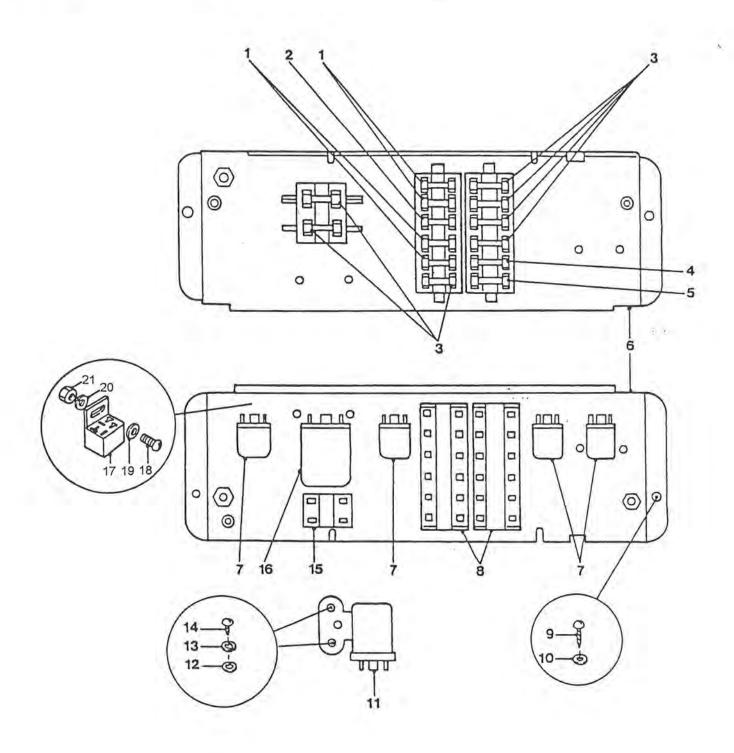

FUSES AND RELAYS (EARLY TYPE)

1	QMA /1/1	FUSES AND RELAYS (EAF	RLY TYPE)			المتعالمة				
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186			2210	<u>2211_2212_2219</u>	CP
ì	RTC4785	FUSE-20 AMP	5920-66-128-4252	4	4	4	4	4	4	
2	RTC4505	FUSE-25 AMP	5920-66-128-4892	1	1	1	1	1	1	
3	RTC4502	FUSE-15 AMP	5920-99-803-4269	7	7	7	7	7	7	
4	RTC4482	FUSE-5 AMP	5920-99-804-8556	1	1	1	1	1	1	
5	RTC4500	FUSE-10 AMP	5920-66-017-7508	1	1	1	1	1	1	
6	AYG9996	PANEL-MOUNTING -FUSEBOX & RELAY		1	1	1	1	1	1	
7	YWB10032	RELAY	5945-99-739-6093	4	4	4	4	4	4	
8	STC197	BLOCK-FUSES		2	2	2	2	2	2	
9	SE106121L	SCREW-RELAY MOUNTING PANEL TO DASH	5305-99-122-5289	2	2	2	2	2	2	
10	WF600041	WASHER-LOCK	5310-66-016-5982	2	2	2	2	2	2	
11	5825530581	RELAY-IGNITION WARNING LAMP	5945-66-128-4890	2	2	2				
11	5825530581	RELAY-SHUTDOWN SOLENOID	5945-66-128-4890	2	2	2				
12	WA106001L	WASHER-PLAIN-RELAY TO DASH		4	4	4				
13	WL106001L	WASHER-LOCK	5310-99-137-9232	4	4	4				
14	SE106121L	SCREW	5305-99-122-5289	4	4	4				
15 (PRC3737	FUSE BOX-BLACKOUT LIGHTING CIRCUIT		1.	1	1	1	1	1	
16	PRC8876	FLASHER UNIT	5945-99-833-6818	1	1				1:	
16	BYG9181	FLASHER UNIT-HEAVY DUTY	5945-66-128-6116			1	1	1		
	BYG9180	CONNECTOR PLUG -FLASHER UNIT				1	1	1		
17	HYL9428	BLOCK-RELAY		7	7	7	7	7	7	
18	SE105121L	SCREW-RELAY BLOCK TO PANEL	5305-99-135-0429	7	7	7	7	7	7	

GROUP QMA/1

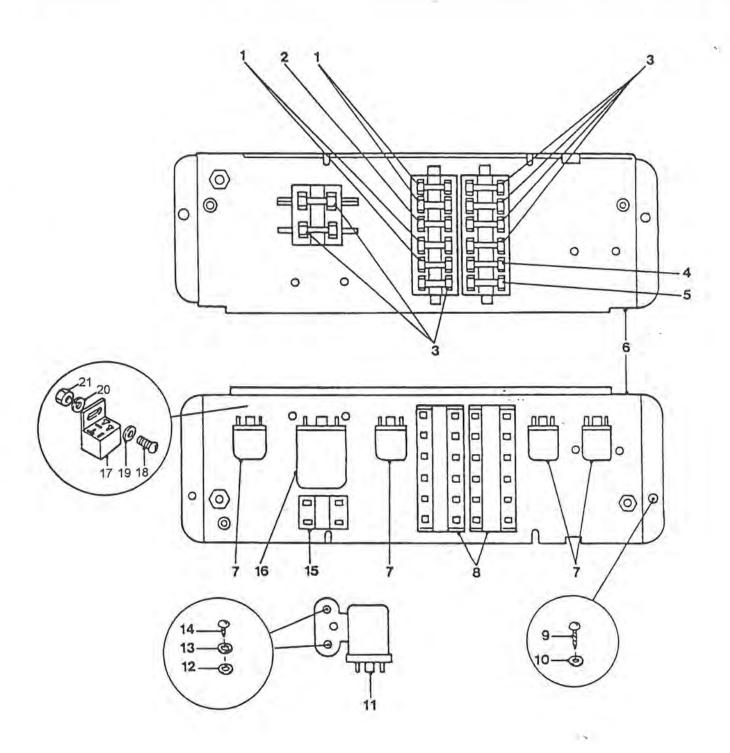


FUSES AND RELAYS (EARLY TYPE)

1	QMA /1/1	FUSES AND RELAYS (EARLY TYPE)			DERIVATIVE CODE						
ITEM	PART NO.	DESCRIPTION	NSN *	2185	2186		2.0 3000 0		1 2212 2219 CP		
19	WA105001L	WASHER-PLAIN	5310-99-122-3032	7	7	7	7	7	7		
20	WL105001L	WASHER-LOCK	5310-99-977-1102	7	7	7	7	7	7		
21	NH105041L	NUT	5310-66-098-4400	7	7	7	7	7	7		
	RTC4502	FUSE-8 AMP-BLACKOUT LIGHTING CIRCUIT	5920-99-803-4269	2	2	2	2	2	2		

CHANGE POINT

ARN INTRODUCTION


GROUP QMA/2

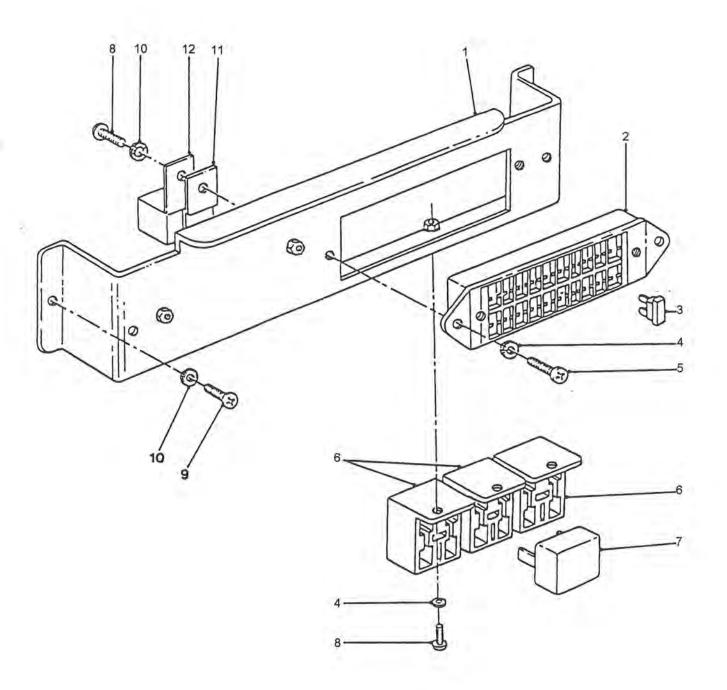

FUSES AND RELAYS (LATE TYPE)

- 2	QMA /2/1	FUSES AND RELAYS (LAT	E TYPE)			DEDI						
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186	2208	2209			2212	221	9_CP
1	PRC8072	PANEL-MOUNTING -FUSEBOX & RELAY		1	1	1	1	1	1	İ	1	01
2	NSS											
3	RTC4481	FUSE-3 AMP	5920-99-766-9038	4	4	4	4	4	4	4	4	02
	RTC4497	FUSE-5AMP	5920-99-767-2990	4	4	4	4	4	4	4	4	02
	RTC4498	FUSE-7.5AMP	5920-99-759-5251	5	5	5	5	5	5	5	5	02
	RTC4501	FUSE-10AMP	5920-99-759-5252	1	1	1	1	1	1	1	1	02
	RTC4503	FUSE-15AMP	5920-99-759-5253	3	3	3	3	3	3	3	3	02
	RTC4504	FUSE-20AMP	5920-99-759-5254	3	3	3	3	3	3	3	3	02
4	WE105001	WASHER-FUSEBOX TO MOUNTING PANEL		5	5	5	5	5	5	5	5	
5	SE105161L	SCREW	5305-99-135-0430	2	2	2	2	2	2	2	2	
6	HYL9428	BLOCK-RELAY		4	4	4	4	4	4	4	4	
7	YWB10032	RELAY	5945-99-739-6093	4	4	4	4	4	4	4	4	02
8	SE105121L	SCREW-RELAYS TO MOUNTING PANEL	5305-99-135-0429	4	4	4	4	4	4	4	4	
9	SE106121L	SCREW-MOUNTING PANEL TO DASH	5305-99-122-5289	2	2	2	2	2	2	2	2	
10	WF600041	WASHER-LOCK	5310-66-016-5982	3	3	3	3	3	3	3	3	
11	PRC8876	FLASHER UNIT	5945-99-833-6818	1.	1				1	1	1	02
11	BYG9181	FLASHER UNIT-HEAVY DUTY	5945-66-128-6116			ì	1	i.				

GROUP QMA/2

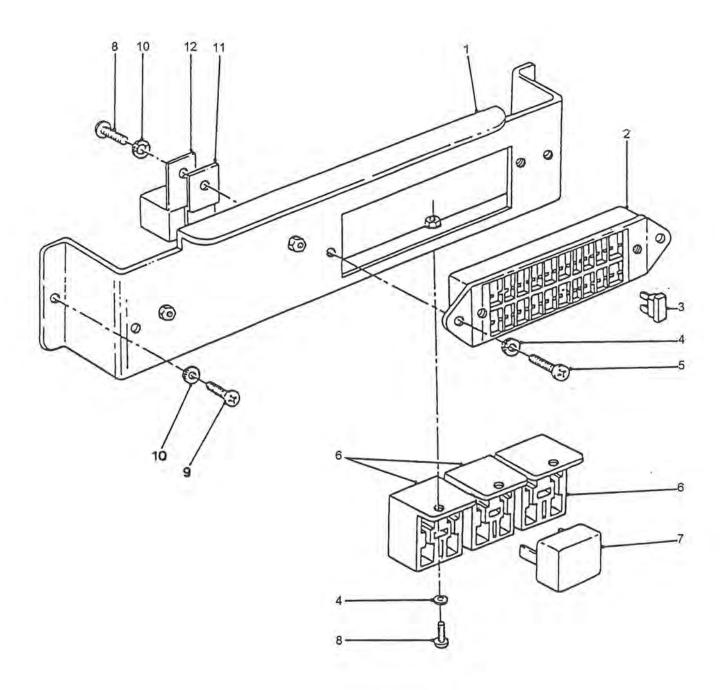

FUSES AND RELAYS (LATE TYPE)

-(QMA /2/1	FUSES AND RELAYS (LAT	E TYPE)			DEDI	VATIV	E COI	NE.			
ITEM	PART NO.	DESCRIPTION	NSN	2185	2186					2212	2219	<u>CP</u>
	BYG9180	CONNECTOR PLUG -FLASHER UNIT				1	1	t				
12	PRC6864	RELAY-WIPER DELAY	5945-66-128-6039	1	1	1	1	1	1	1	1	02
	DRC1245	BRACKET-WIPER DELAY RELAY TO FUSE BOX MOUNTING PANEL		ī	1	1	Î	1	1	1	1	
	5825530581	RELAY-SHUTDOWN SOLENOID	5945-66-128-4890	1	1	1	1	1	1	1	1	
Ü	5825530581	RELAY-IGNITION WARNING LAMP	5945-66-128-4890	1	i	j	1	i	1	1	Ť.	
	SE106121L	SCREW-RELAY TO DASH	5305-99-122-5289	4	4	4	4	4	4	4	4	
	WA106001L	WASHER-PLAIN		4	4	4	4	4	4	4	4	
	WL106001L	WASHER-LOCK	5310-99-137-9232	4	4	4	4	4	4	4	4	
	HAM4301L	SPARE FUSE HOLDER		1	1	1	1	1	1	1	1	
	PRC4412	EXTRACTOR-FUSE		1	1	4	1	1	1	1	1	

CHANGE POINT

ARN INTRODUCTION


1

50-842 MAINTENANCE ELECTRONIC VEHICLE

2 ELECTRICAL COMPONENTS ON L.R.P.V. ONLY, REQUIRE PROTECTION FROM WATER INGRESS AND CORROSION WHEN OPERATING IN SALT WATER WADING CONDITIONS. RELAYS, FLASHER UNIT, AND WIPER DELAY UNIT TO BE DIPPED IN DOW CORNING CONFIDENCE COMPONENTS TO BE SPRAYED WITH ZEP IRONCLAD

SOLUTION BEFORE ASSEMBLY TO CONNECTORS.


GROUP QN/1 SHEET 1

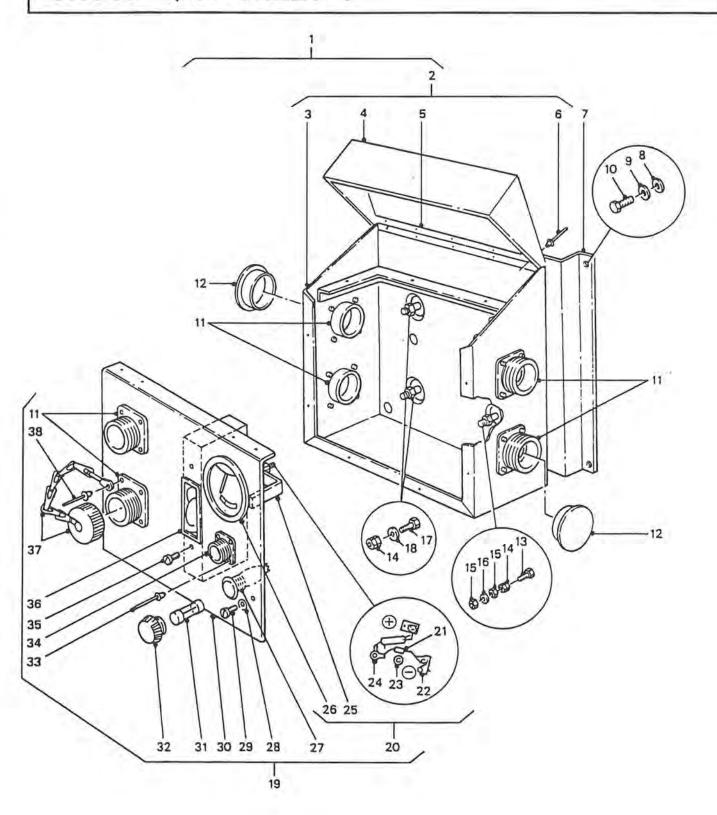

DISTRIBUTION BOX - FFR VEHICLES - AMBULANCE AND AIR DEFENCE

QN /1/1 DISTRIBUTION BOX - FFR - AMBULANCE AND AIR DEFENCE DERIVATIVE CODE 2185 2186 2208 2209 2210 2211 2212 2219 CP ITEM PART NO. DESCRIPTION NSN AYG9964 DISTRIBUTION BOX 6110-66-099-7245 1 1 1 2 NSS NSS 3 NSS 4 NSS 5 NSS HYG3476 PLATE-MOUNTING 1 1 8 WC106041L WASHER-PLAIN 5310-99-122-3411 4 4 WL106001L WASHER-LOCK 5310-99-137-9232 9 4 SCREW 10 SH106301L 5305-99-122-5363 4 11 HYL8800 CONNECTOR 5935-01-260-9660 6 6 NSS 12 NSS 13 14 NN105021L NUTSERT 5310-99-629-3331 4 4 15 NH105041L NUT 5310-66-098-4400 2 2 WL105001L WASHER-LOCK 5310-99-977-1102 1 1 16 17 SH105201L SCREW 5305-66-128-4906 3 3 WA105001L WASHER-PLAIN 18 5310-99-122-3032 3 3 NSS 19 VOLTMETER-BATTERY 6625-66-128-5329 20 **HYL8808** 1 1: INDICATOR NSS 21 22 NSS 23 NSS HYL8807 CAPACITOR 5910-00-113-5499 1 24 1 NSS 25 26 NSS HYL8805 **FUSE HOLDER** 27 5920-99-012-0231 1 1 28 NSS


GROUP QN/1 SHEET 1

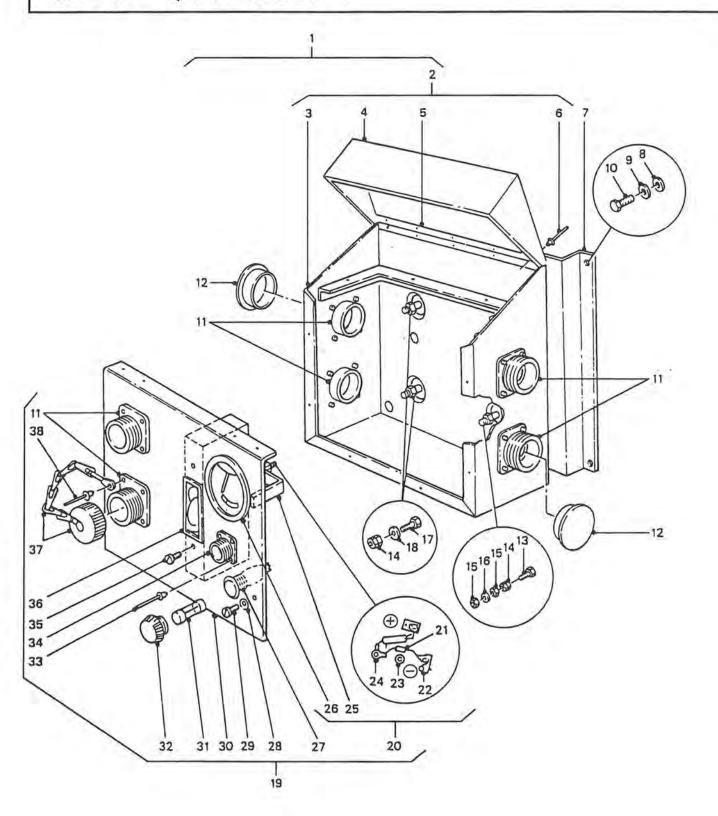

DISTRIBUTION BOX - FFR VEHICLES - AMBULANCE AND AIR DEFENCE

(QN /1/1	DISTRIBUTION BOX - FFR - AMBULANCE AND AIR DEFENCE DERIVATIVE CODE						
ITEM	PART NO.	DESCRIPTION	NSN		09 2210 2211 2212 2219 CP			
29	NSS		100					
30	NSS							
31	HYL8802	FUSE LINK	5920-66-017-7513	1	4			
32	NSS							
33	NSS							
34	HYL8801	CONNECTOR	5935-00-502-7776	4	19			
35	NSS							
36	HYL8806	CIRCUIT BREAKER-100AMP	5925-66-109-3019	1	1			
37	HYL8803	DUST CAP-COVER-CONNECTOR		6	6			
(-LARGE						
38	RU608123L	POP RIVET	5320-66-128-4634	24	24			
CHAN	GE POINT	ARN INTRODUCTION	<u>u</u> _		- y -			

GROUP QN/1 SHEET 2

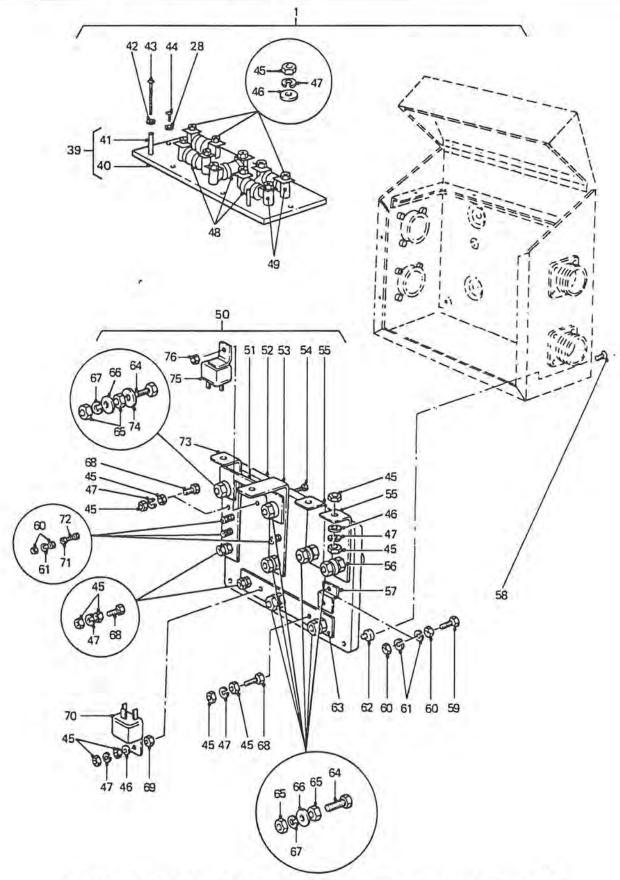


DISTRIBUTION BOX - FFR VEHICLES
- AMBULANCE AND AIR DEFENCE - CONTINUED

7	QN /1/2	DISTRIBUTION BOX -	FFR VEHICLES - AMBU	LANCE & AIR DEPL	DEFENCE - CONTINUED VATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208	2209 2210 2211 2212 2219 CP
39	NSS				
40	NSS				
41	NSS				
42	HYL8799	RING-SEALING	5330-99-821-2510	2	2
43	HYL8797	SCREW	5305-66-109-3335	2	2
44	NSS				
45	NSS				
46	NSS				
47	NSS				C.
48	HYL8798	FUSE LINK	5920-66-120-5459	5	5
49	NSS				
50	NSS				1.41
51	NSS				
52	NSS				
53	NSS				
54	NSS				
54	NSS				
55	NSS				
56	NSS				
57	NSS				
58	'ss				
59	NSS				
60	NSS				
61	NSS				
62	NSS				
63	NSS				
64	NSS				
65	NSS				

66 NSS

GROUP QN/1 SHEET 2

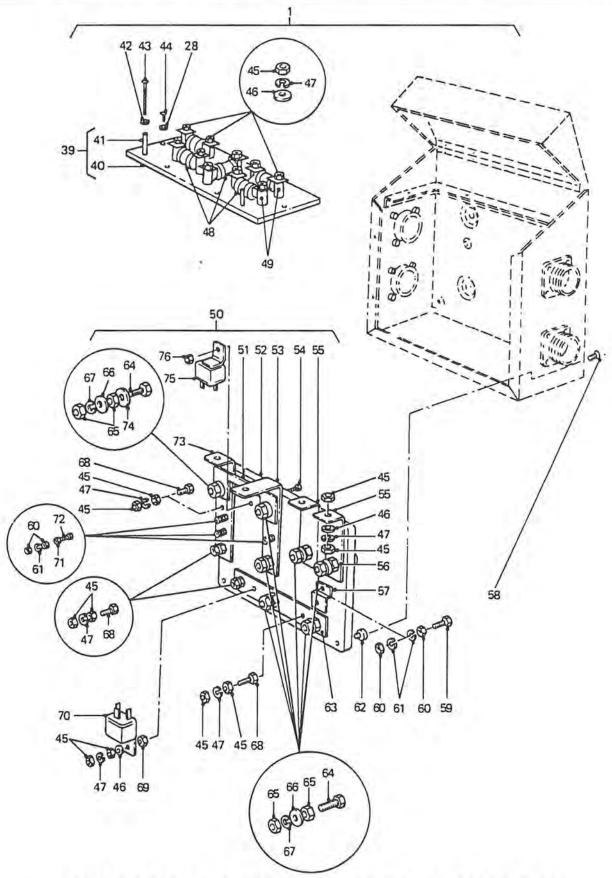


DISTRIBUTION BOX - FFR VEHICLES
- AMBULANCE AND AIR DEFENCE - CONTINUED

-6	QN /1/2	DISTRIBUTION BOX - FFR	VEHICLES - AMBU	JLANCE & AIR DEFENC	E - CONTINUED
ITEM	PART NO.	DESCRIPTION	<u>NSN</u>	DERIVATIVE C 2185 2186 2208 2209 22	
67	NSS				
68	NSS				
69	NSS				
70	HYL8810	RELAY-240V, 20AMP	5945-12-164-0194	Pt	1
71	NSS				
72	NSS				
73	NSS				
74	NSS				
75	HYL8809	RELAY		_ 14	1
76	ISS				
	HYL8640	GLOBE-12V, 2W-BATTERY INDICATOR	6240-66-011-5042	1	1
	HYL8804	DUST CAP-COVER-CONNECTOR -SMALL		11	1

CHANGE POINT

ARN INTRODUCTION


GROUP QNA/1

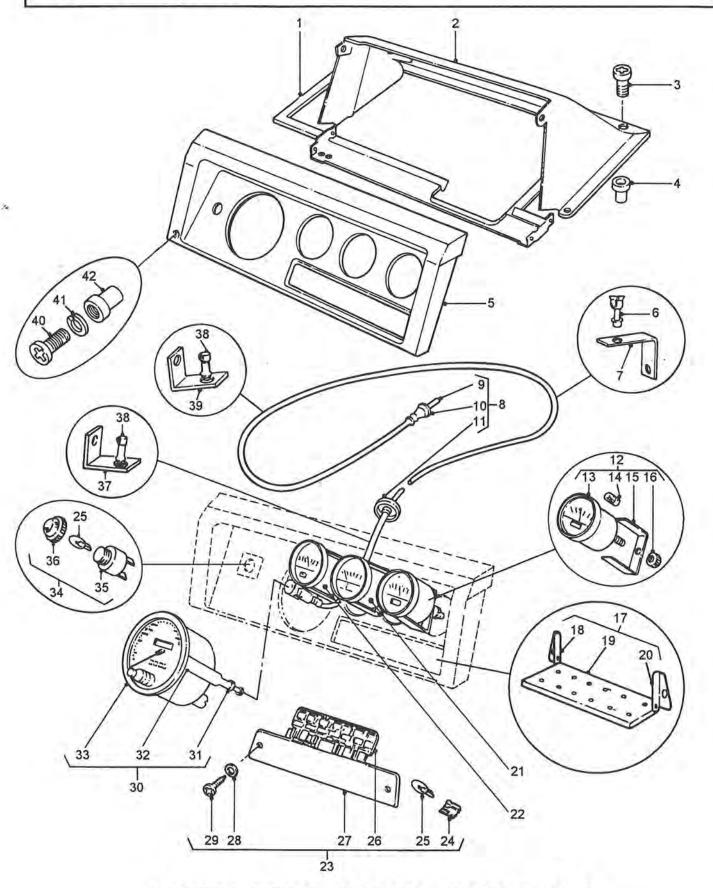

INSTRUMENT PANEL, GAUGES &
SPEEDOMETER CABLE - CARGO VEHICLES

INSTRUMENT PANEL, GAUGES & SPEEDOMETER CABLE - CARGO VEHICLES QNA /1/1 DERIVATIVE CODE DESCRIPTION 2185 2186 2208 2209 2210 2211 2212 2219 CP ITEM PART NO. NSN HYG3530 GASKET-BINNACLE 1 HYG4451 BINNACLE-INSTRUMENTS 2540-66-128-6299 2 1 1 1 SF105204 SCREW 7 7 7 3 MP105500 RIVNUT 5310-66-128-5438 7 7 4 PANEL-INSTRUMENTS HYG4456 1 5 HYG4458 PANEL-INSTRUMENTS 1 1 -WITH WINCH LAMP R79121 CLIP 2910-99-825-6380 6 1 1 7 AYG2709 **BRACKET-SPEEDO CABLE** 1 8 RC6023 CABLE ASSY 6680-66-128-4291 1 1 -SPEEDOMETER 9 NSS 10 NSS NSS 11 12 AYG9754 **GAUGE-VOLTMETER** 6620-66-128-4359 1 1 13 NSS 14 **HYL8640** GLOBE-12V. 6240-66-011-5042 3 3 3 2W-INSTRUMENTS MYH3265 SLEEVE-INSTRUMENT 6220-66-128-5007 3 3 3 LIGHTS 15 ISS 16 NSS 17 HYG4503 KIT-BLACKOUT COVER 2540-66-128-6020 1 1 18 NSS 19 NSS 20 NSS 21 **GAUGE-WATER** AYG9753 6625-66-128-4360 7 1 **TEMPERATURE** 22 AYG9756 GAUGE-FUEL 6680-66-109-1748 1 1 23 PRC6657 MODULE-WARNING LAMP 2540-66-128-5006 1 1

GROUP QNA/1

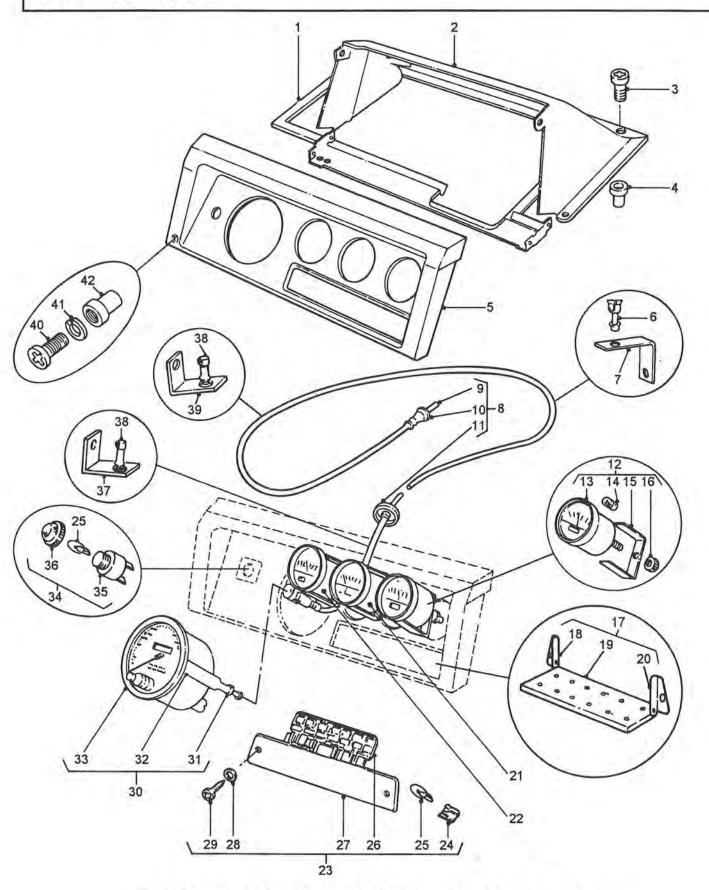


INSTRUMENT PANEL, GAUGES & SPEEDOMETER CABLE - CARGO VEHICLES

1	QNA /1/1	INSTRUMENT PANEL, GA	STRUMENT PANEL, GAUGES & SPEEDOMETER CABLE - CARGO VEHICLES				
ITE	PART NO.	DESCRIPTION	NSN	2185	2186	DERIVATIVE CODE 2208 2209 2210 2211 2212 2219 CP	
24	AEU2722	HOLDER-GLOBE		18	18	18	
25	RTC3635	GLOBE	6240-99-995-4499	17	17	17	
	MYH3316	GLOBE-LOW FUEL WARNING LIGHT	6240-66-128-5005	ì	1	4	
	RTC3635	GLOBE-6WD SYMBOL WARNING LIGHT	6240-99-995-4499	t	1	10	
26	AEU2721	PRINTED CIRCUIT BOARD	5999-99-797-3850	t	1	Y .	
27	NSS						
28	NSS						
29	NSS						
30	PRC7374	GAUGE-SPEEDOMETER	6680-66-128-5018	1	7	i i	
- 4	BFS501	GLOBE-12V, 5W -SPEEDOMETER	6240-99-995-2312	2	2	2	
31	NSS						
32	NSS						
33	NSS						
34	MYH3375	LAMP-WARNING-WINCH & PTO	6220-66-128-5816		1	ì	
35	NSS						
36	NSS	~					
37	PRC2979	BRACKET-SPEEDO CABLE TO GEARBOX		1	1	х -	
38	PRC3180	CLIP	5340-66-128-4611	3	3	3	
39	PRC2980	BRACKET-SPEEDO CABLE		1	1	ì	
40	SE104164	SCREW	5305-66-128-5817	5	5	5	
41	WL104004	WASHER-LOCK	5310-66-128-5818	5	5	5	
42	MP104400	RIVNUT	5310-66-128-5819	7	7	7	

ARN INTRODUCTION


CHANGE POINT

GROUP QNA/2

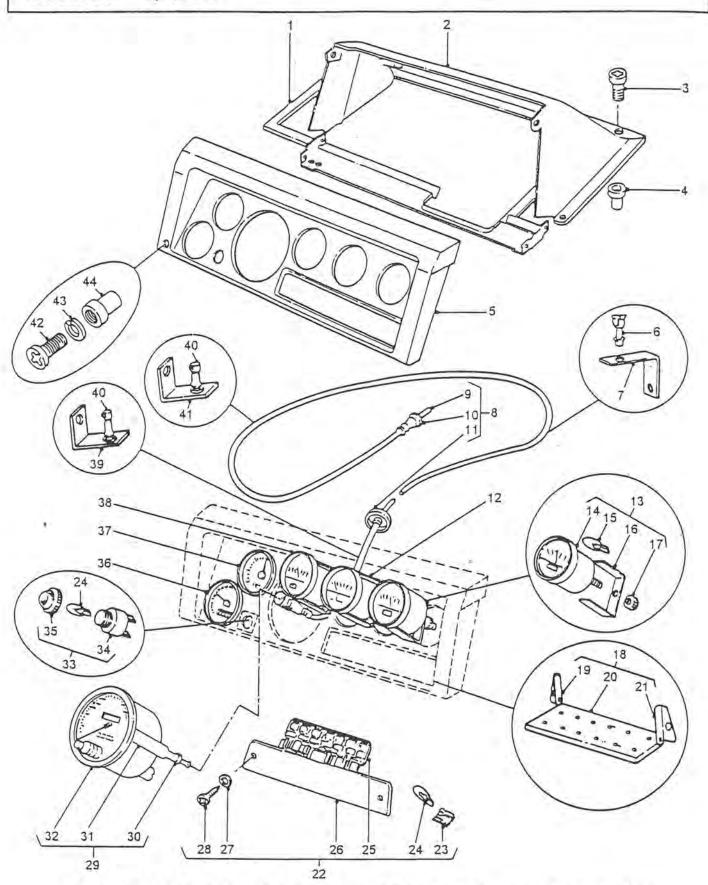


INSTRUMENT PANEL, GAUGES & SPEEDO CABLE - AMBULANCE & AIR DEFENCE

INSTRUMENT PANEL, GAUGES & SPEEDO CABLE - AMBULANCE & AIR DEFENCE DERIVATIVE CODE QNA /2/1 PART NO. 2185 2186 DESCRIPTION 2208 2209 2210 2211 2212 2219 CP ITEM NSN HYG3530 GASKET-BINNACLE 1 1 1 1 2 HYG4451 **BINNACLE-INSTRUMENTS** 2540-66-128-6299 1 7 7 3 SF105204 SCREW 7 4 MP105500 RIVNUT 5310-66-128-5438 7 HYG4462 PANEL-INSTRUMENTS 1 1 5 CLIP 2910-99-825-6380 6 R79121 1 1 7 AYG2709 BRACKET-SPEEDO CABLE 1 1 6680-66-128-4291 CABLE ASSY 1 8 PRC6023 1 -SPEEDOMETER 9 'ISS 10 NSS NSS 11 1 GAUGE-TEMPERATURE 6625-66-128-4360 1 12 AYG9753 1 13 AYG9754 GAUGE-VOLTMETER 6620-66-128-4359 1 15 **HYL8640** GLOBE-12V, 6240-66-011-5042 5 5 2W-INSTRUMENTS MYH3265 SLEEVE-INSTRUMENT 6220-66-128-5007 5 5 LIGHTS 16 NSS 17 NSS 1 18 HYG4503 KIT-BLACKOUT COVER 2540-66-128-6020 1 19 SS 20 NSS NSS 21 PRC6657 MODULE-WARNING LAMP 2540-66-128-5006 1 22 1 HOLDER-GLOBE 23 AEU2722 18 18 24 RTC3635 GLOBE 6240-99-995-4499 17 17 GLOBE-LOW FUEL 6240-66-128-5005 MYH3316 1 1 WARNING LIGHT GLOBE-HANDBRAKE 6240-99-995-4499 RTC3635 1 WARNING LIGHT

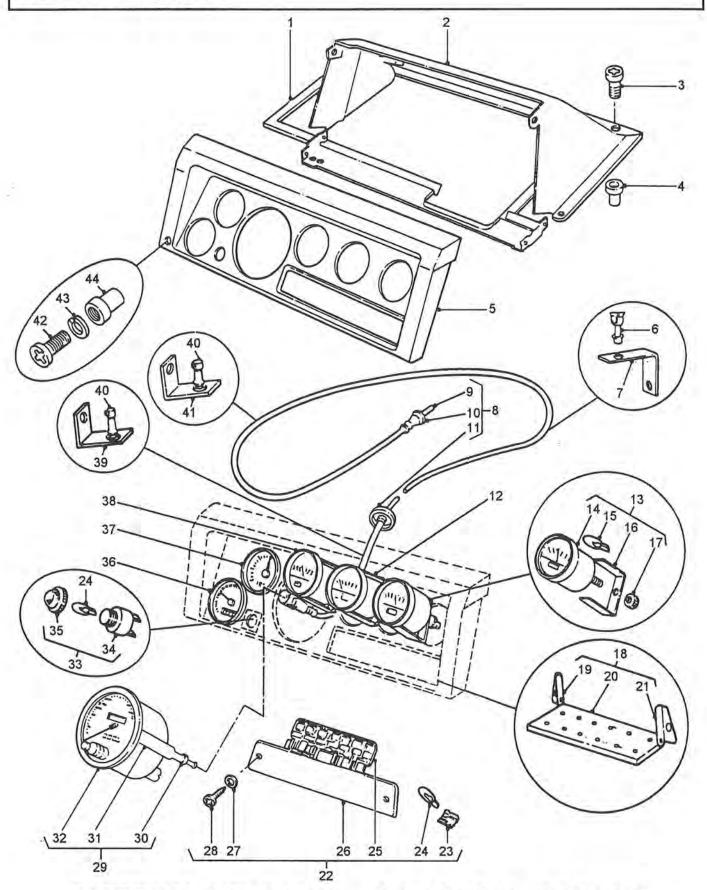

INSTRUMENT PANEL, GAUGES & SPEEDO CABLE - AMBULANCE & AIR DEFENCE

	QNA /2/1	INSTRUMENT PANEL, GA	UGES & SPEEDO	CABLE - AMBUI	ANCE & AIR DEFENCE
ITEM	PART NO.	DESCRIPTION	NSN		2209 2210 2211 2212 2219 CP
	RTC3635	GLOBE-6WD SYMBOL WARNING LIGHT	6240-99-995-4499	1	1
25	AEU2721	PRINTED CIRCUIT BOARD	5999-99-797-3850	1	1
26	NSS				
27	NSS				
28	NSS				
29	PRC7374	GAUGE-SPEEDOMETER	6680-66-128-5018	1	1
	BFS501	GLOBE-12V, 5W -SPEEDOMETER	6240-99-995-2312	2	2
30	NSS				×
31	NSS				
32	NSS				
33	MYH3375	LAMP-WARNING-WINCH & PTO	6220-66-128-5816	-1	t
34	NSS				
35	NSS				
36	AYG9755	HOURMETER	6645-66-098-2760	1	1
37	AYG9757	AMMETER-150-0-150 AMPS	6625-66-135-0419	1	1
38	AYG9756	GAUGE-FUEL	6680-66-109-1748	1	ð
39	PRC2979	BRACKET-SPEEDO CABLE TO GEARBOX		1	1
40	³RC3180	CLIP	5340-66-128-4611	3	3
41	PRC2980	BRACKET-SPEEDO CABLE		1	ì
42	SE104164	SCREW	5305-66-128-5817	5	5
43	WL104004	WASHER-LOCK	5310-66-128-5818	5	5
44	MM104301	RIVNUT		7	7
CHAN	GE POINT	ARN INTRODUCTION	<u>v</u>		

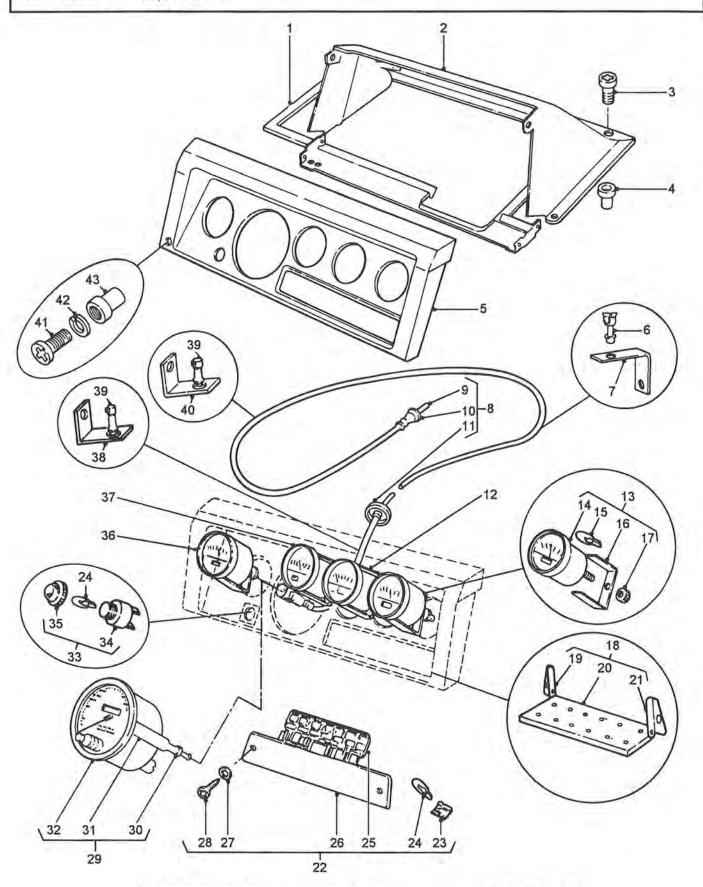

INSTRUMENT PANEL, GAUGES & SPEEDOMETER CABLE - GMV & ERV

INSTRUMENT PANEL, GAUGES & SPEEDOMETER CABLE - GMV & ERV QNA /3/1 DERIVATIVE CODE ITEM PART NO. 2185 2186 2208 2209 2210 2211 2212 2219 CP DESCRIPTION NSN 1 HYG3530 GASKET-BINNACLE 2 HYG3396 BINNACLE-INSTRUMENTS 2540-66-128-5814 3 SF105204 SCREW 1 1 4 MP105500 RIVNUT 5310-66-128-5438 7 5 HYG4464 PANEL-INSTRUMENTS 1 -GMV PANEL-INSTRUMENTS 5 HYG4466 1 -ERV R79121 CLIP 6 2910-99-825-6380 1 BRACKET-SPEEDO CABLE 7 1YG2709 1 8 PRC6023 CABLE ASSY 6680-66-128-4291 1 -SPEEDOMETER 9 NSS 10 NSS NSS 11 12 AYG9753 GAUGE-TEMPERATURE 6620-66-128-4360 1 1 13 AYG9754 GAUGE-VOLTMETER 6620-66-128-4359 14 NSS 15 **HYL8640** GLOBE-12V. 6240-66-011-5042 2W-INSTRUMENTS **MYYH3265** SLEEVE-INSTRUMENT 6220-66-128-5007 4 LIGHTS NSS 16 17 NSS 18 HYG4503 KIT-BLACKOUT COVER 2540-66-128-6020 1 1 19 NSS 20 NSS 21 NSS 22 PRC6657 MODULE-WARNING LAMP 2540-66-128-5006 1 1


23

AEU2722

HOLDER-GLOBE


18

18

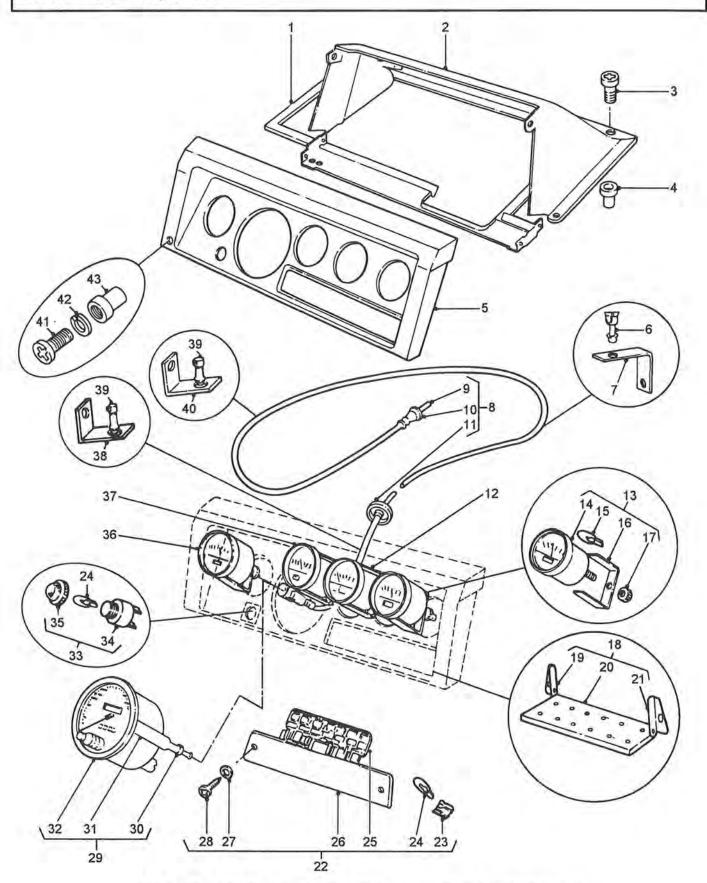

INSTRUMENT PANEL, GAUGES & SPEEDOMETER CABLE - GMV & ERV

INSTRUMENT PANEL, GAUGES & SPEEDOMETER CABLE - GMV & ERV DERIVATIVE CODE QNA /3/1 2185 2186 2208 2209 2210 2211 2212 2219 CP ITEM PART NO. DESCRIPTION NSN 6240-99-995-4499 24 RTC3635 GLOBE 17 17 MYH3316 **GLOBE-LOW FUEL** 6240-66-128-5005 1 1 WARNING LIGHT GLOBE-HANDBRAKE RTC3635 6240-99-995-4499 1 WARNING LIGHT GLOBE-6WD SYMBOL RTC3635 6240-99-995-4499 1 1 WARNING LIGHT **GLOBE-24 VOLT** HYL9473 1 1 ALTERNATOR WARNING LIGHT 25 EU2721 PRINTED CIRCUIT BOARD 5999-99-797-3850 1 1 26 NSS 27 NSS 28 NSS 29 PRC7374 GAUGE-SPEEDOMETER 6680-66-128-5018 1 1 BFS501 GLOBE-12V, 5W 6240-99-995-2312 2 2 -SPEEDOMETER 30 NSS 31 NSS 32 NSS 6220-66-128-5816 33 MYH3375 LAMP-WARNING-WINCH & 1 PTO NSS 34 35 NSS **GAUGE-VOLTMETER** 36 BYG9024 1 1 AYG9756 37 GAUGE-FUEL 6680-66-109-1748 1 1 38 PRC2979 BRACKET-SPEEDO CABLE 1 1 TO GEARBOX 39 PRC3180 CLIP 5340-66-128-4611 3 3 40 PRC2980 BRACKET-SPEEDO CABLE 1 1 41 SE104164 SCREW 5305-66-128-5817 5 5

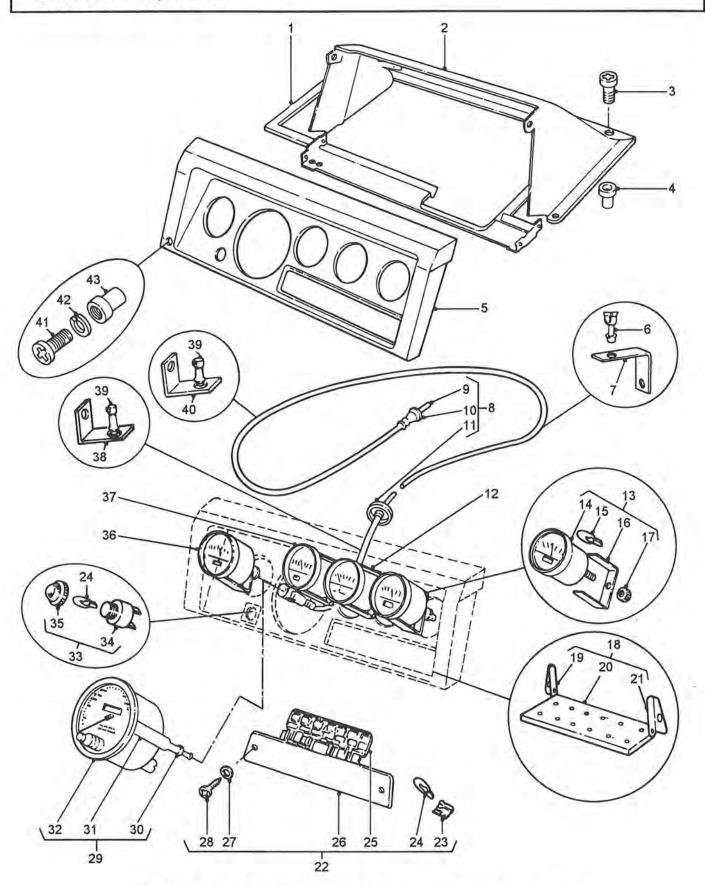

INSTRUMENT PANEL, GAUGES & SPEEDOMETER CABLE - GMV & ERV


QNA /3/1 INSTRUMENT PANEL, GAUGES & SPEEDOMETER CABLE - GMV & ERV DERIVATIVE CODE

2185 2186 2208 2209 2210 2211 2212 2219 CP DESCRIPTION NSN ITEM PART NO.

42 WL104004 WASHER-LOCK 5310-66-128-5818 5 5

43 MM104301 RIVNUT 7 7

CHANGE POINT ARN INTRODUCTION

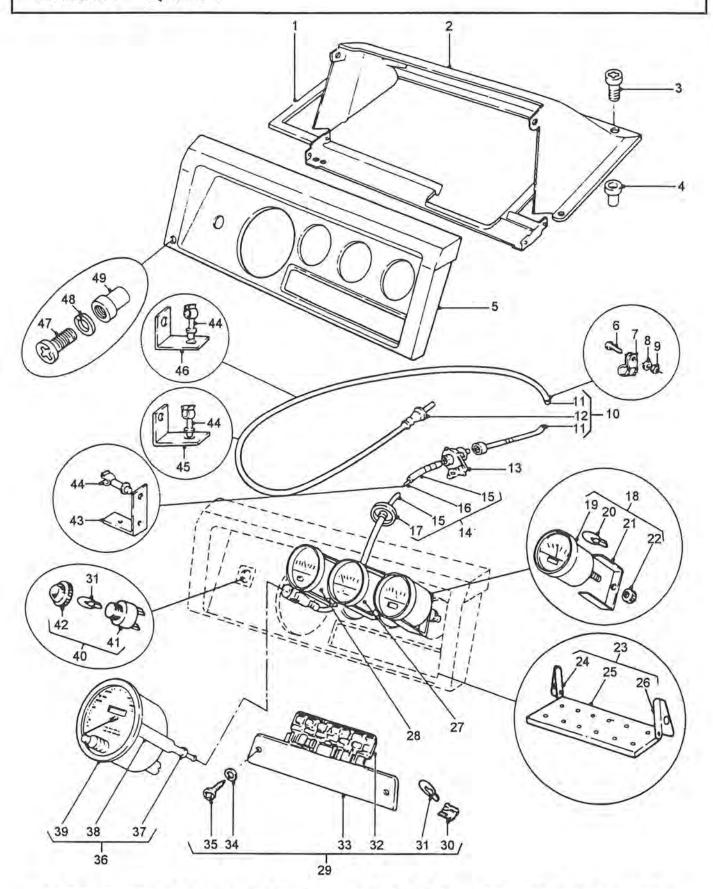


INSTRUMENT PANEL, GAUGES, SPEEDOMETER CABLE & SENSOR – LRPV

QNA /4/1 INSTRUMENT PANEL, GAUGES, SPEEDOMETER CABLE & SENSOR - LRPV DERIVATIVE CODE ITEM PART NO. DESCRIPTION NSN 2185 2186 2208 2209 2210 2211 2212 2219 CP HYG3650 GASKET-BINNACLE 1 HYG4451 BINNACLE-INSTRUMENTS 1 2 3 SF105204 SCREW 7 RIVNUT 5310-66-128-5438 7 MP105500 4 5 HYG4458 PANEL-INSTRUMENTS 1 6 FS106161 SCREW 5305-99-122-5360 1 CP106081 'P' CLIP 5340-66-128-6301 7 1 8 WA106041L WASHER-PLAIN 5310-66-098-4440 1 **NUT-NYLOC** 5310-99-138-8423 9 NY106041L 1 CABLE-SPEEDOMETER 10 PRC6043 6680-66-128-6196 1 -LOWER 11 NSS 12 NSS 13 PRC4497 SENSOR-SPEED 6680-66-128-6194 1 CABLE-SPEEDOMETER 6680-66-128-6195 1 14 PRC6037 -UPPER 15 NSS 16 NSS 17 NSS 6620-66-128-4359 AYG9754 GAUGE-VOLTMETER 18 1 19 NSS 20 GLOBE-12V, YL8640 6240-66-011-5042 3 2W-INSTRUMENTS MYH3265 SLEEVE-INSTRUMENT 6220-66-128-5007 3 LIGHTS NSS 21 22 NSS 23 HYG4503 KIT-BLACKOUT COVER 2540-66-128-6020 1 24 NSS


25

NSS

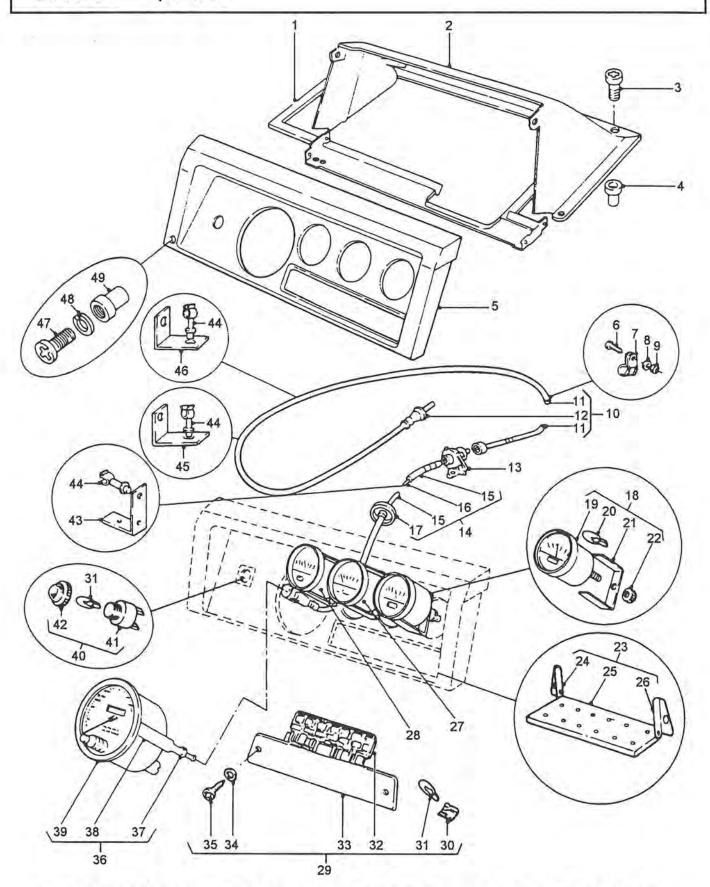


INSTRUMENT PANEL, GAUGES, SPEEDOMETER CABLE & SENSOR – LRPV

INSTRUMENT PANEL, GAUGES, SPEEDOMETER CABLE & SENSOR - LRPV DERIVATIVE CODE QNA /4/1 ITEM PART NO. DESCRIPTION 2185 2186 2208 2209 2210 2211 2212 2219 CP NSN NSS 26 AYG9753 **GAUGE-WATER** 6625-66-128-4360 27 1 **TEMPERATURE** 28 AYG9756 GAUGE-FUEL 6680-66-109-1748 1 MODULE-WARNING LAMP 2540-66-128-5006 29 PRC6657 1 30 AEU2722 HOLDER-GLOBE 18 GLOBE 6240-99-995-4499 31 RTC3635 18 GLOBE-LOW FUEL MYH3316 6240-66-128-5005 1 WARNING LIGHT RTC3635 GLOBE-HANDBRAKE 6240-99-995-4499 WARNING LIGHT GLOBE-6WD SYMBOL 6240-99-995-4499 RTC3635 1 WARNING LIGHT 32 AEU2721 PRINTED CIRCUIT BOARD 5999-99-797-3850 33 NSS NSS 34 35 NSS 36 GAUGE-SPEEDOMETER 6680-66-128-5018 PRC7374 1 GLOBE-12V, 5W BFS501 6240-99-995-2312 2 -SPEEDOMETER 37 NSS 38 VSS 39 NSS LAMP-WARNING-WINCH & 40 MYH3375 6220-66-128-5816 1 PTO NSS 41 42 NSS 43 PRC2980 BRACKET-SPEEDO CABLE 1 44 PRC3180 CLIP 5340-66-128-4611 3 45 BRACKET-SPEEDO CABLE PRC2979 1 TO GEARBOX

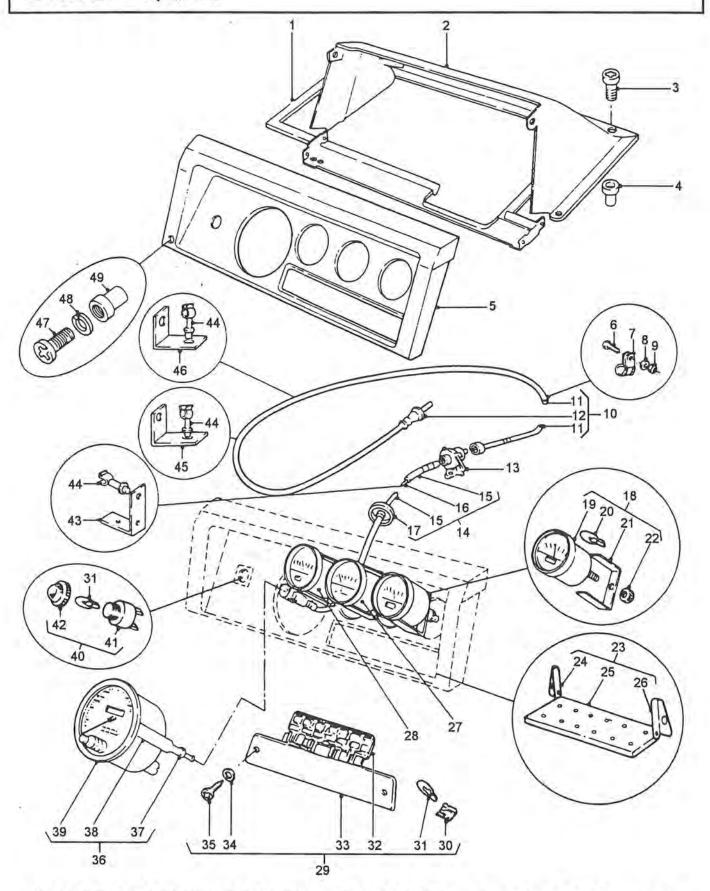

INSTRUMENT PANEL, GAUGES, SPEEDOMETER CABLE & SENSOR – LRPV

1.0	QNA /4/1	INSTRUMENT PANEL, GAU	GES, SPEEDOME	ETER CABLE & SENSOR - LRPV DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	<u>NSN</u>	2185 2186 2208 2209 2210 2211 2212 2219 CP
46	AYG2709	BRACKET-SPEEDO CABLE		1
47	SE104164	SCREW	5305-66-128-5817	5
48	WL104004	WASHER-LOCK	5310-66-128-5818	5
49	MM104301	RIVNUT		5
CHANGE POINT		ARN INTRODUCTION		

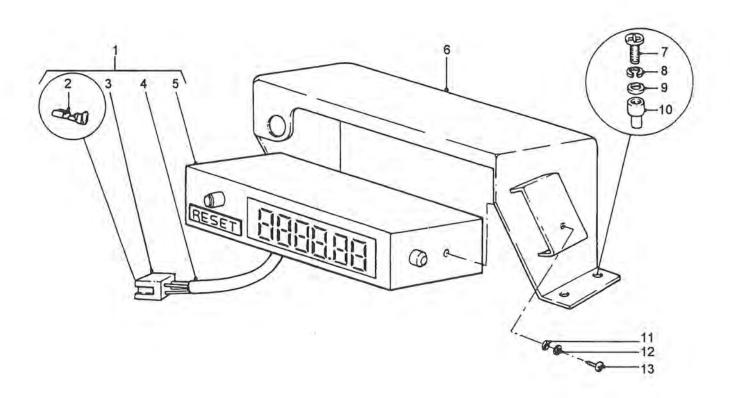


TRIPMETER ASSEMBLY AND MOUNTING - LRPV ONLY

-(QNC /1/1	TRIPMETER ASSEMBLY	AND MOUNTING - L	LRPV ONLY DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
1	BYG9096	TRIPMETER ASSY	6625-66-128-6233	Ī
	MM104301	RIVNUT-TRIPMETER		.3
2	NSS			
3	NSS			
4	NSS			
5	NSS			
6	HYG5662	BRACKET-TRIPMETER		1917
7	SE105204	SCREW	5305-66-128-4955	4
8	WL105004	WASHER-LOCK	5310-66-128-5784	4
ç	WA105001L	WASHER-PLAIN	5310-99-122-3032	4
10	MP105500	RIVNUT	5310-66-128-5438	4
11	WA104004L	WASHER-PLAIN	5310-99-550-3198	3
12	WL104004	WASHER-LOCK	5310-66-128-5818	3.
13	SE104164	SCREW	5305-66-128-5817	3

CHANGE POINT

GROUP QND

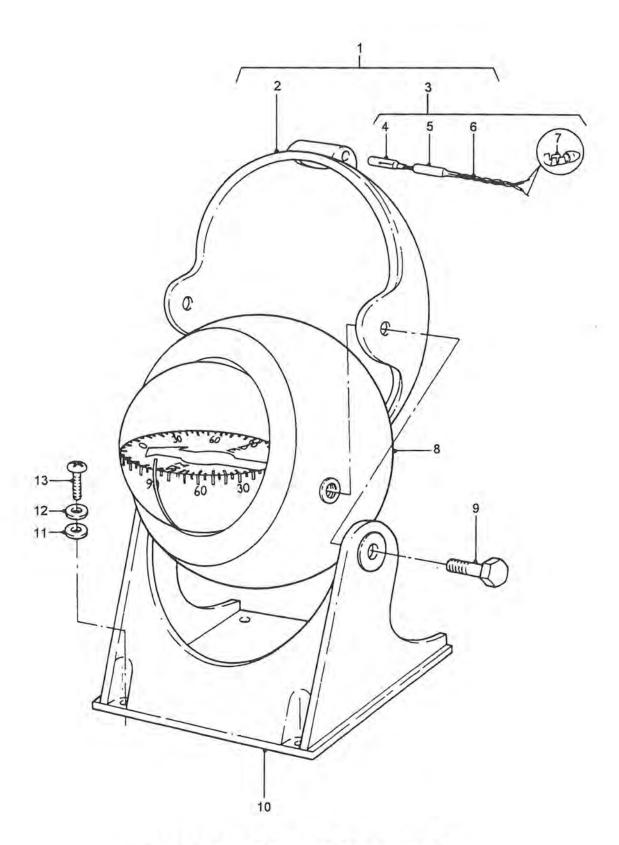

COMPASS ASSEMBLY
- LRPV ONLY

1	QND /1/1	COMPASS ASSEMBLY - LF	RPV ONLY	DERIVATIVE CODE
ITEM	PART NO.	DESCRIPTION	NSN	2185 2186 2208 2209 2210 2211 2212 2219 CP
1	BYG9201	COMPASS ASSY (INCLUDE5 ITEMS 2, 3, 8-10)	6605-66-128-6302	1
2	NSS			
3	BYG9238	BULB ASSY	6695-66-128-6303	- 1
4	NSS			
5	NSS .			
6	NSS			
7	MYH2565	TERMINAL	5940-66-128-4737	2
8	NSS			
100	NSS			
10	NSS			
11	WA104004L	WASHER-PLAIN	5310-99-550-3198	4
12	WL104004	WASHER-LOCK	5310-66-128-5818	4
13	SE104164	SCREW	5305-66-128-5817	4
CHAN	GE POINT	ARN INTRODUCTION	L	